

House Number and Frame Installation Instructions


Number Mounting

- 1) Lightly sand the ledge of the metal frame so that the tiles adhere well.
- 2) Using silicone adhesive (ie. GE Silicone) adhere the reverse side of the tile to the ledge of the frame.
- 3) The whole tile face should be visible, as can be seen in the pictures below.




For this style of frame simply install screws (not included) into the left and right screw holes.

Frame Installation

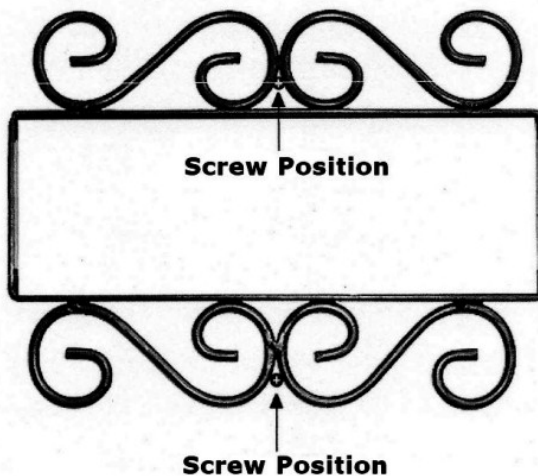

HORIZONTAL LAYOUT

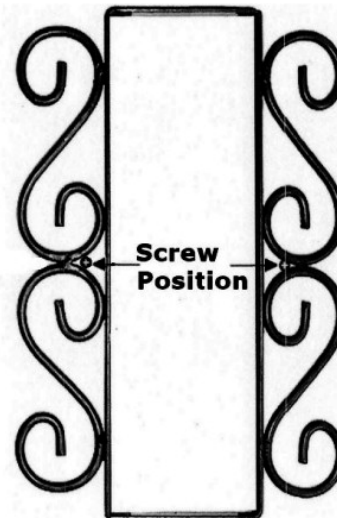

VERTICAL LAYOUT

Stucco Walls:

- 1) Measure the distance between the two screw positions as shown in the diagram.
- 2) Drill two holes in the wall that are aligned along a level horizontal line. The distance between the two holes should equal to the distance between the two screw positions. Affix two anchors (not included) into the holes drilled.
- 3) Affix the screws into the anchors, being careful not to over tighten them, as the anchor may come loose.

Wooden Walls:

- 1) Make two marks at the two screw positions as shown in the diagram.
- 2) Screw in two screws into the marks made, making sure to keep the two screws perpendicular to the wall to make sure the frame sits level.