


Wall Assembly




Corner Apartment Building - Balcony Floor (DC07b)

www.multiversegamingterrain.com


Read the instructions carefully before putting the kit together. The model can be glued with PVA glue. A file and a sharp hobby knife may be needed to remove the bits of the sprue from the parts

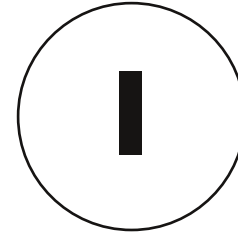


Glue the door frame to the base:

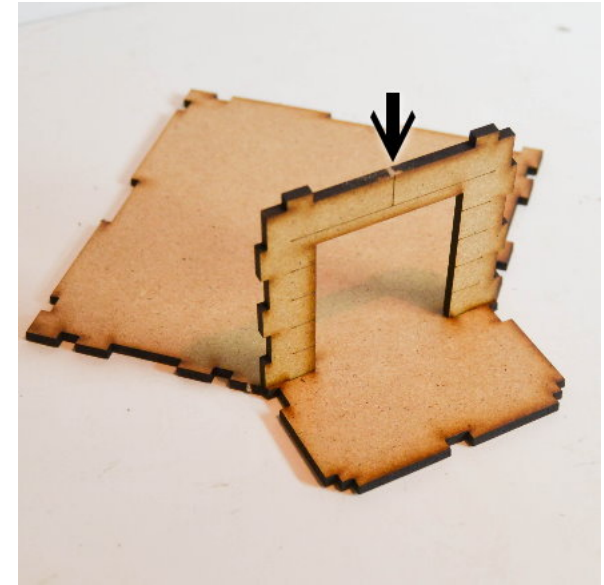

Add the wall on the one side of the door...

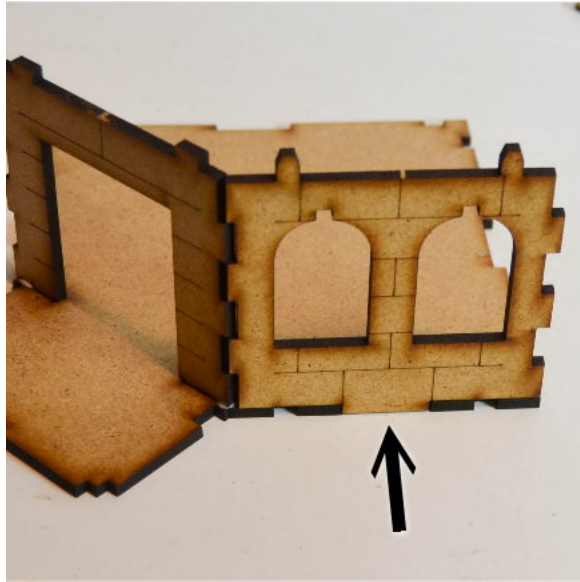


...and on the other side:

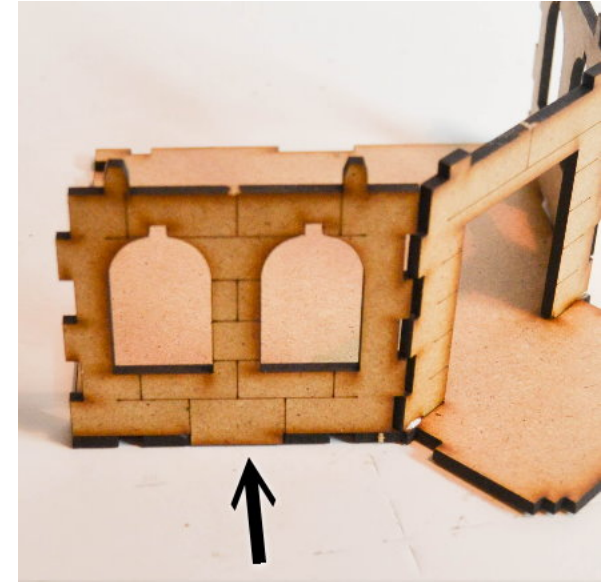

Wall Assembly


4

Add this wall piece to the back:

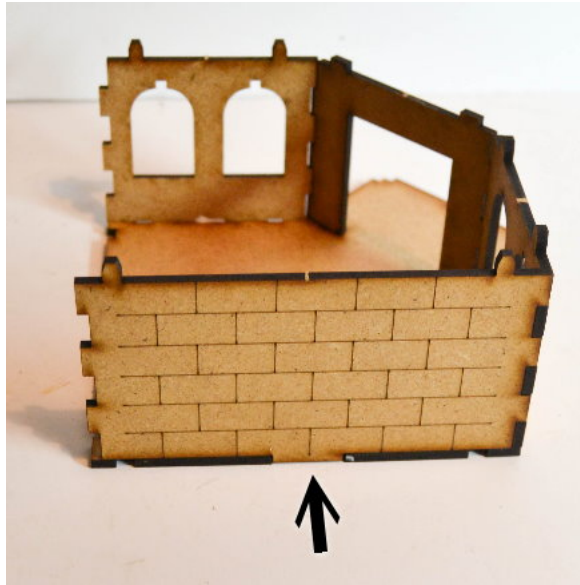


5

And the second one:

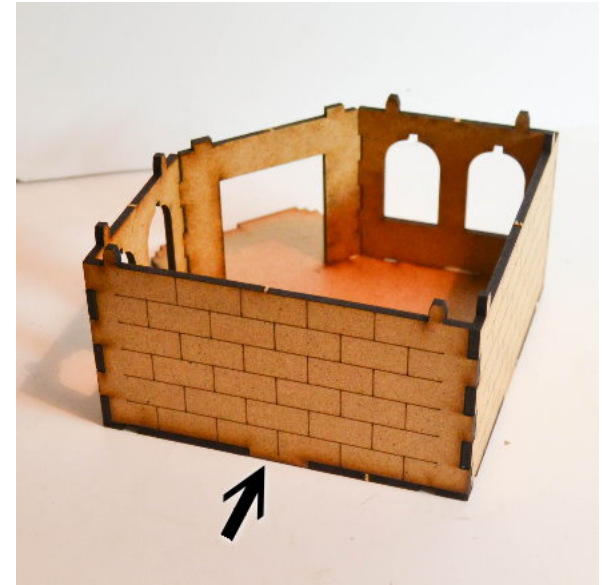


6

Cap the walls with the wall braces:

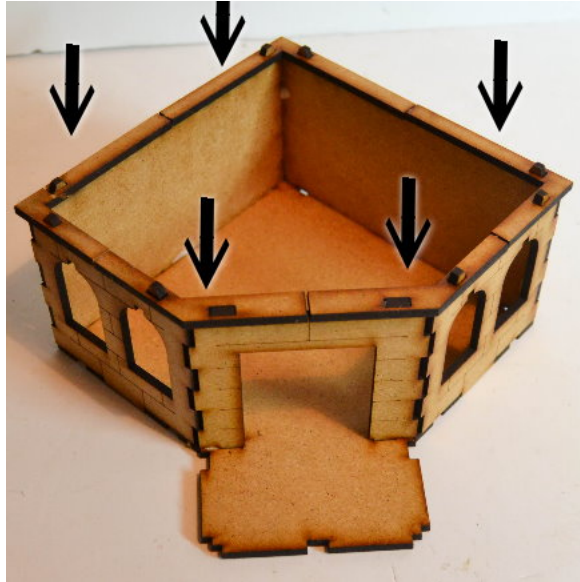

7

Add the cornerstones in the front. Notice that one of the pieces is shorter to accommodate for the balcony floor.

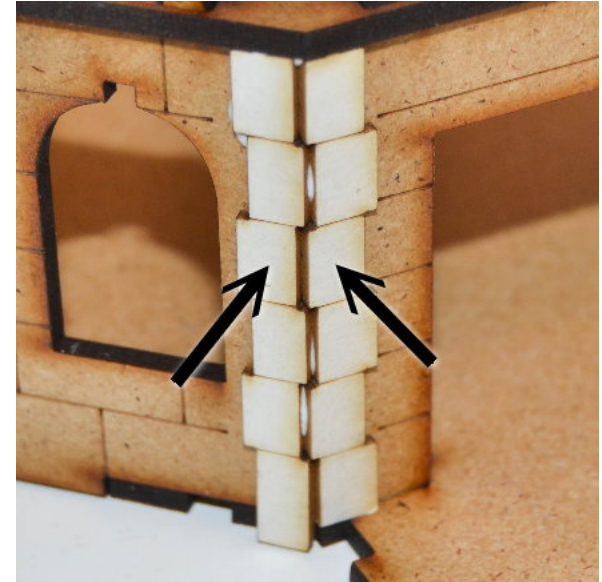

Balcony


1

Prepare the two side railings:




2

Glue them to the balcony floor as shown on the picture:

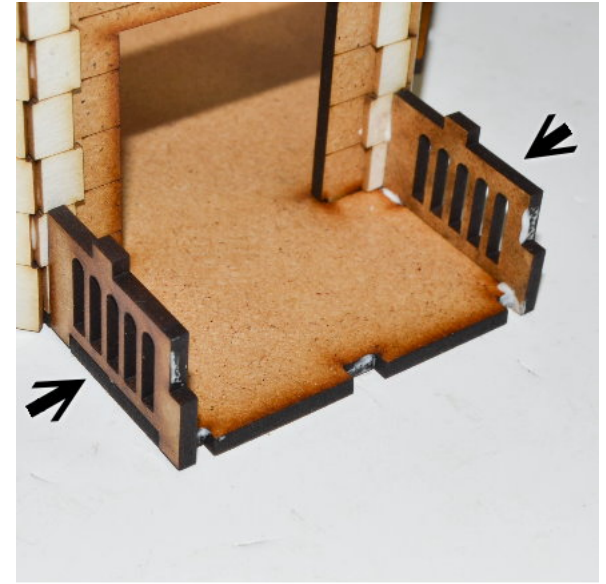


3

Glue the front railing to the piece:

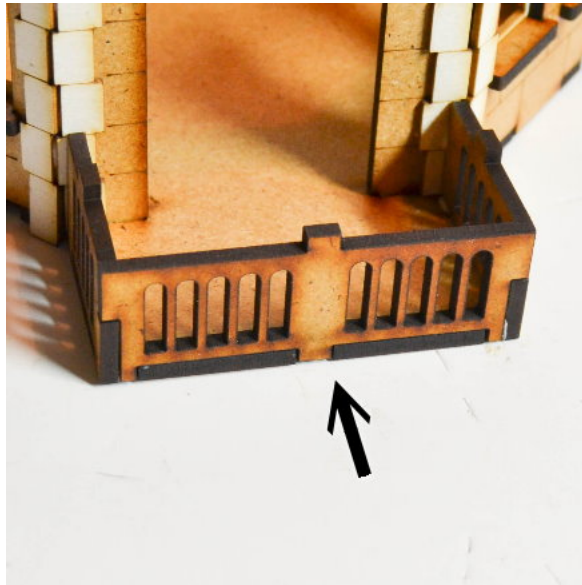

4


Cap the balcony with the top of the railing and start adding the smaller detail pieces (there's one for each of the pillars).

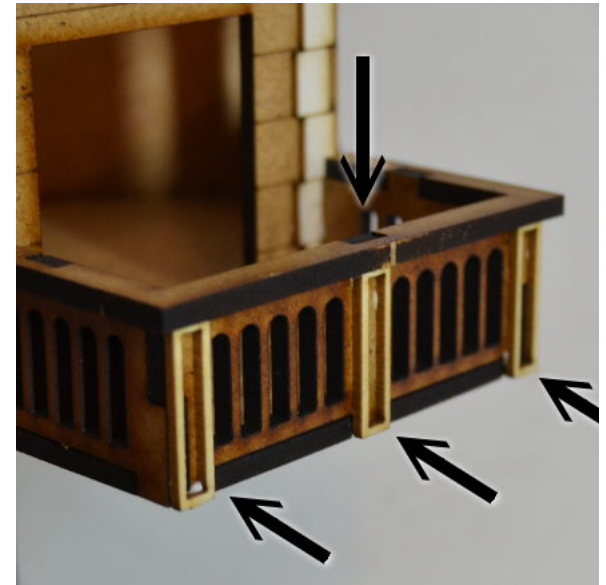

Window Details


1

Fit the window sills into each of the window openings.

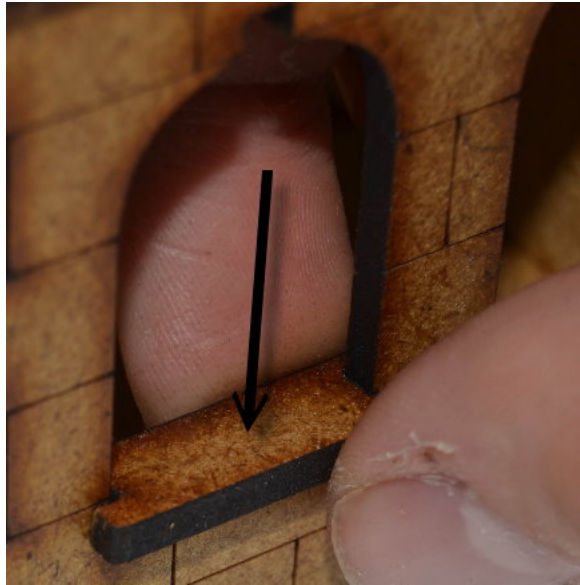

2

Glue the matte board window pieces to the wall interior, using the window sills for support.

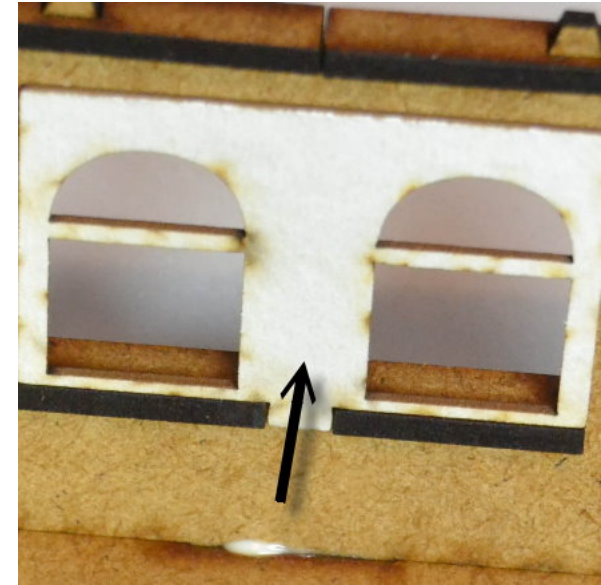

3


Add the small detailing pieces to the hole above the window opening.



Cornerstones

1

There are six separate pairs of 45-degree corner joints (+one shorter one for the roof) on the matte board sheet - glue them onto the front walls.

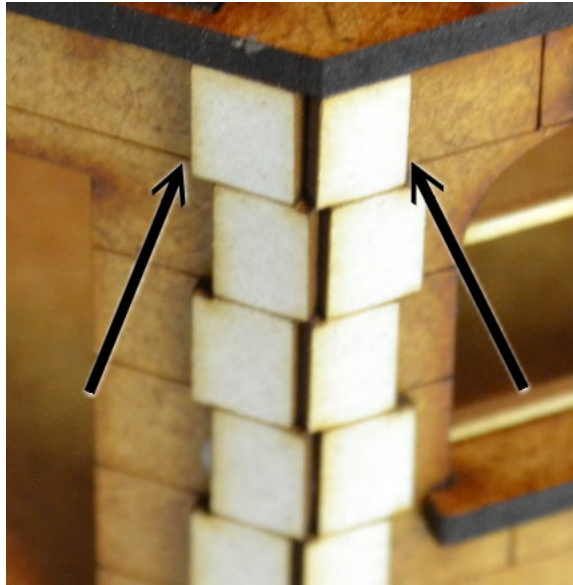

2

Fit the remaining pieces on each of the 90-degree corners.

