


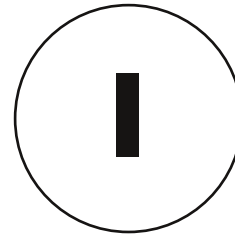

Apartment Building IA (ground floor) (DCBRIA)

www.multiversegamingterrain.com


Read the instructions carefully before putting the kit together. The model can be glued with PVA glue. A file and a sharp hobby knife may be needed to remove the bits of the sprue from the parts




Lay the floor piece flat on the table as shown.



Glue the two side walls to the floor piece.

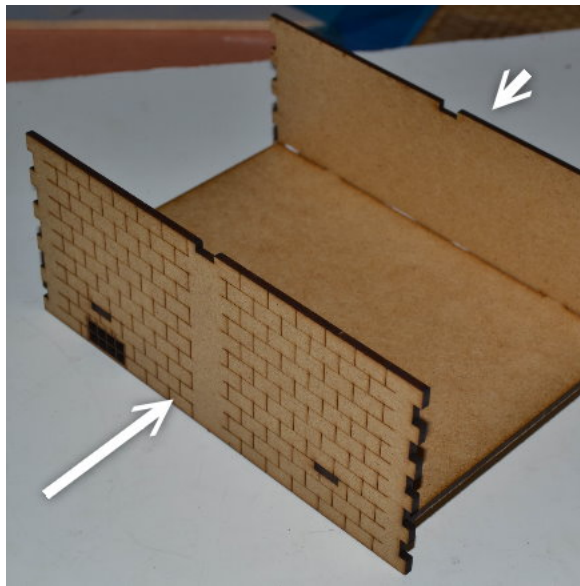


Add the front and rear walls to the assembly.

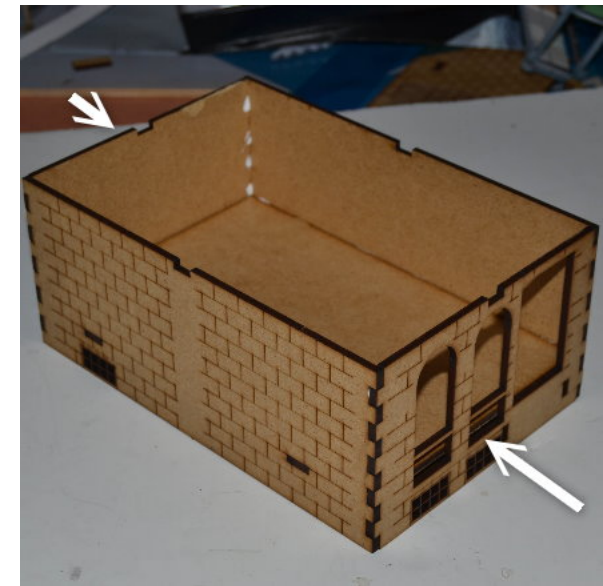


4

Assemble the front stairway as shown:

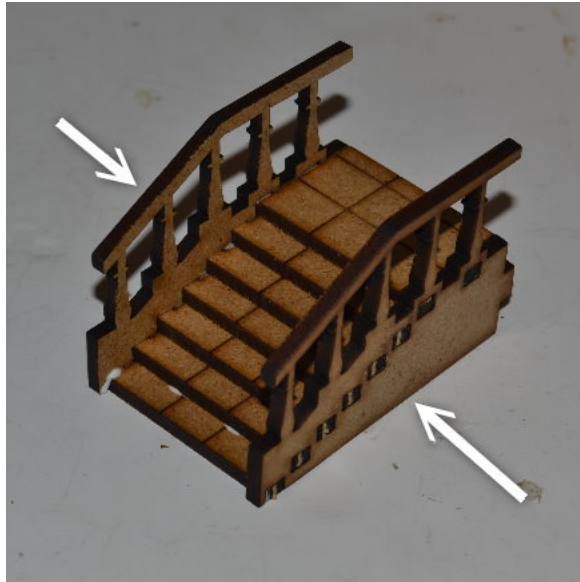


5

Glue the front stairway to the front wall as shown:

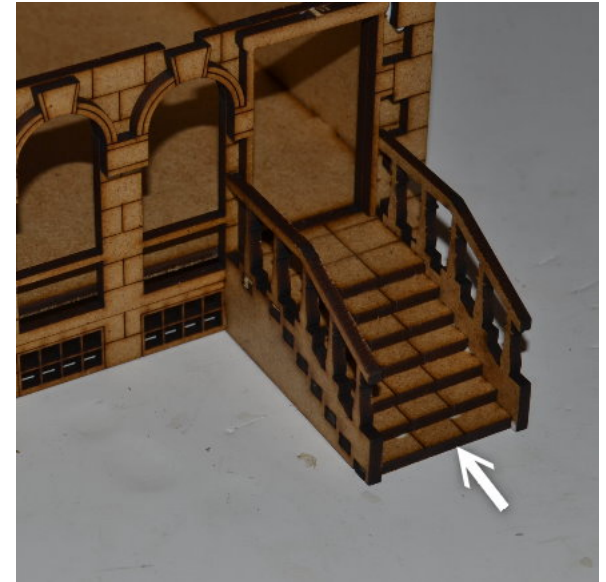


6

Add the HDF detailing in front of the wall and matte board detailing in the back.

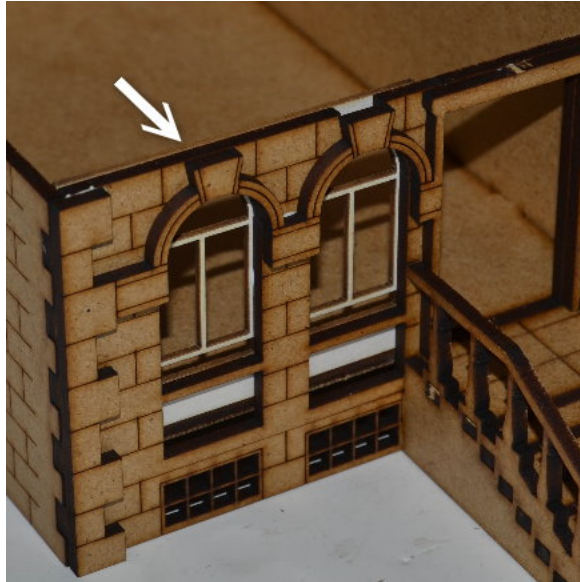


7

Assemble both door pieces as shown:

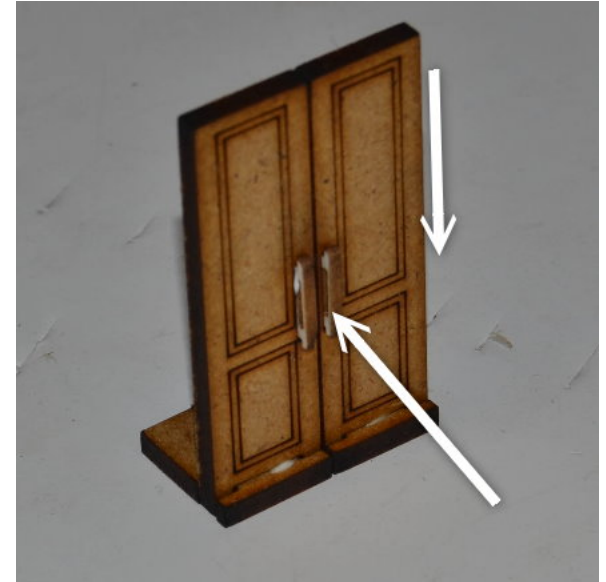


8

Add the wall supports to the side and the back walls as shown (at the edge of each wall and in the middle, in the space without engraving).

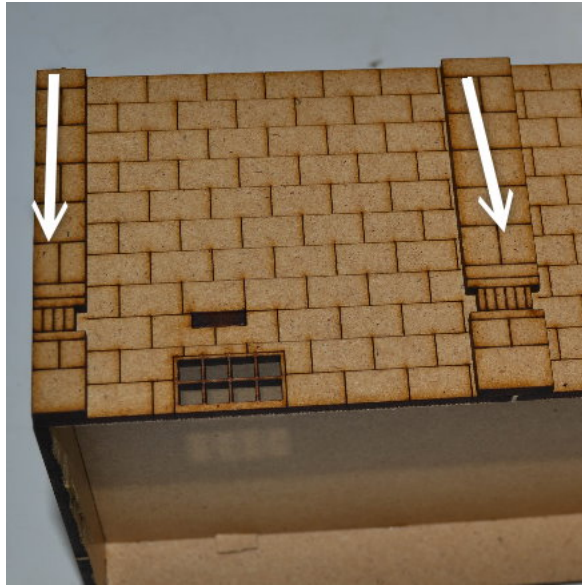

9

Add the brick stripes to the recesses to cover the joints.

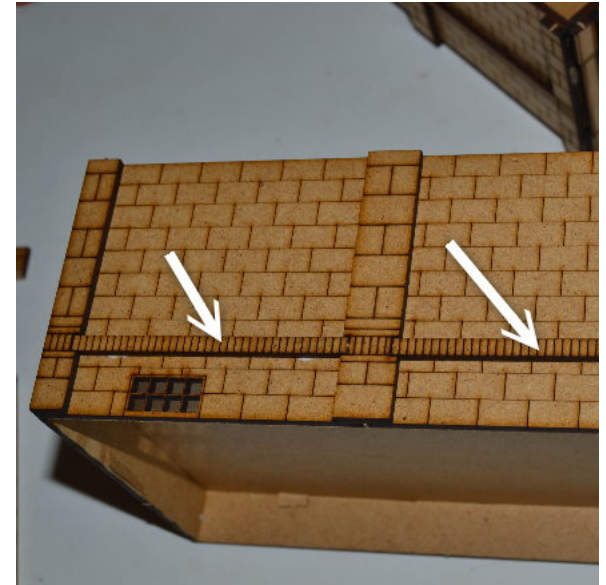

10

Add the window sills and matte board detailing to each window.

