



SIT Containers (Gothic Pattern A) (FPOII)

www.multiverregamingterrain.com

Read the instructions carefully before putting the kit together. The model can be glued with PVA glue. A file and a sharp hobby knife may be needed to remove the bits of the sprue from the parts

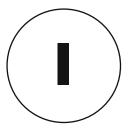


Start by preparing this side wall piece:

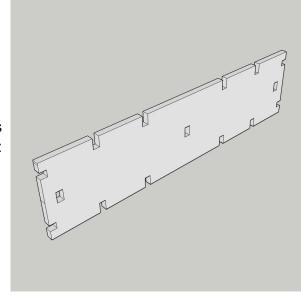




Glue the four side supports to the piece as shown. Make sure the glue has dried before proceeding to the next step.

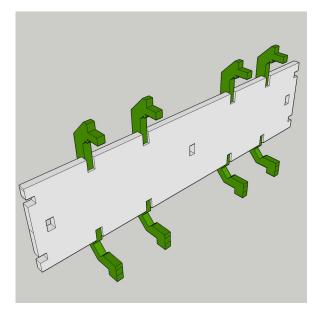




Add the wider angled wall piece to the assembly as shown (engraving on the outside, angled part pointed to the top).

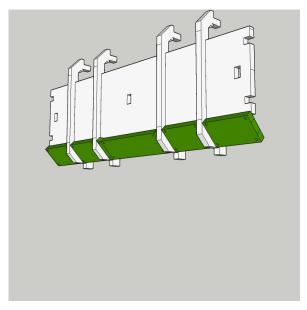

Main Body


3

This is how the bottom angled piece should fit into the connections at the bottom of the side supports.

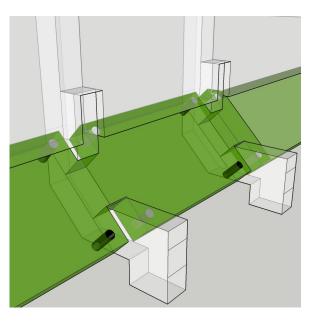


4

Glue the narrow angled piece (the one with the hole) to the assembly as shown.

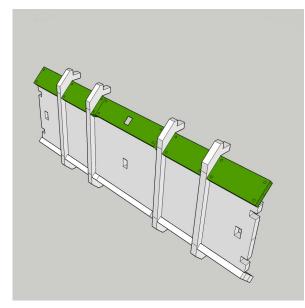


5

The connection on the piece from step 4. should rest on the tiny stud in the side support like this:

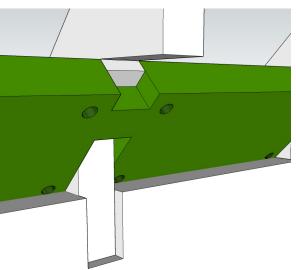

6


Glue this piece at the middle of the side wall.

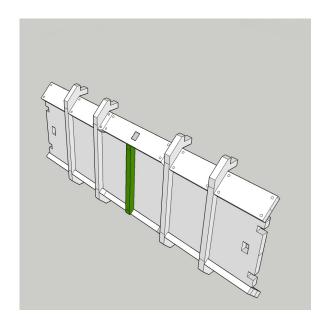


Main Body


7

Glue these two pieces to the side walls as shown, with the engraved lines facing outwards. Repeat steps 1-7 for the second side wall.

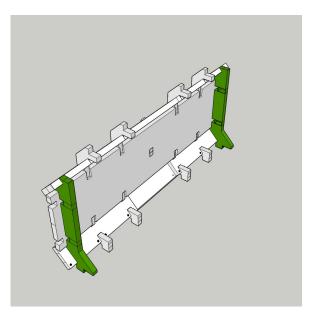

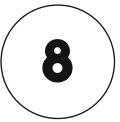


150mm version ONLY! Glue these four 'horseshoe' pieces to the assembly as shown.

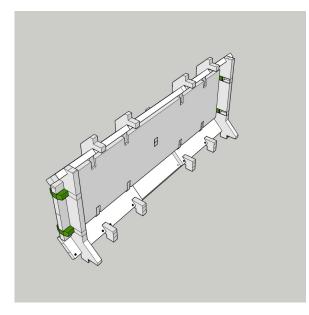




300mm version ONLY! Use these 'H' pieces on one end of the wall.

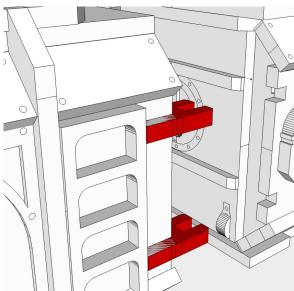




Add the top bar to the assembly as shown.

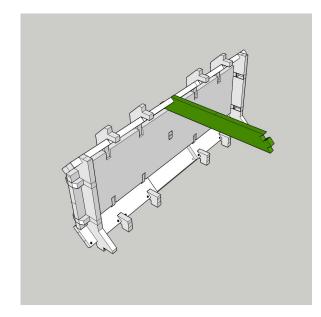


Main Body




Add the second wall to the assembly as shown.

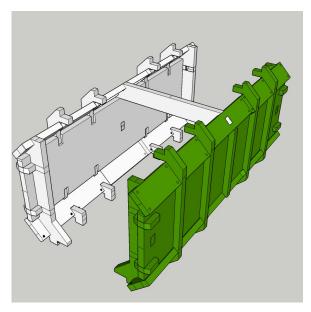


Glue the side walls with the top bar to the floor piece as shown.

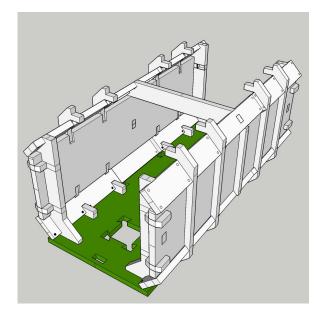

Doors

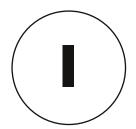


Start the door assembly with this piece.

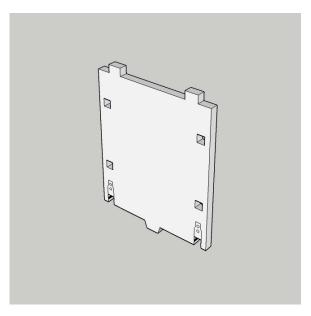



Add these two angled bars to the front of the doors as shown.

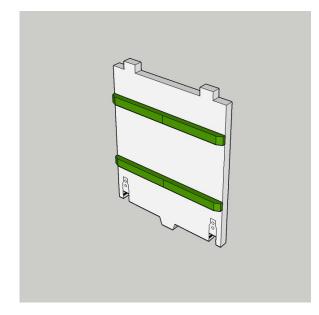




Add this piece at the top of the door.






Add these two small pieces at the bottom of the door as shown.

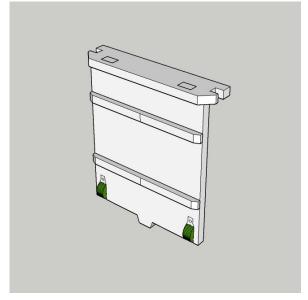


Doors




Glue the two greyboard detailing pieces to the assembly as shown (their outer edges should match the outer edge of the holes for the bars).

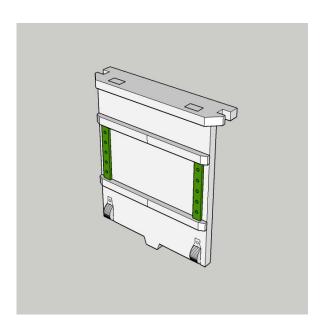

Roof

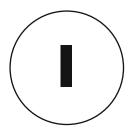


Start the roof assembly with this piece.

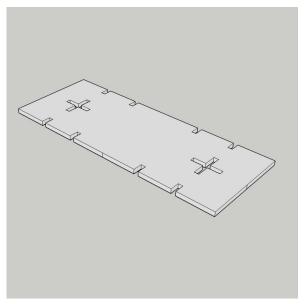


2

Glue these two pieces together as shown. Repeat.

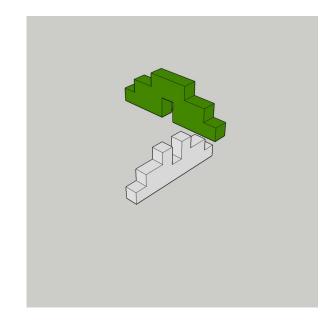


3

Glue them to the main roof piece from the bottom as shown.

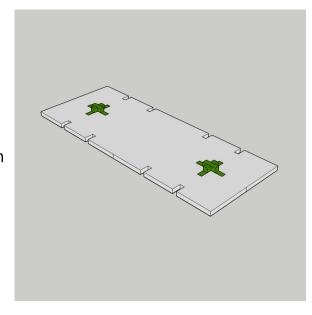



4


Glue these two pieces at the top of the assembly as shown.

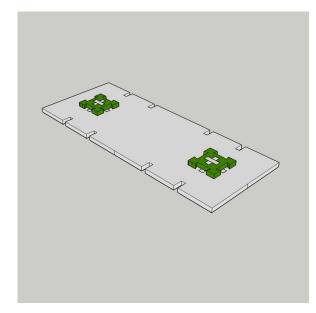


Pillar Connection Caps

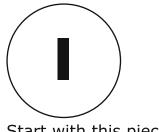

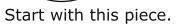

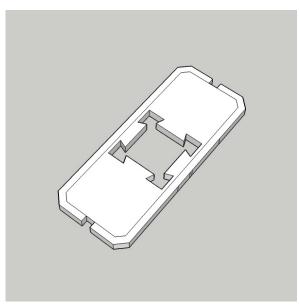


Glue the greyboard piece on top of it as shown.

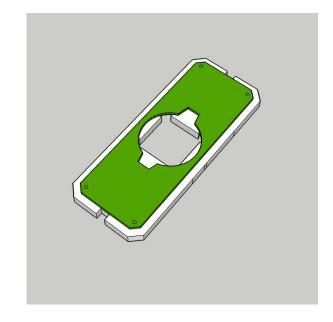





Glue the hatch on top of the assembly as shown.

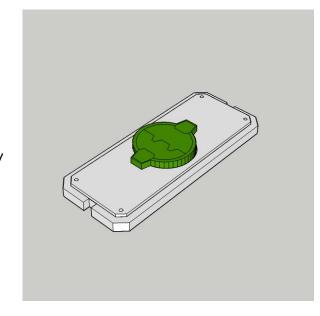

Detailing panels

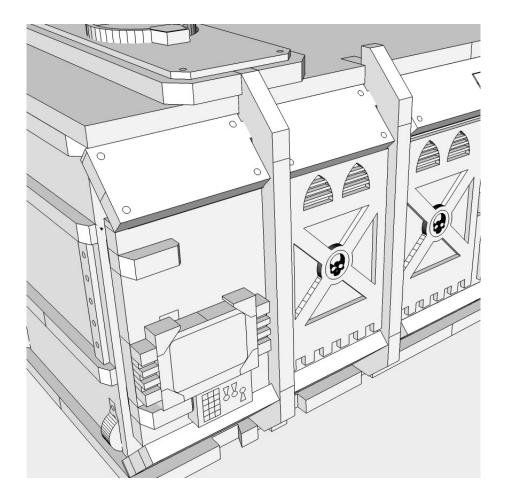

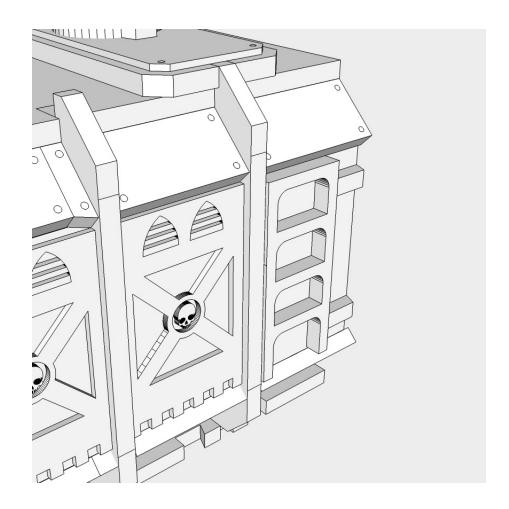

Glue the detailing panels between the side supports - there are four skull panels per side with two consoles and one ladder to be used at the outermost panels of your choice.