




General Store (TBB001)

www.multiversegamingterrain.com


Read the instructions carefully before putting the kit together. The model can be glued with PVA glue. A file and a sharp hobby knife may be needed to remove the bits of the sprue from the parts

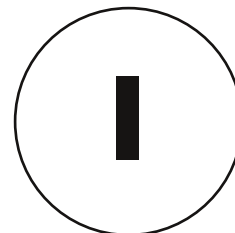

Lay the ground floor piece flat as shown.



Add the front and side walls to the floor. Make sure the side walls are in line with each end of the front wall.

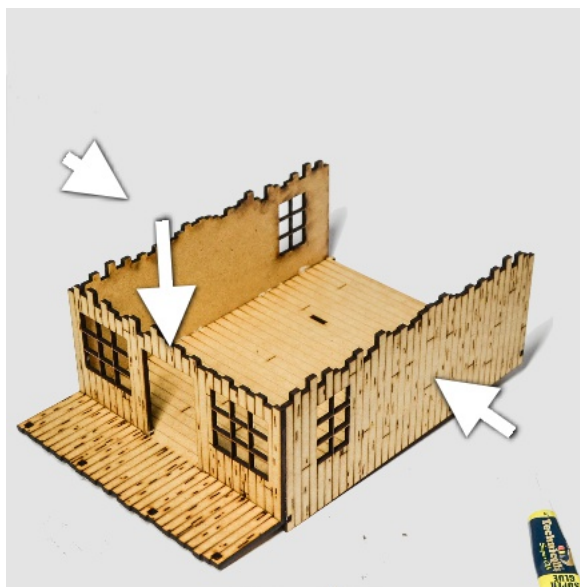


Add the rear wall to the model.



4

Add the internal dividing wall as shown.

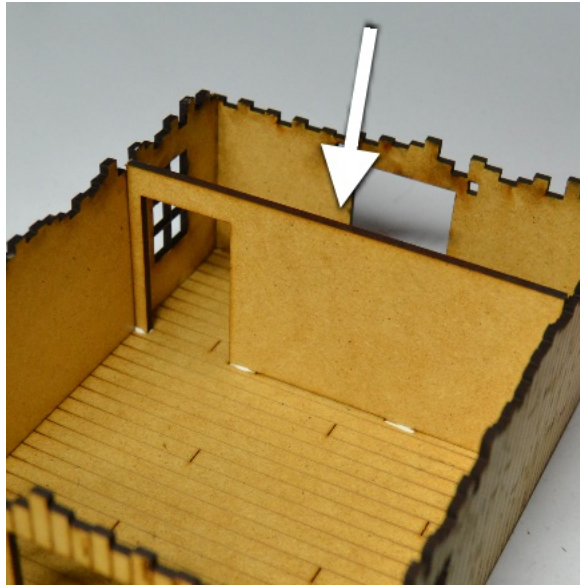


5

Prepare these four pieces...




6

...and glue them underneath the boardwalk, along with the boardwalk front piece.

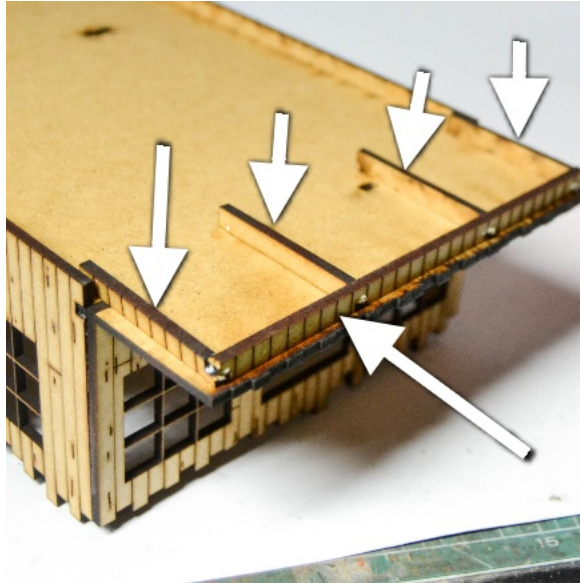


7

Assemble the rear entrance base as shown.

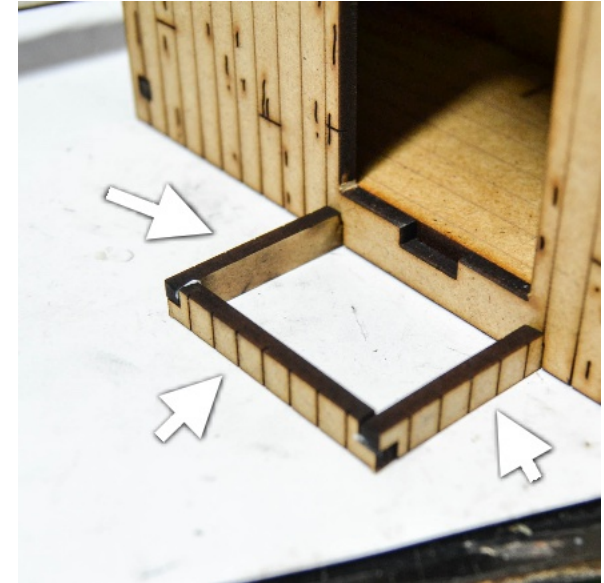


8

Add this piece on top of the base.

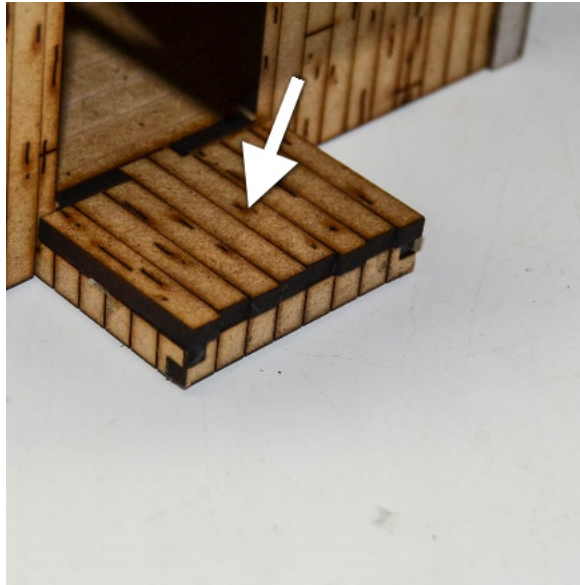


9

Glue the awning supports into the small holes in the boardwalk.

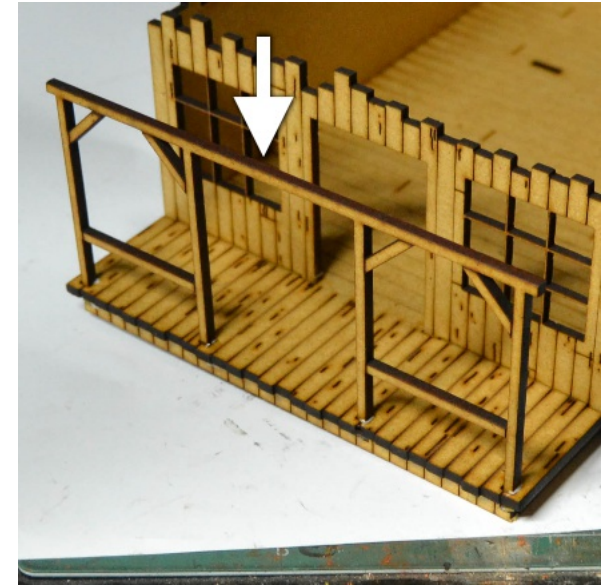


10

Add the front and rear walls to the second story floor.

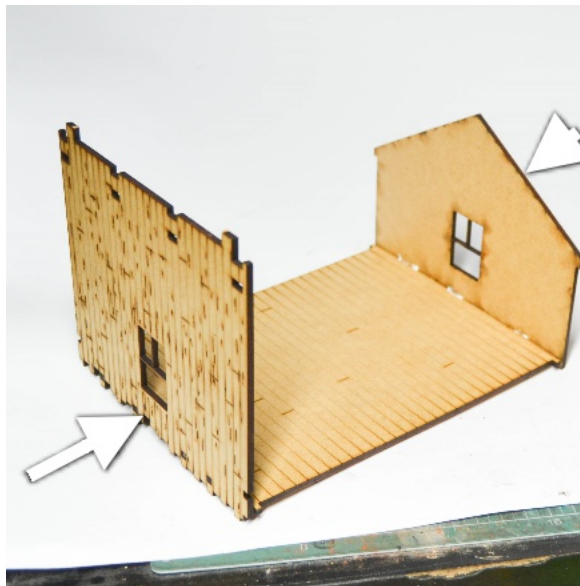


11

Add the side walls to the second story.

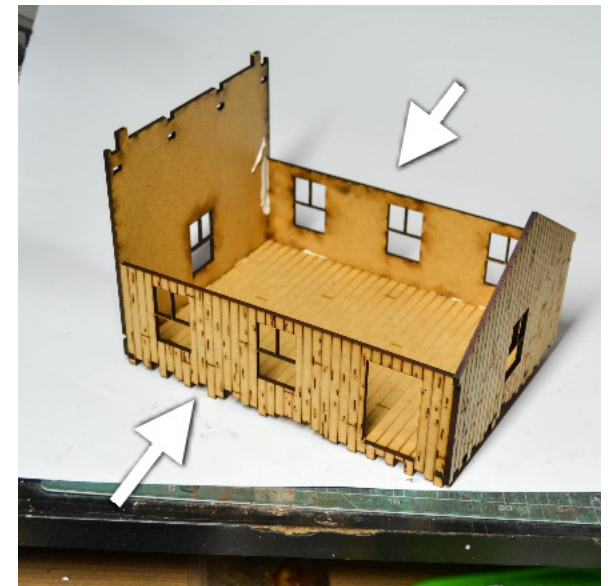


12

Glue this piece to the rear of the facade. We recommend using wood clamps for this step.

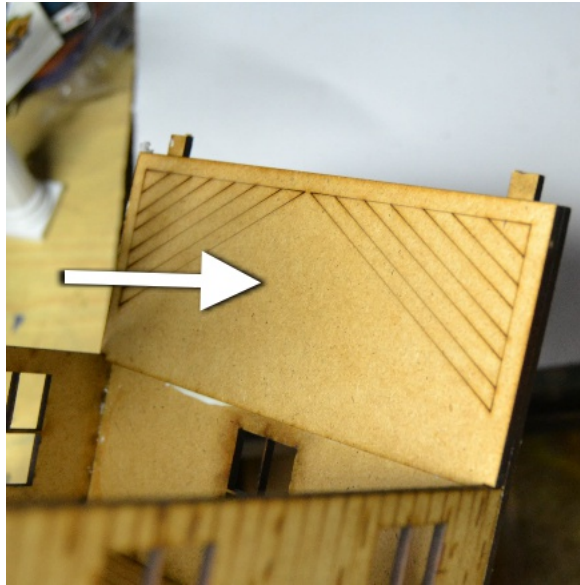

13

Add the first facade topper piece.

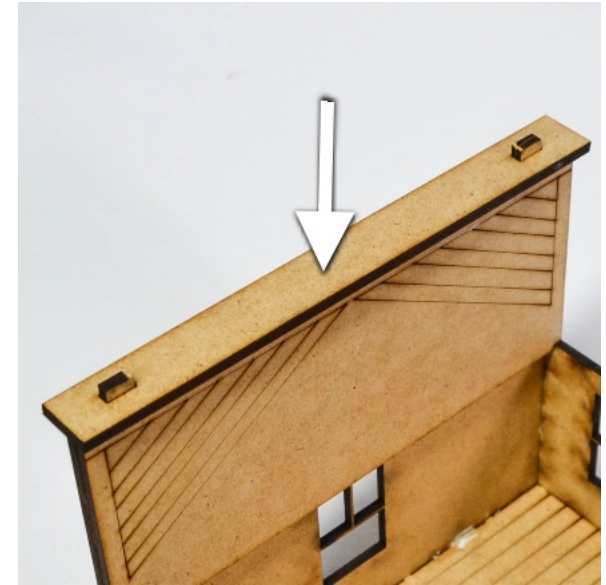

14

Add the second facade topper piece.



15

Add the two facade decorations pieces into each pair of slots in the facade.




16

Prepare these three pieces for the front awning.



17

Glue them to the model as shown.

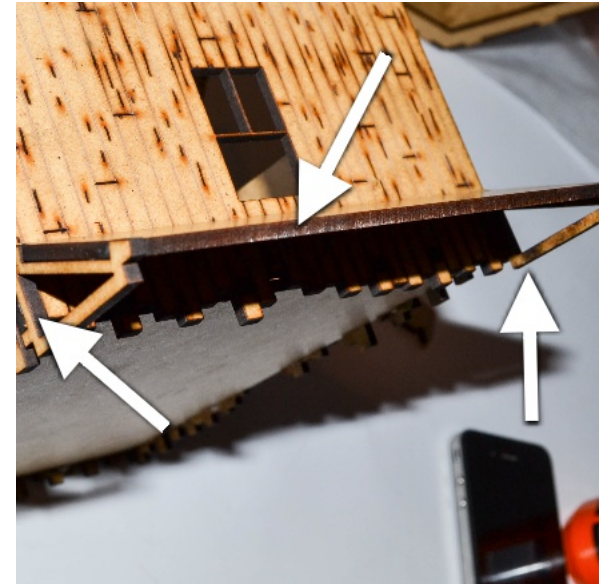


18

Prepare these three pieces for the rear awning.



19

Glue them to the holes in the rear wall as shown.

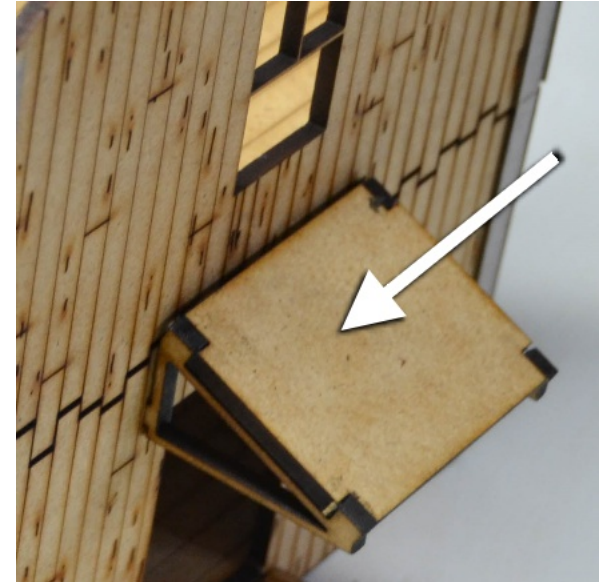


20

Prepare these three steps.




21

Start the stairway assembly by adding the side pieces to the main supports and the three steps to the stringers.

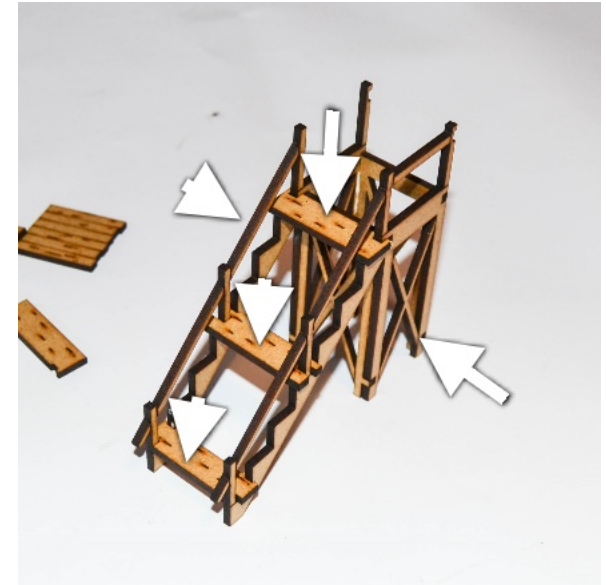

22

Add the rear barrier to the stairway.

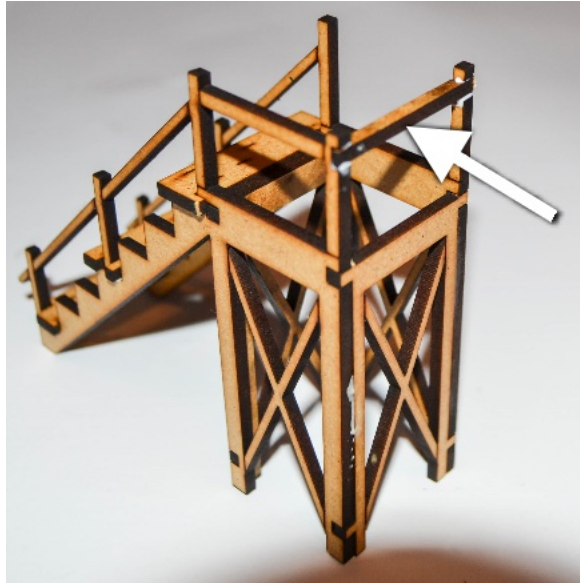

23

Complete the stairway with the remaining step pieces.



24

Add the top platform to the stairway.




25

Glue the first roof piece to the roof supports as shown.




26

Add the second roof piece.

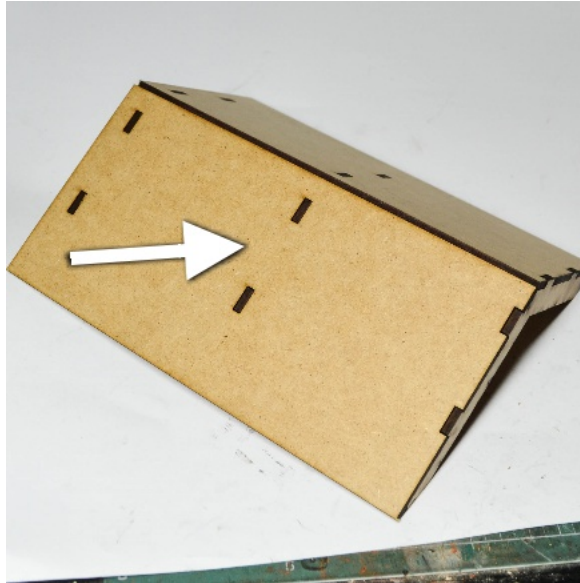


27

Start adding the greyboard shingle strips. You may want to dry fit these beforehand.

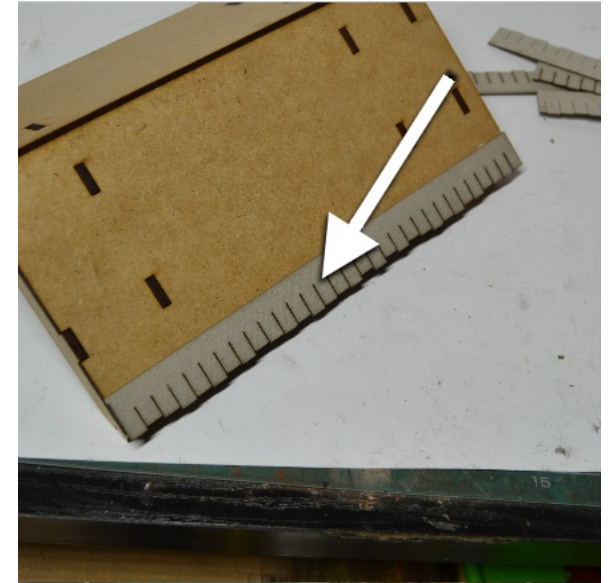


28

Alternate between narrow and wide shingles at the end.

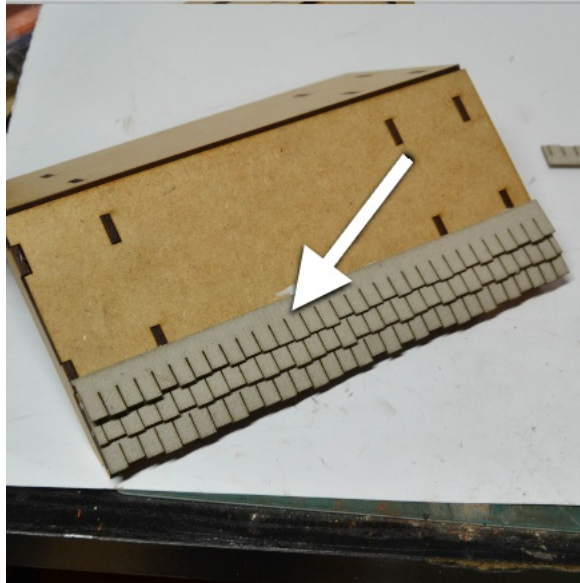


29

When you reach the top of the roof, cut away a narrow strip at the top of the shingle strip with a metal ruler and a sharp knife.

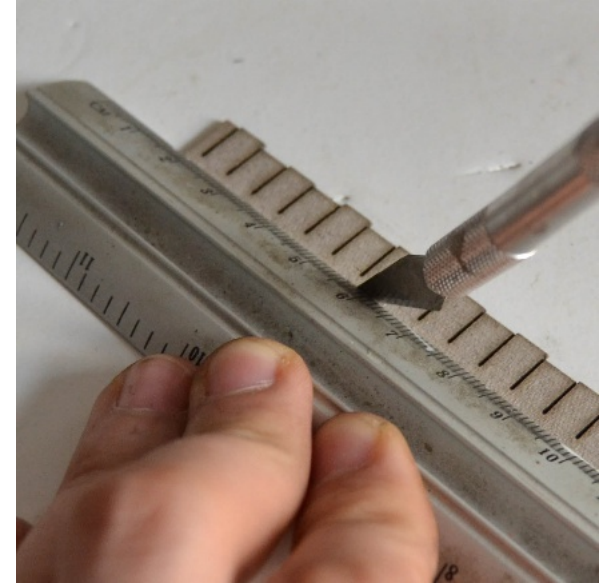


30

Use the strip you have cut away to top the roof.

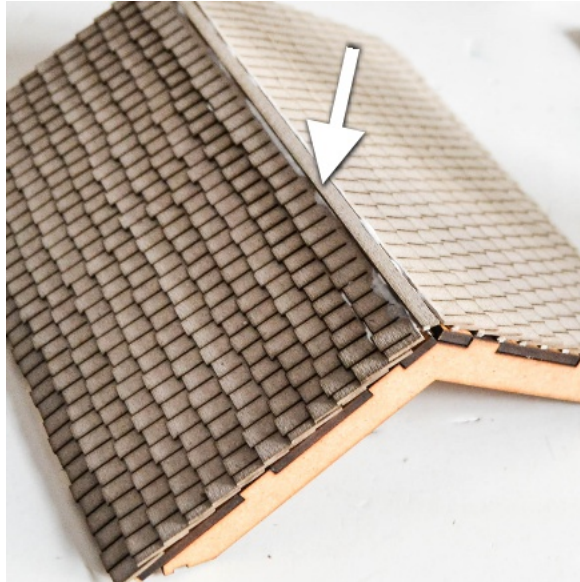


31

Add the external frames to each of the windows. We recommend that you don't glue the interior frames (the sliding ones) before painting.

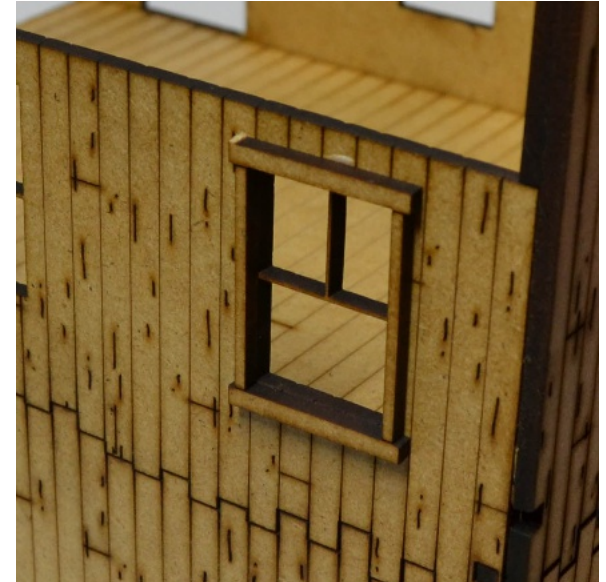

32

Add the greyboard pieces to each of the corners. Carefully match each piece to its corner.

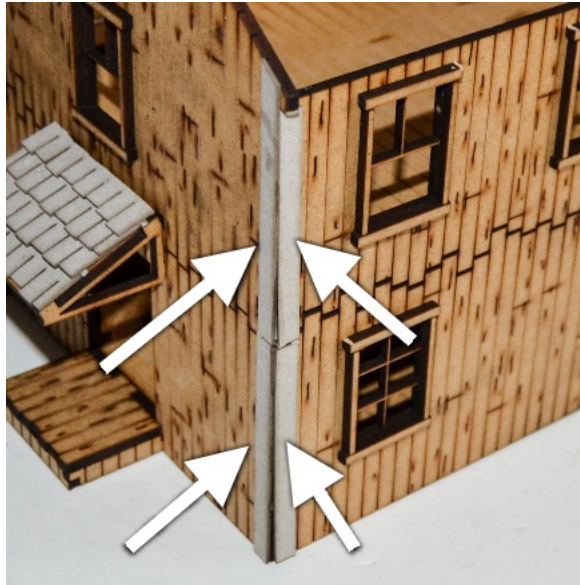


33

Add the shingles to the front awning.



34

Add the shingles to the rear awning.

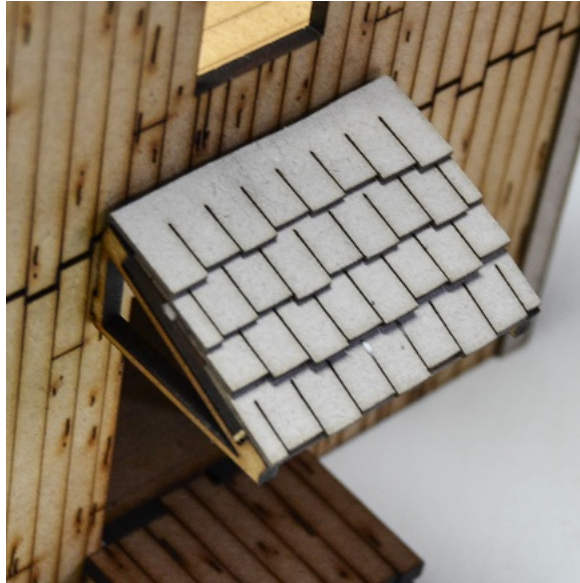


35

Add the greyboard frames to the front windows.



36

Assemble the rear doors as shown.

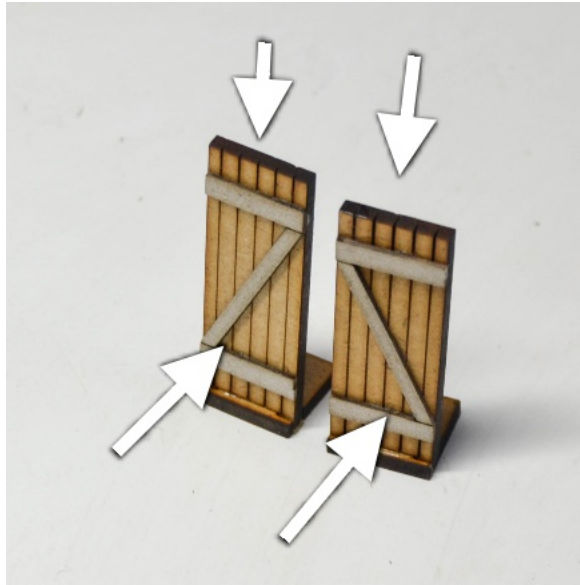

37

Assemble the front doors as shown.



38

Assemble the store counter as shown.

