




Wagon (TBV002)

www.multiversegamingterrain.com


Read the instructions carefully before putting the kit together. The model can be glued with PVA glue. A file and a sharp hobby knife may be needed to remove the bits of the sprue from the parts

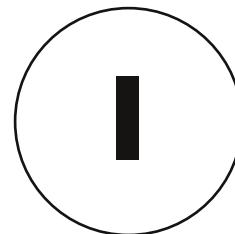


Lay the main undercarriage piece flat as shown.



Glue the two front axle pieces (the one with pin and the bottom one with the axle itself) to the undercarriage.

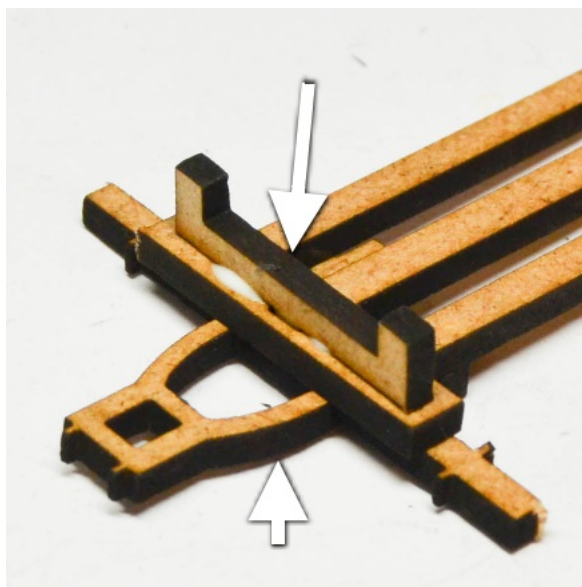


Glue the rear axle to the piece as shown.

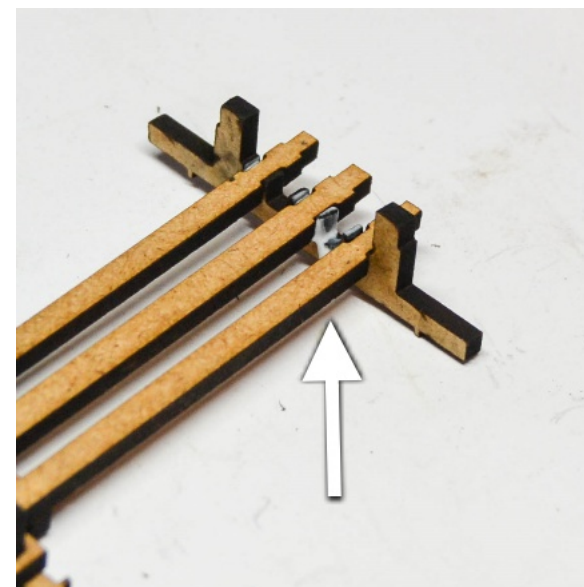


4

Add this piece to the rear of the undercarriage.

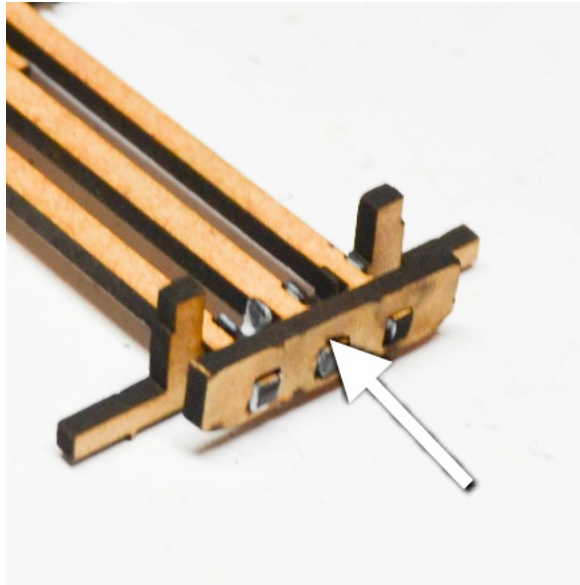

5

Add the wheels and wheel hubs to each of the axles. Be VERY careful and use a sharp knife while removing these pieces from the sprue!

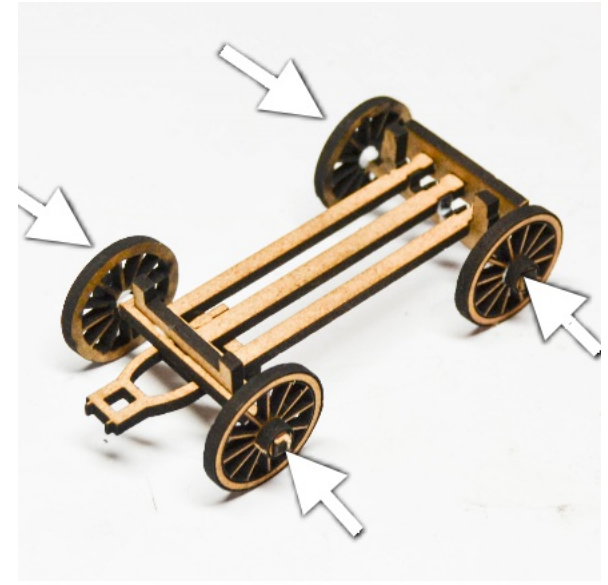


6

Glue the bottom of the wagon on top of the assembly as shown.



7

Add the side walls to the model.

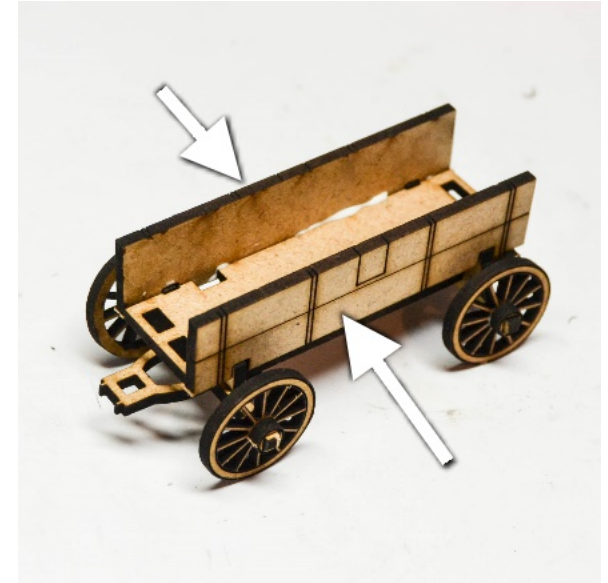

8

Add the front and rear walls to the model.



9

Add the seat supports as shown.



10

Glue the driver's seat to the supports.



11

Add the greyboard pieces to the driver's seat.



12

Add the greyboard detailing pieces to the model as shown. Use the engraving as a guide.



13

Add these greyboard pieces to the sides of the models.

