



**TOTAL
COMPOSITES**

TRUCK BOX

CABINET GUIDE

Guidelines for Installing Cabinets

The following instructions demonstrate some of the best ways to go about building cabinets in your Truck Box Shell.

Please don't hesitate to contact us if you have any questions. We are here to help.

Contact:

Total Composites

Direct line: 250-477-0375

Email: support@totalcomposites.com

Total Composites will not be responsible for injuries, defects, road testing and modifications that are not authorized. Common sense and manufacturing skills are required.

Cabinet Construction

A cabinet frame like the one pictured below can be constructed from plywood. Hinges or drawer slides can be added for cabinet doors or drawers.




An expanded view of the different components is shown below. The upright pieces (gables) can be glued and screwed through the top and bottom pieces.




Securing Cabinets to Truck Box Shell

The cabinets can be secured to the truck box shell by screwing into the fiberglass extrusion pieces. It is important to only screw in the corners where there is an extrusion piece.

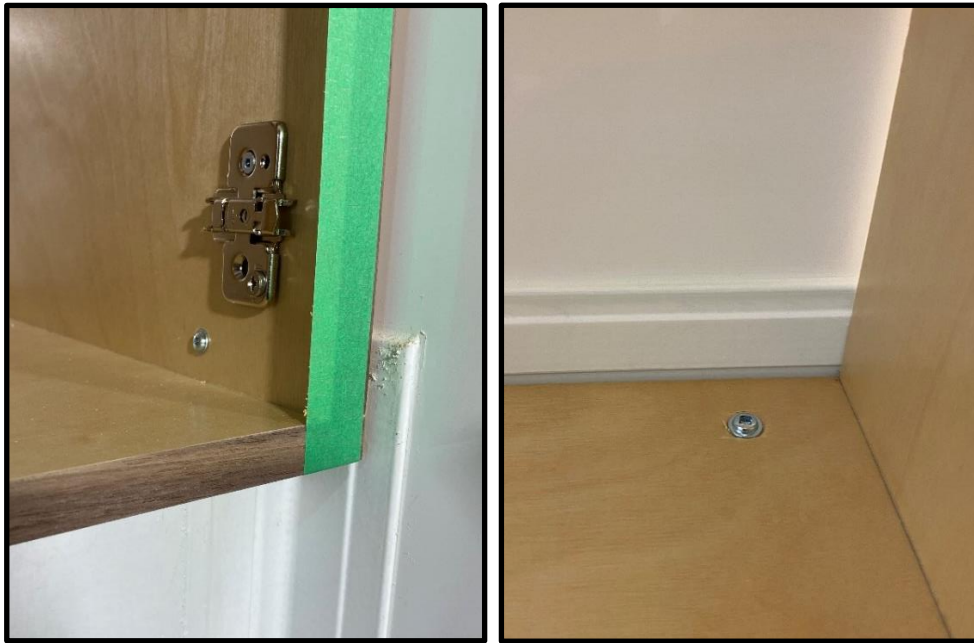

The cabinets can also be attached by gluing 5/8" plywood strips to the walls. Once the glue is dry the strips will serve as backing for screwing on the cabinets. This can be useful if you want to be able to remove cabinets for periods of time and then reinstall. The drawing below shows how plywood can be glued to the roof for upper cabinetry.

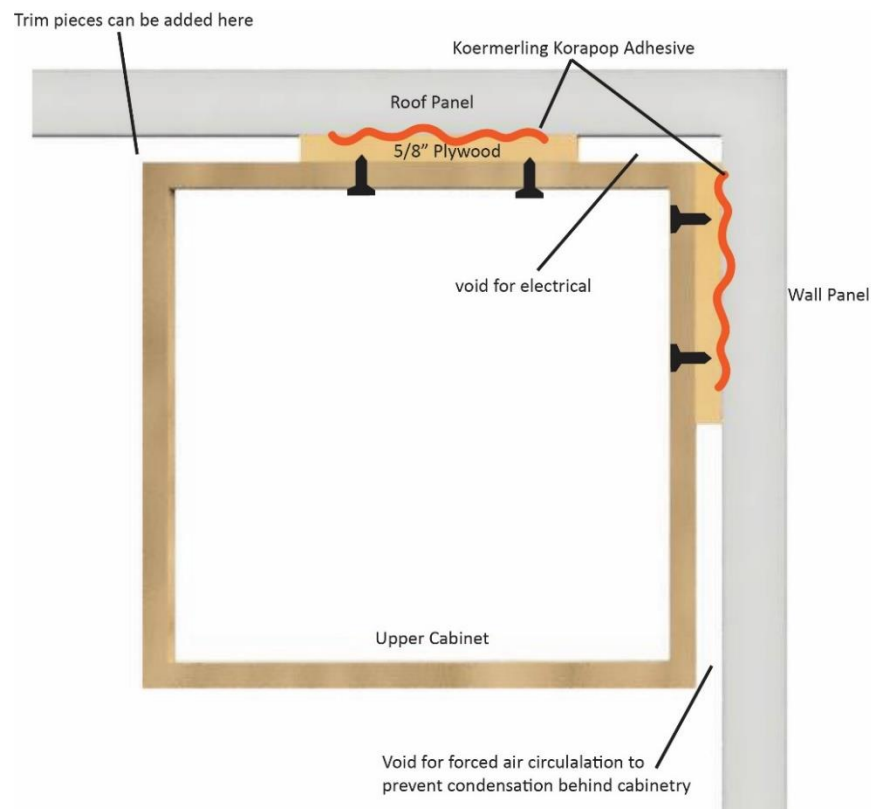

Finished Cabinets

These photos demonstrate ways to finalize your cabinets.

