



! DO NOT MEASURE YOUR OLD SCREENS

FlexScreen® is a custom made product which requires a specific measuring process outlined below. Measure accurately to ensure the right fit.

TOOLS NEEDED:

- » FLEX-TENNA* Measuring Tool
- » Measuring Tape

*FLEX-TENNA sold separately. Visit www.homedepot.com to purchase

DETERMINE YOUR WINDOW STYLE & MEASURING POINT

FlexScreen will work with all window styles but the measuring point depends on your window type.

QUICK TIP Take a look at where your screen currently fits on the window. This will indicate where you should take measurements. Remove old screen before measuring.

POCKETS / CHANNELS

POCKETS



QUICK TIP It is possible to have a different measuring point for height and width directions.



NARROW POCKETS - NO POCKETS - ONE POCKET



INSTRUCTIONS
POCKETS / CHANNELS




INSTRUCTIONS
NARROW POCKETS -
NO POCKETS - ONE POCKET

POCKETS / CHANNELS INSTRUCTIONS

1. ASSEMBLE FLEX-TENNA

Screw the FLEX-TENNA halves together before measuring

FLEX-TENNA MEASURES FROM 12.9" - 74.8"



2. MEASURE FOR WIDTH & HEIGHT

POCKETS

Extend FLEX-TENNA completely into pocket/channel on each side of the window

- » Insert and extend FLEX-TENNA as far as it will go based on your measuring point determined in Step 1.
- » Remove FLEX-TENNA
- » Measure extended FLEX-TENNA with measuring tape
- » Mark down measurements for height and width



QUICK TIP

It is possible to have a pockets on one side of the window, and not the other.

QUICK TIP

Take care when removing FLEX-TENNA from window to not extend or compress the tool.




Measure extended FLEX-TENNA with measuring tape

3. ADJUST MEASUREMENT FOR THE PERFECT FIT

Subtract 3/16" from width & height measurements

QUICK TIP

To subtract 3/16" - count back 3 marks

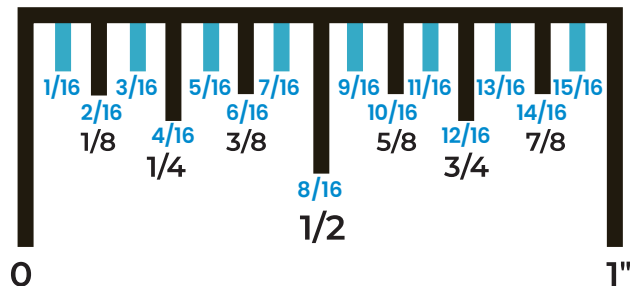

QUICK TIP


Flexfit Retention Bumpers ship with each screen. Bumpers add additional pressure for the perfect fit on NARROW POCKETS or NO POCKET windows.

NARROW POCKETS–NO POCKETS–ONE POCKET INSTRUCTIONS

1. ASSEMBLE FLEX-TENNA

Screw the FLEX-TENNA halves together before measuring

FLEX-TENNA MEASURES FROM 12.9" – 74.8"



2. MEASURE FOR WIDTH & HEIGHT

NARROW POCKETS

Extend FLEX-TENNA to measure from the outside edge of the left window pocket/channel to the outside edge of the right window pocket/channel


NO POCKETS

Extend FLEX-TENNA to measure from the left inside edge of the window frame to the right inside edge of the window frame

ONE POCKET

Extend FLEX-TENNA to measure from the inside edge of the window pocket/channel to the edge of the window frame

- » Insert and extend FLEX-TENNA as far as it will go based on your measuring point determined in Step 1.
- » Remove FLEX-TENNA
- » Measure extended FLEX-TENNA with measuring tape
- » Mark down measurements for height and width

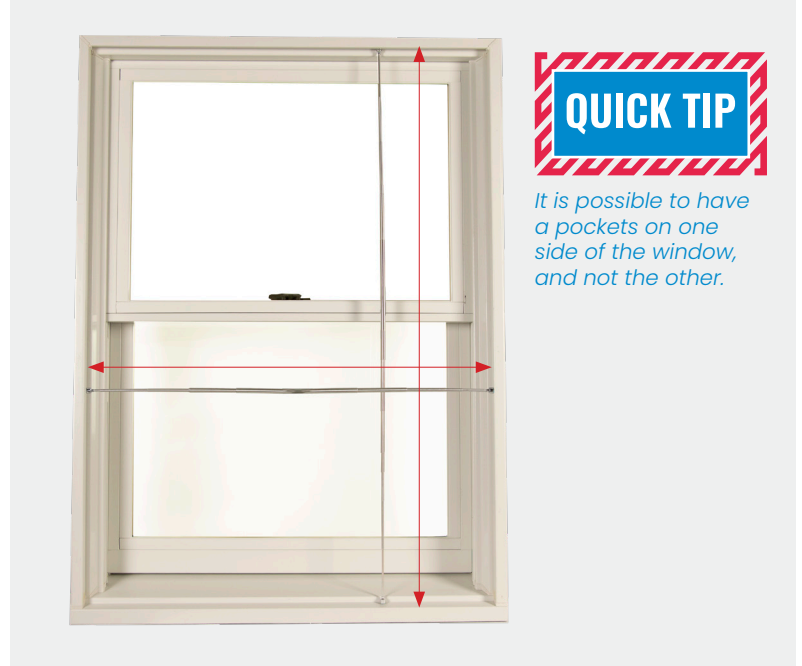

QUICK TIP
It is possible to have a pockets on one side of the window, and not the other.



QUICK TIP Take care when removing FLEX-TENNA from window to not extend or compress the tool.

Measure extended FLEX-TENNA with measuring tape



3. ADJUST MEASUREMENT FOR THE PERFECT FIT

Subtract 1/16" from width & height measurements



QUICK TIP To subtract 1/16" – count back 1 mark



QUICK TIP Flexfit Retention Bumpers ship with each screen. Bumpers add additional pressure for the perfect fit on NARROW POCKETS or NO POCKET windows.

