

FLEX-TENNA™

MEASURING GUIDE



! DO NOT MEASURE YOUR OLD SCREENS

FlexScreen® is a custom made product which requires a specific measuring process outlined below. Measure accurately to ensure the right fit.

TOOLS NEEDED:

- » FLEX-TENNA* Measuring Tool
- » Measuring Tape

DETERMINE YOUR WINDOW STYLE & MEASURING POINT


FlexScreen will work with all window styles but the measuring point depends on your window type.

QUICK TIP Take a look at where your screen currently fits on the window. This will indicate where you should take measurements. Remove old screen before measuring.

POCKET: Refers to the recessed opening or “channel” in the window into which the screen fits.

If FLEX-TENNA does not fit into your window pocket/channel - consider that pocket a **NARROW POCKET** for measuring purposes.



POCKETS / CHANNELS

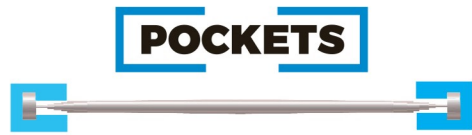

QUICK TIP It is possible to have a different measuring point for height and width directions.



NARROW POCKETS - NO POCKETS - ONE POCKET

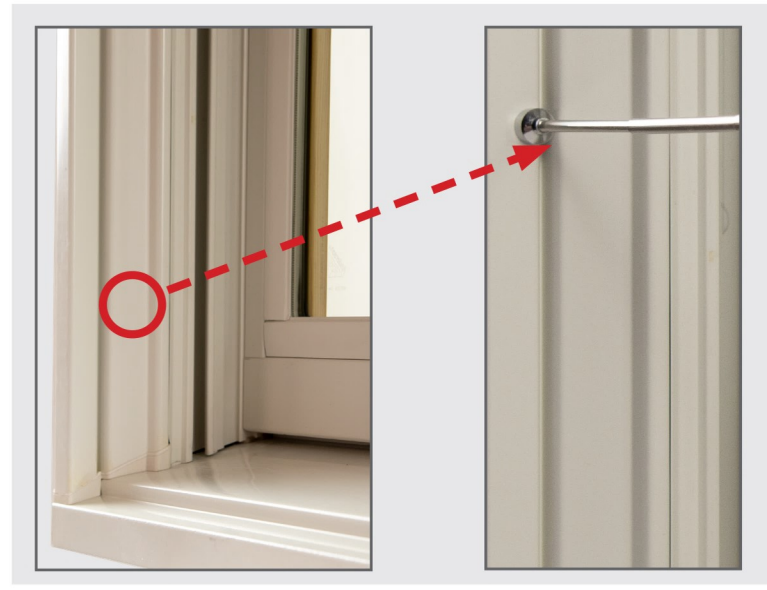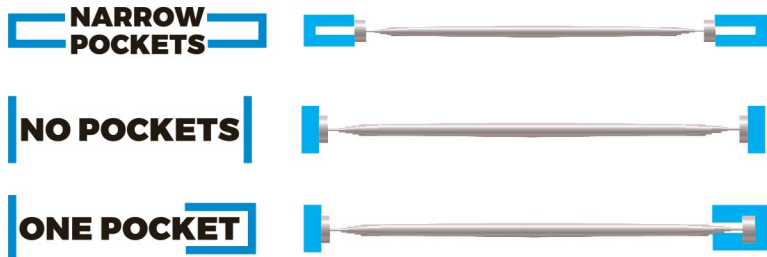

GO TO PAGE 2
INSTRUCTIONS
POCKETS / CHANNELS

GO TO PAGE 3
INSTRUCTIONS
NARROW POCKETS - NO POCKETS - ONE POCKET

POCKETS / CHANNELS INSTRUCTIONS

1. ASSEMBLE FLEX-TENNA

Screw the FLEX-TENNA halves together before measuring

FLEX-TENNA MEASURES FROM 12.9" - 74.8"



2. MEASURE FOR WIDTH & HEIGHT

POCKETS

Extend FLEX-TENNA completely into pocket/channel on each side of the window

- » Insert and extend FLEX-TENNA as far as it will go based on your measuring point determined in Step 1.
- » Remove FLEX-TENNA
- » Measure extended FLEX-TENNA with measuring tape
- » Mark down measurements for height and width




QUICK TIP

It is possible to have a pockets on one side of the window, and not the other.



Take care when removing FLEX-TENNA from window to not extend or compress the tool.

Measure extended FLEX-TENNA with measuring tape

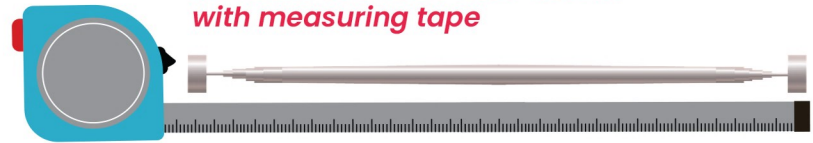


3. ADJUST MEASUREMENT FOR THE PERFECT FIT

Subtract 3/16" from width & height measurements



To subtract 3/16" - count back 3 marks

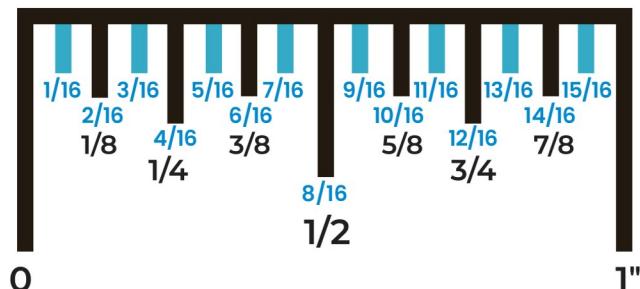

Flexfit Retention Bumpers ship with each screen. Bumpers add additional pressure for the perfect fit on NARROW POCKETS or NO POCKET windows.

NARROW POCKETS-NO POCKETS-ONE POCKET INSTRUCTIONS

1. ASSEMBLE FLEX-TENNA

Screw the FLEX-TENNA halves together before measuring

FLEX-TENNA MEASURES FROM 12.9" - 74.8"



2. MEASURE FOR WIDTH & HEIGHT

NARROW POCKETS

Extend FLEX-TENNA to measure from the outside edge of the left window pocket/channel to the outside edge of the right window pocket/channel

NO POCKETS

Extend FLEX-TENNA to measure from the left inside edge of the window frame to the right inside edge of the window frame

ONE POCKET

Extend FLEX-TENNA to measure from the inside edge of the window pocket/channel to the edge of the window frame

- » Insert and extend FLEX-TENNA as far as it will go based on your measuring point determined in Step 1.
- » Remove FLEX-TENNA
- » Measure extended FLEX-TENNA with measuring tape
- » Mark down measurements for height and width



QUICK TIP

It is possible to have a pockets on one side of the window, and not the other.

QUICK TIP

Take care when removing FLEX-TENNA from window to not extend or compress the tool.

Measure extended FLEX-TENNA with measuring tape




3. ADJUST MEASUREMENT FOR THE PERFECT FIT

Subtract 1/16" from width & height measurements

QUICK TIP

To subtract 1/16" - count back 1 mark

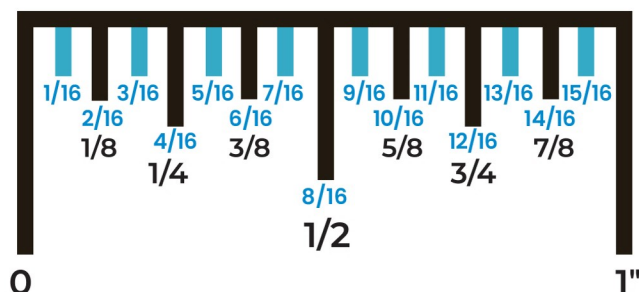

QUICK TIP

Flexfit Retention Bumpers ship with each screen. Bumpers add additional pressure for the perfect fit on NARROW POCKETS or NO POCKET windows.