





M4 Sherman Crocodile (TW-20139)  
Assembly Instructions

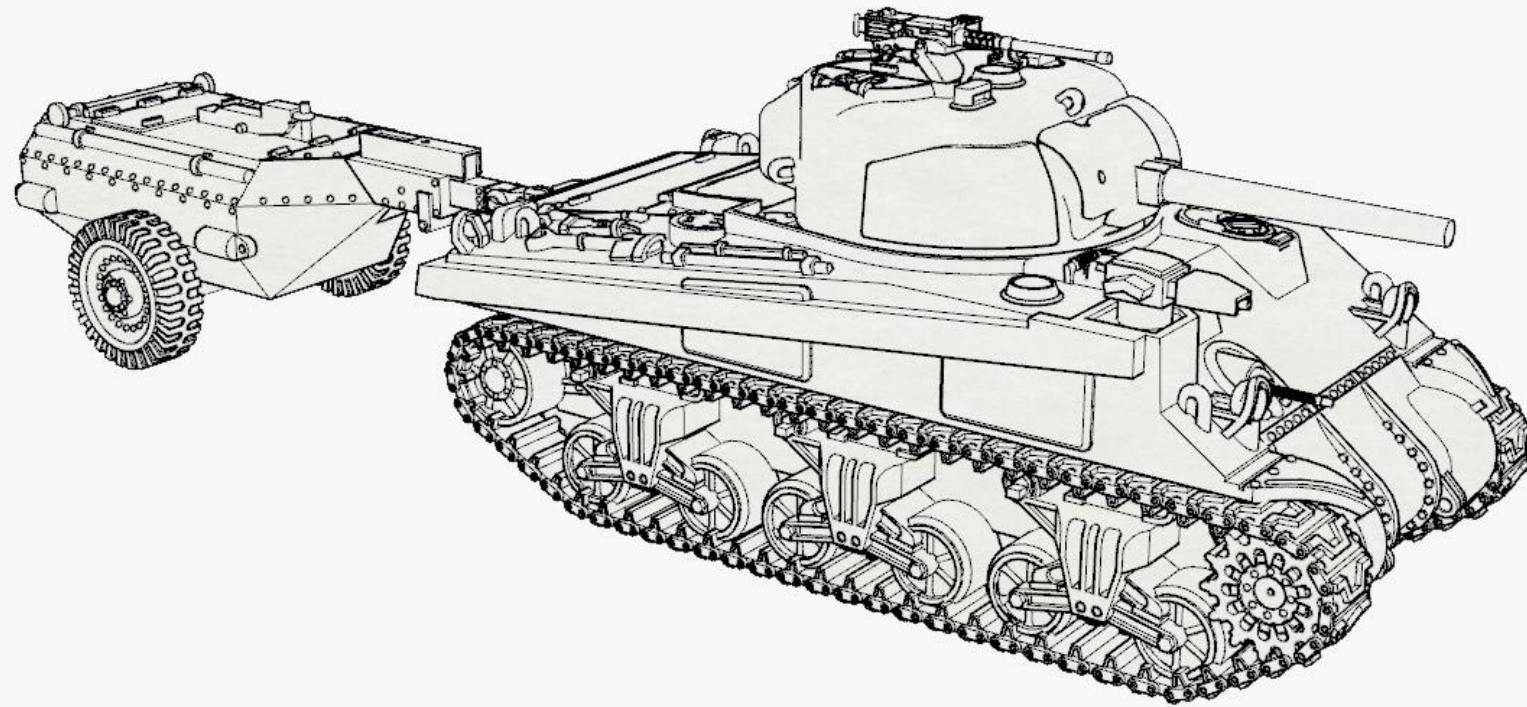

M4 Sherman Crocodile (TW-20139)  
Assembly Instructions

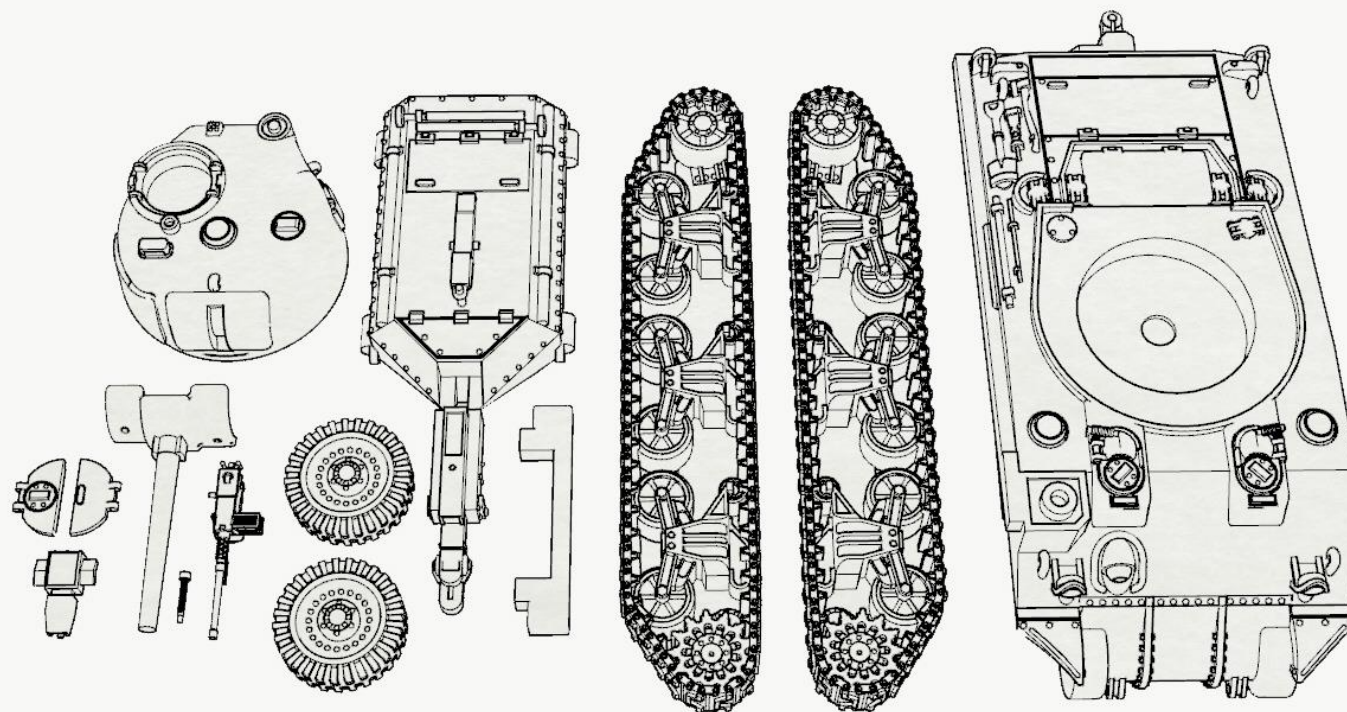



M4 Sherman Crocodile (TW-20139)  
Assembly Instructions

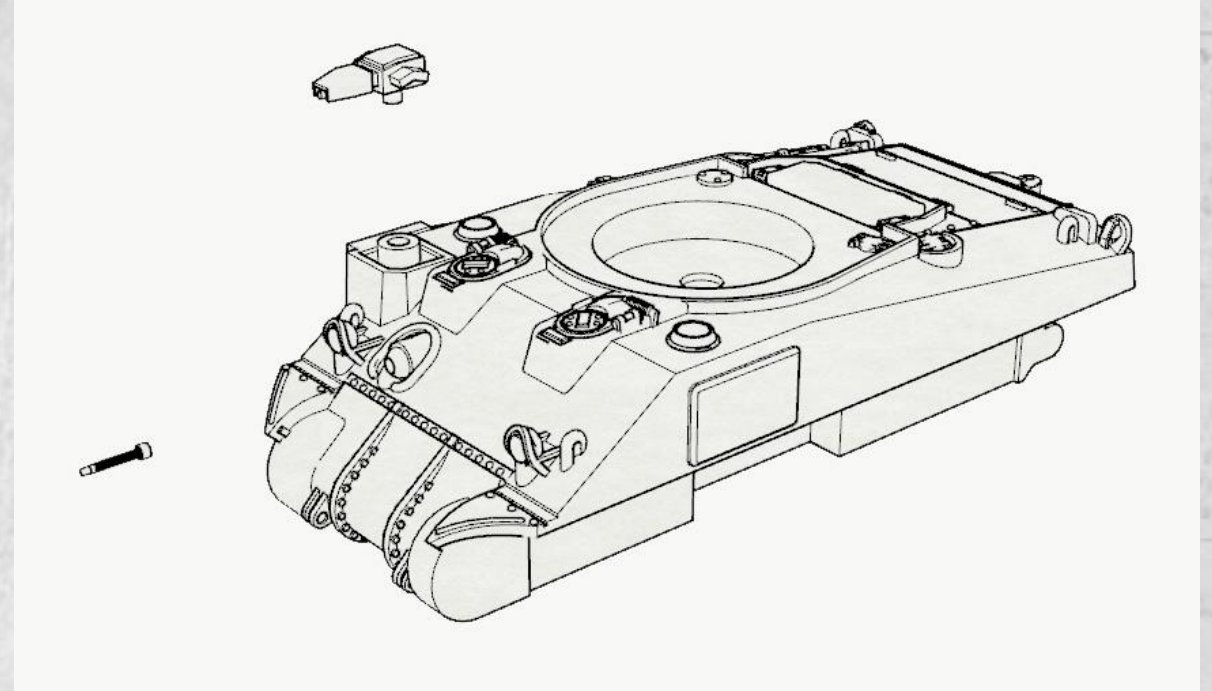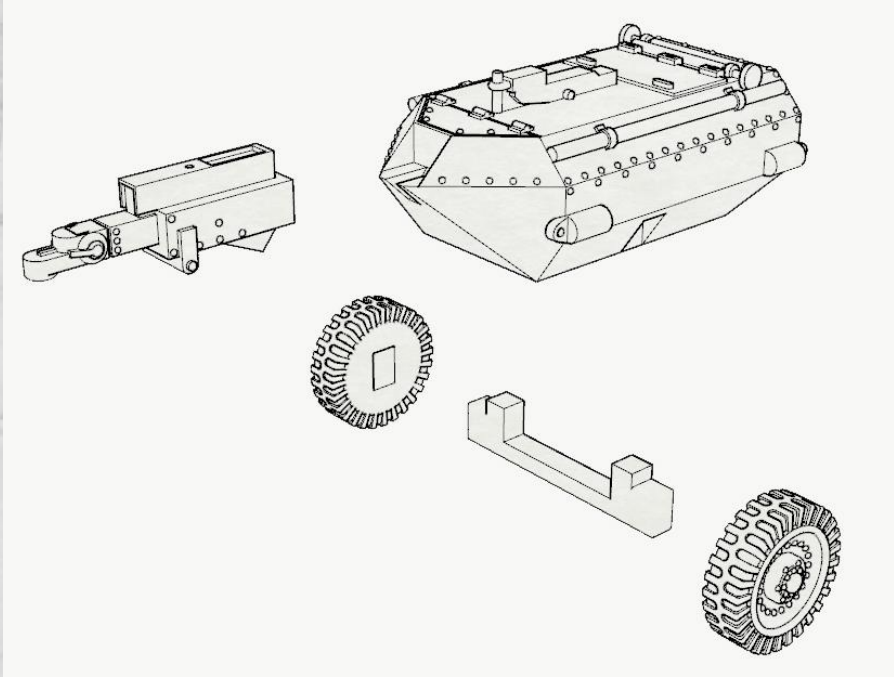

We recommend you sand the connecting points before gluing the parts in place. This will make for a stronger bond.

Trench Worx

M4 Sherman Crocodile (TW-20139)  
Assembly Instructions

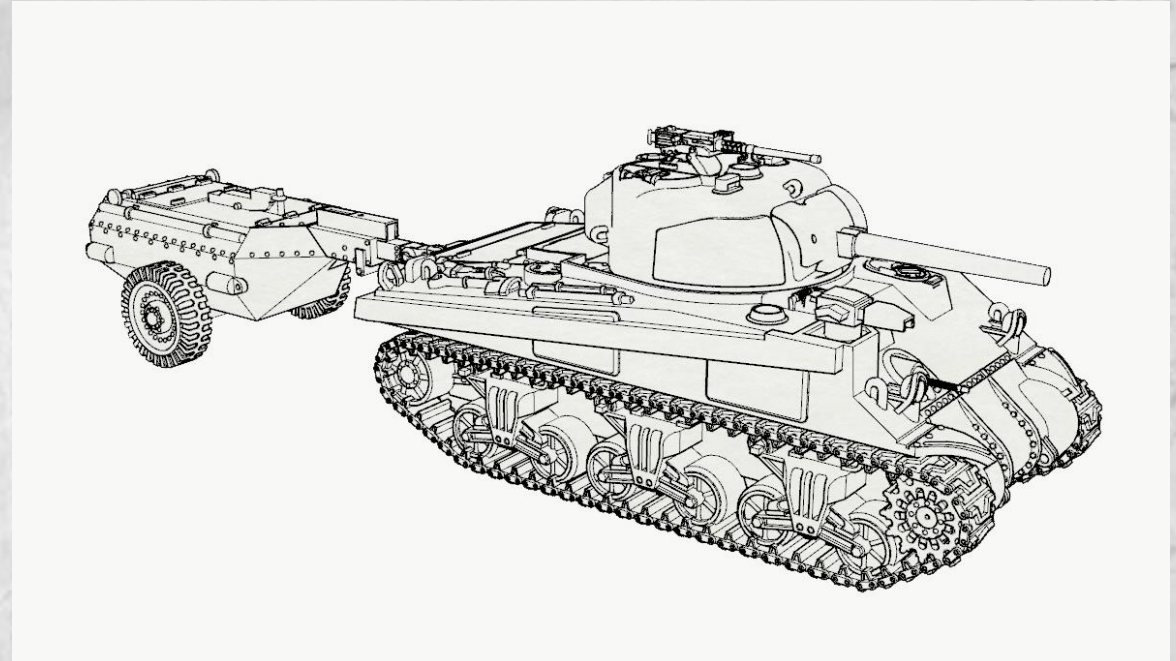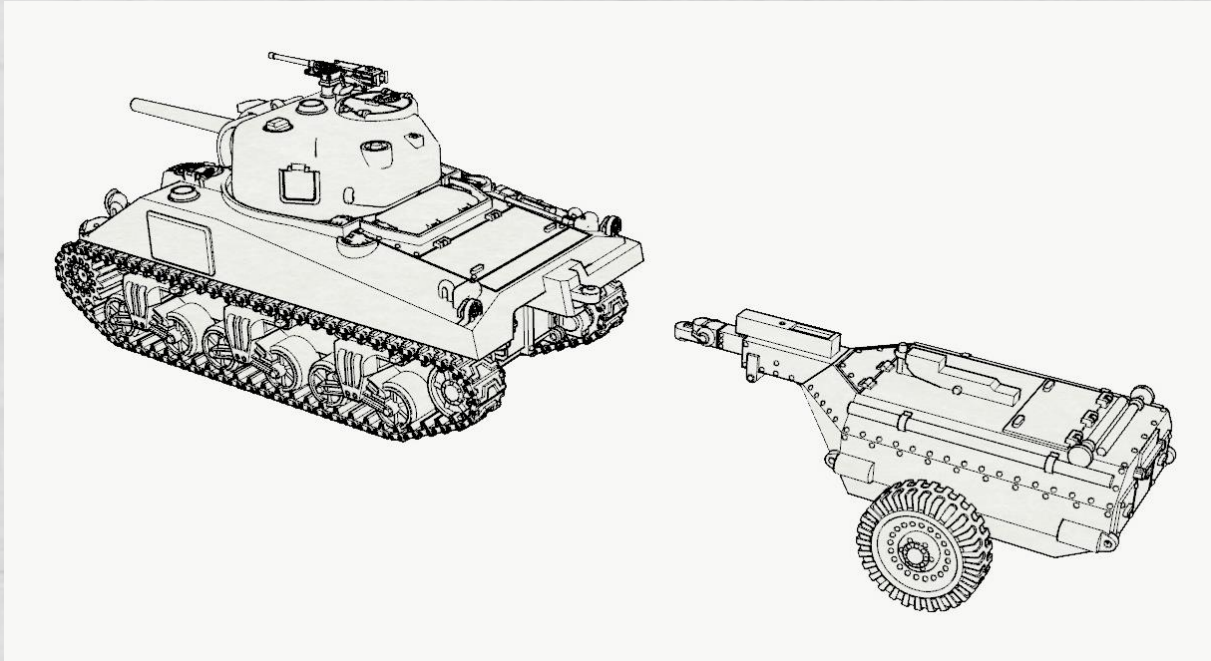

We recommend you sand the connecting points before gluing the parts in place. This will make for a stronger bond.

Trench Worx