



Caterpillar D7 Armored Bulldozer (TW-20140)
Assembly Instructions

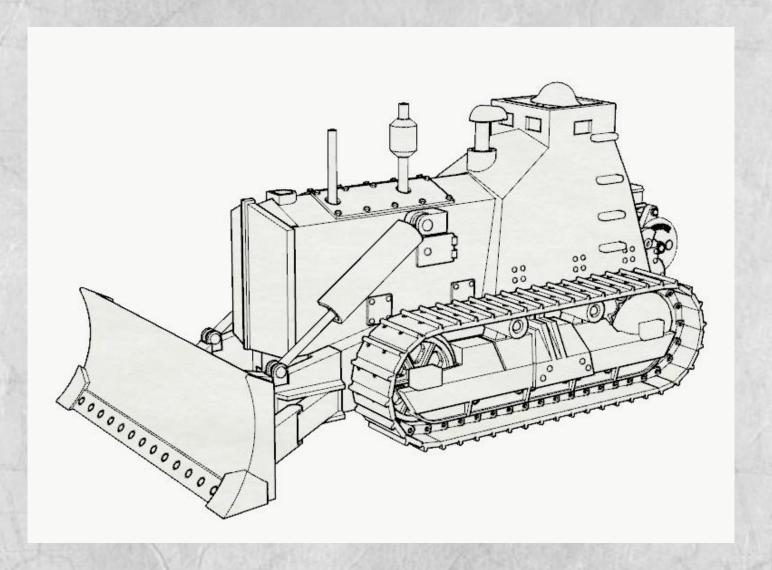

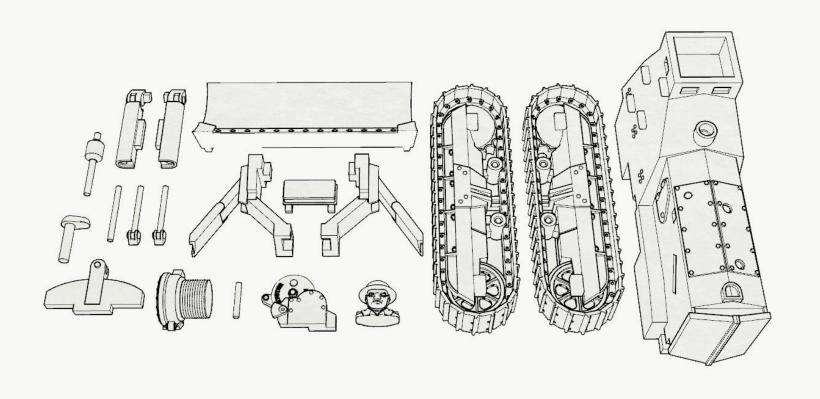


Trench Work

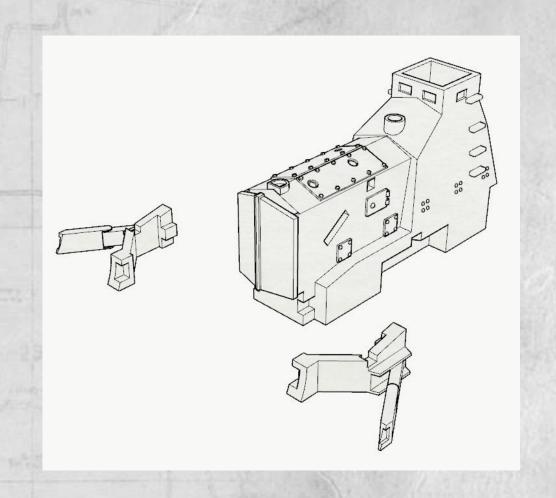


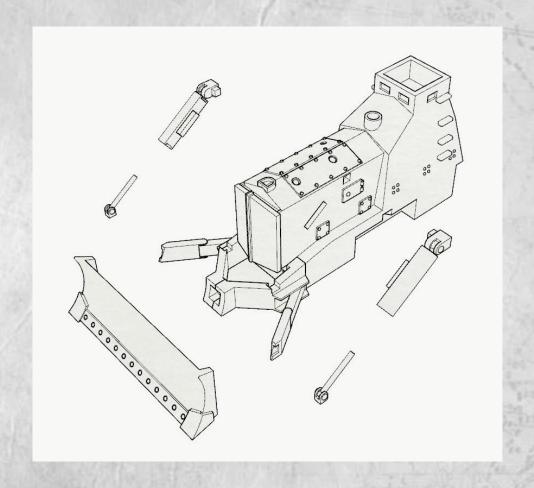


We recommend you sand the connecting points before gluing the parts in place. This will make for a stronger bond.

Trench Worx

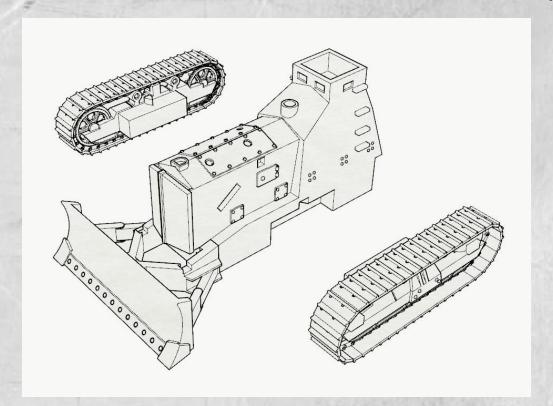


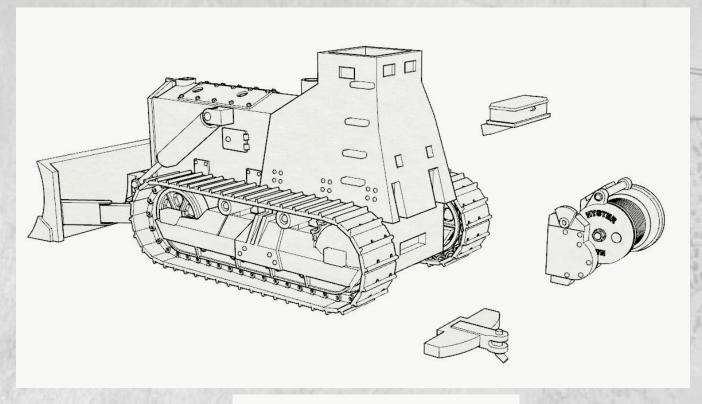


We recommend you sand the connecting points before gluing the parts in place. This will make for a stronger bond.

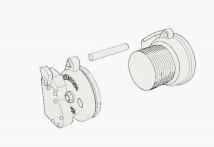

Trench Worx

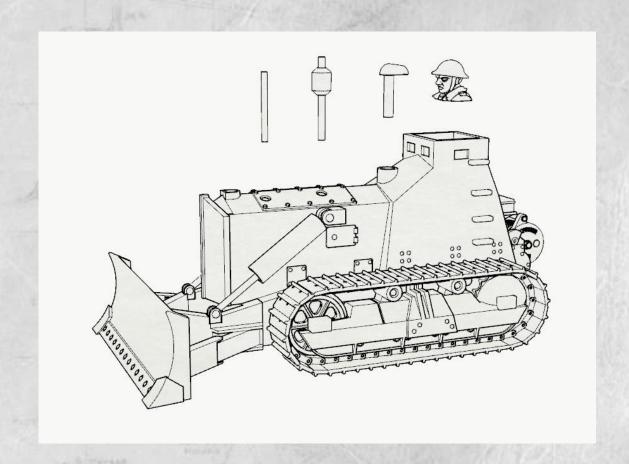

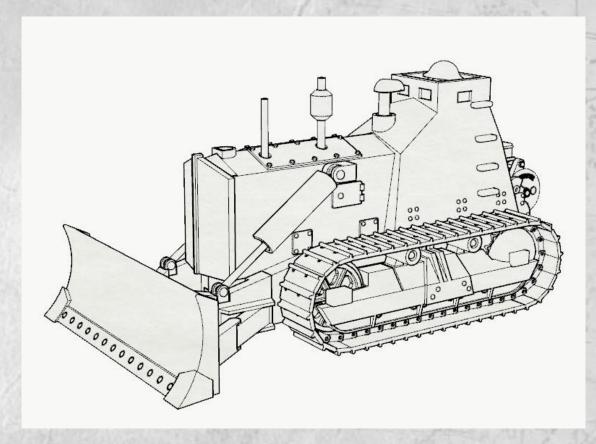

We recommend you sand the connecting points before gluing the parts in place. This will make for a stronger bond.

Trench Worx