

store
away **Knightshayes**
Edition 2.0













It is strongly recommended to have two persons present when assembling this item. We advise that you unpack the boxes in the order shown in these instructions and follow the assembly instructions carefully.

Please be careful during construction as section of the cupboard may be unstable until construction is complete.

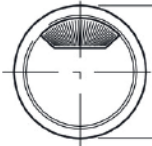
Your hardware pack should contain the following:

| | | | |
|--|--|---|--|
|  <p>CONNECTING BOLT (CB1) X 76</p> |  <p>FOLDING LEG BRACKET (FLB1) X 4</p> | IF LIGHTING ORDERED <div>  <p>TRANSFORMER (TRANS1) X 1</p> </div> | |
|  <p>CONNECTING LOCK (CL1) X 76</p> |  <p>HANDLE & SCREW (K1) X 2 -- OR --</p> |  <p>PLUG (PLUG1) X 1</p> | |
|  <p>MINI CONNECTING LOCK (CB2) X 32</p> |  <p>KNOB & SCREW (K1) X 2</p> |  <p>CABLE OUTLET X 1</p> | |
|  <p>SHELF PEG (SP1) X 140</p> |  <p>SHELF PEG (SP3) X 20</p> |  <p>BOLT (BB1) X 4</p> | |
|  <p>BLACK CASTOR (C2) X 16</p> |  <p>ANGLE BRACKET (AB1) X 12</p> |  <p>HOOK (GH1) X 5</p> | |
|  <p>DOWEL X 45</p> |  <p>HINGE (H2) X 12</p> | | |
|  <p>SCREW (V13) X 28</p> |  <p>SHELF CLIP (SR1) X 20</p> |  <p>CONNECTING PLATE X 2</p> | |
|  <p>SCREW (35-17D) X 88</p> | | | |
| | |  <p>SCREW (30-15S) X 88</p> | |

STEP 1
You will need to open box -

Knightshayes 1


You will need all
of the panels from this
box

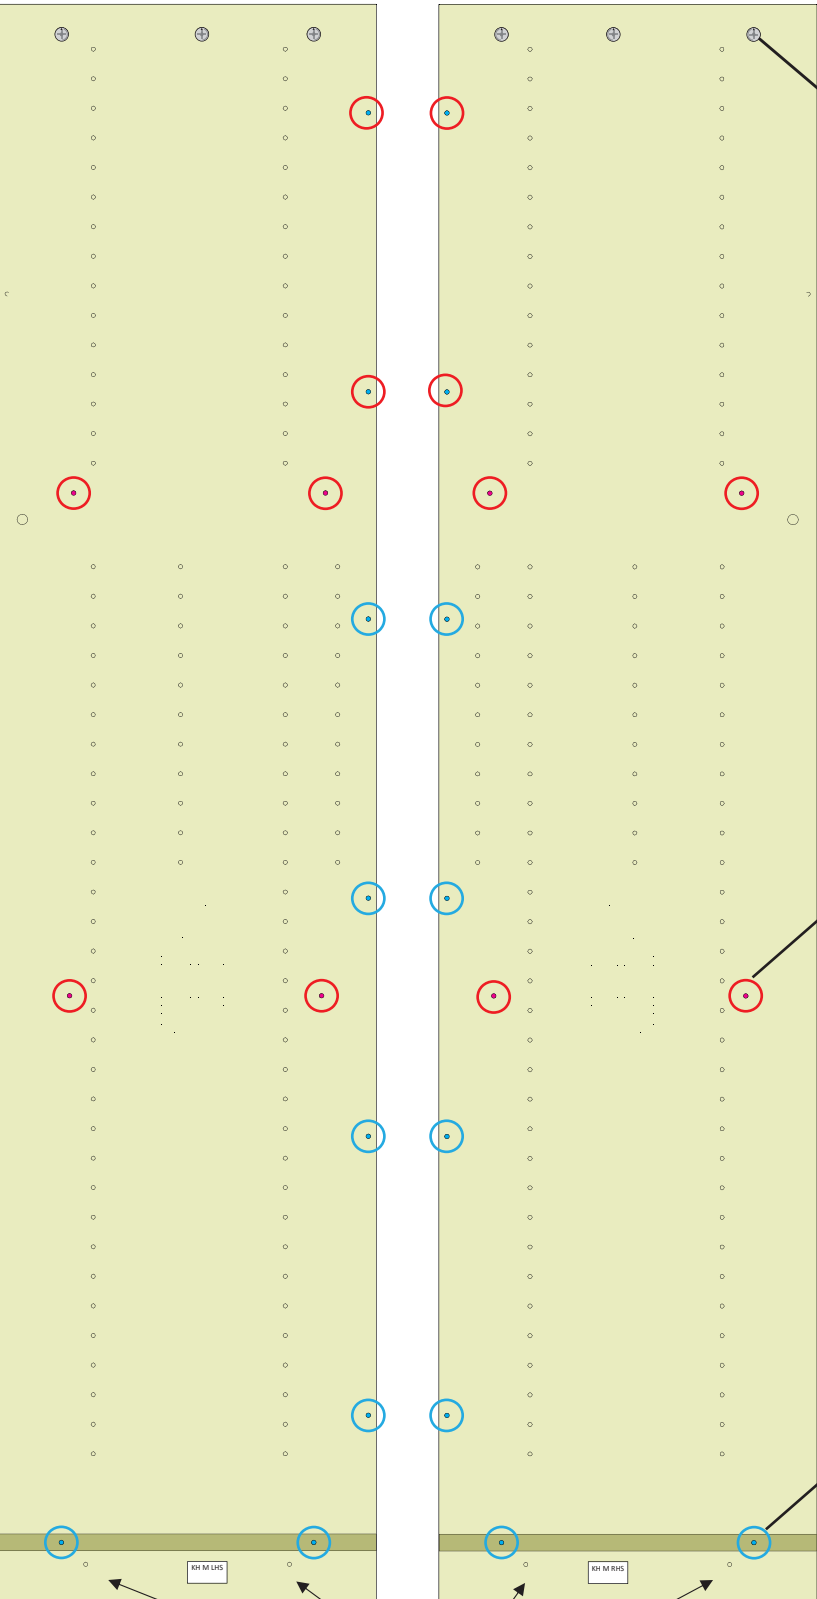

Insert CL1 Locks into
the holes as indicated



Screw CB2 Bolts into all
the holes marked with
a red circle

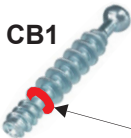

screw in to
this point

Screw CB1 Bolts into all
the holes marked with
a blue circle




Use:
- Angle Bracket AB1
- Screw 35-17D

STEP 2

You will need to open box -

Knightshayes 2

You will require panel
KH M BASE from this
box keep the other
panels to one side

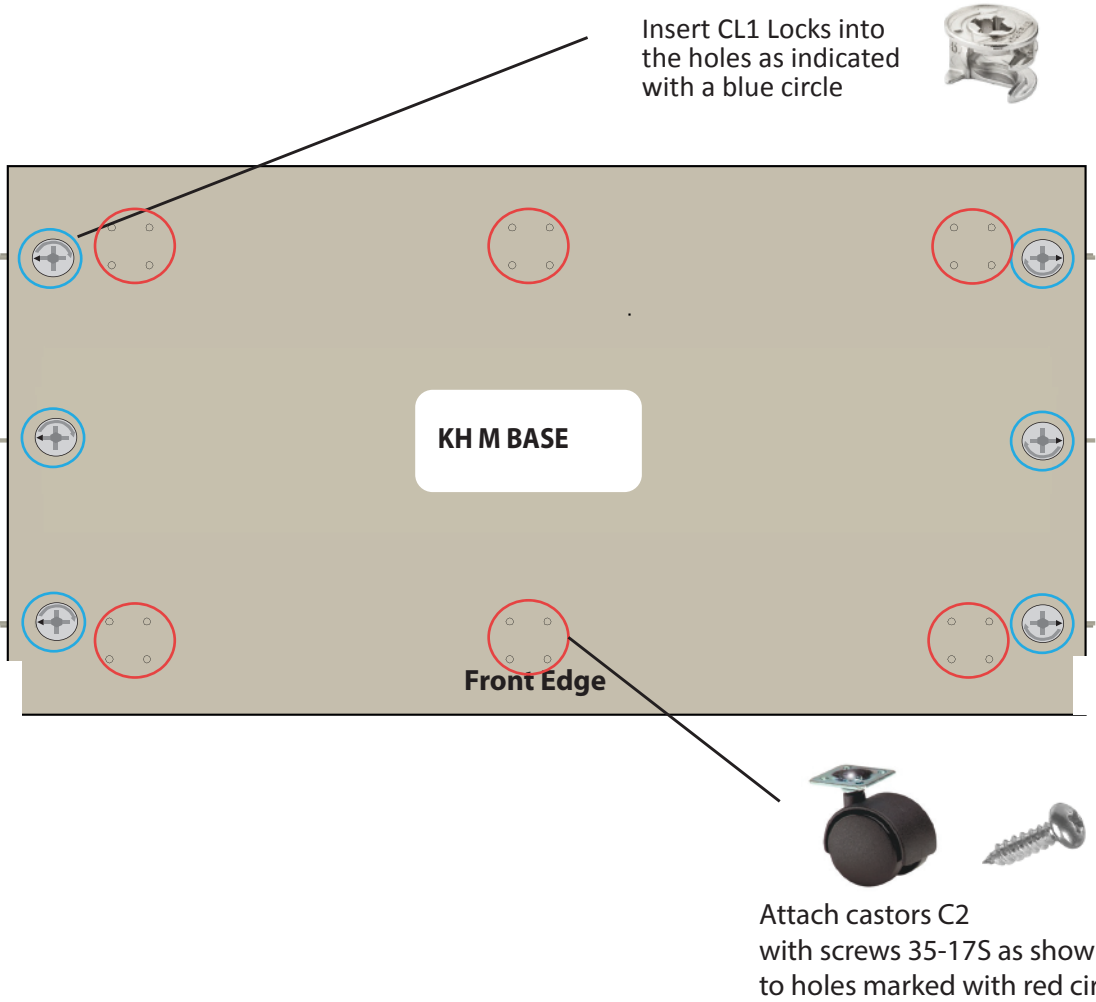

STEP 3

You will need to open box -


Knightshayes 3

You will require the
two panels labelled
KH M MID BACK &
KH M LOW BACK
from this
box keep the other
panel to one side

Insert CL1 Locks into the holes in the 2 panels from this box


STEP 3

With the KH M SIDE laying on the solid flat clean surface (we recommend the floor) attach the two back panels and the base. Secure by turning all of the connecting locks in the backs and the base approx one half turn. Then screw the remaining 35-17D screws into the angle brackets to secure the side to the base.

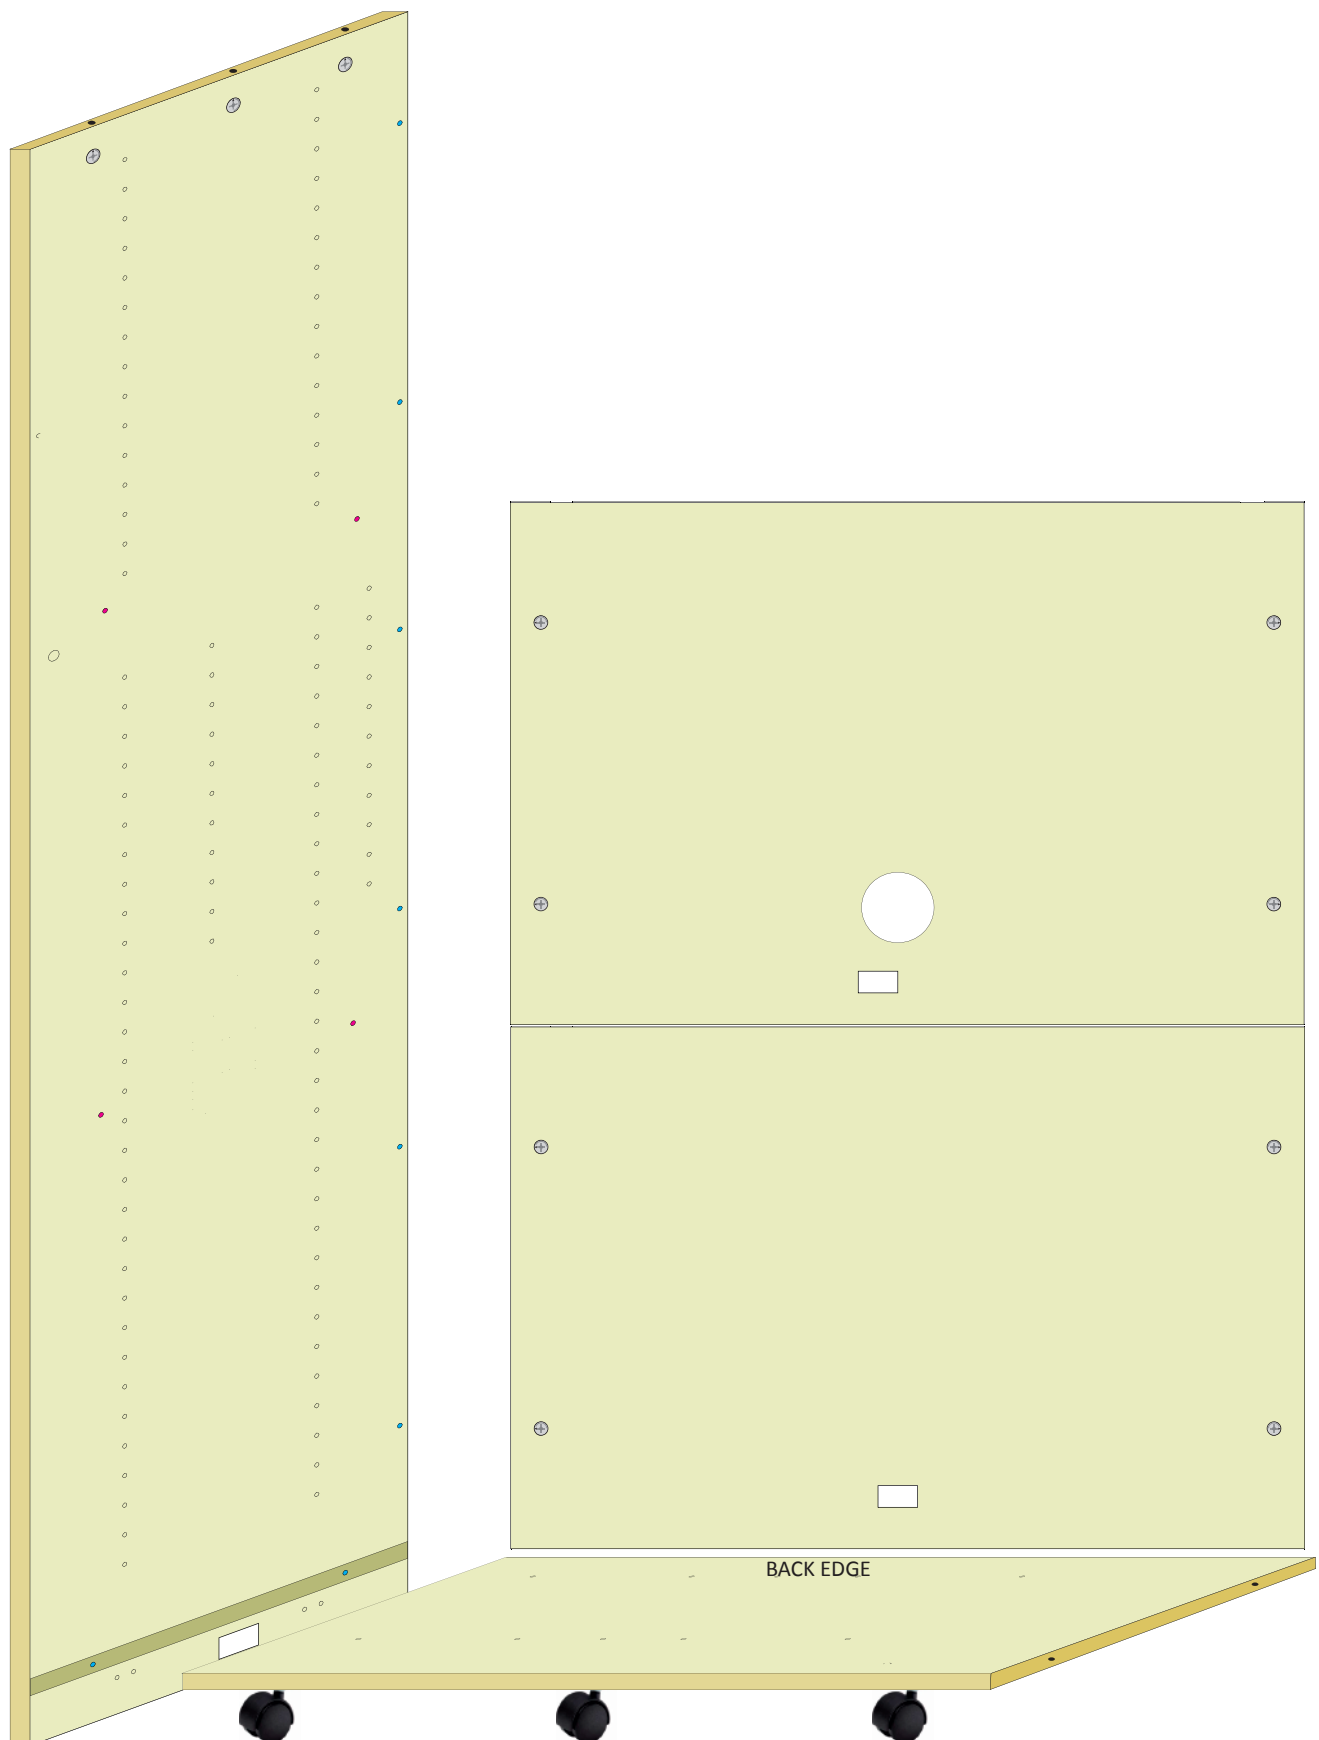

STEP 4

With the unit still laying on the floor place the other KH M SIDE onto the top and secure all the connecting locks and angle brackets. Then carefully stand the unit onto its wheels. **IT IS HIGHLY RECOMMENDED TO HAVE TWO PEOPLE TO COMPLETE THIS STEP TO AVOID INJURY OR DAMAGE TO THE PRODUCT.**

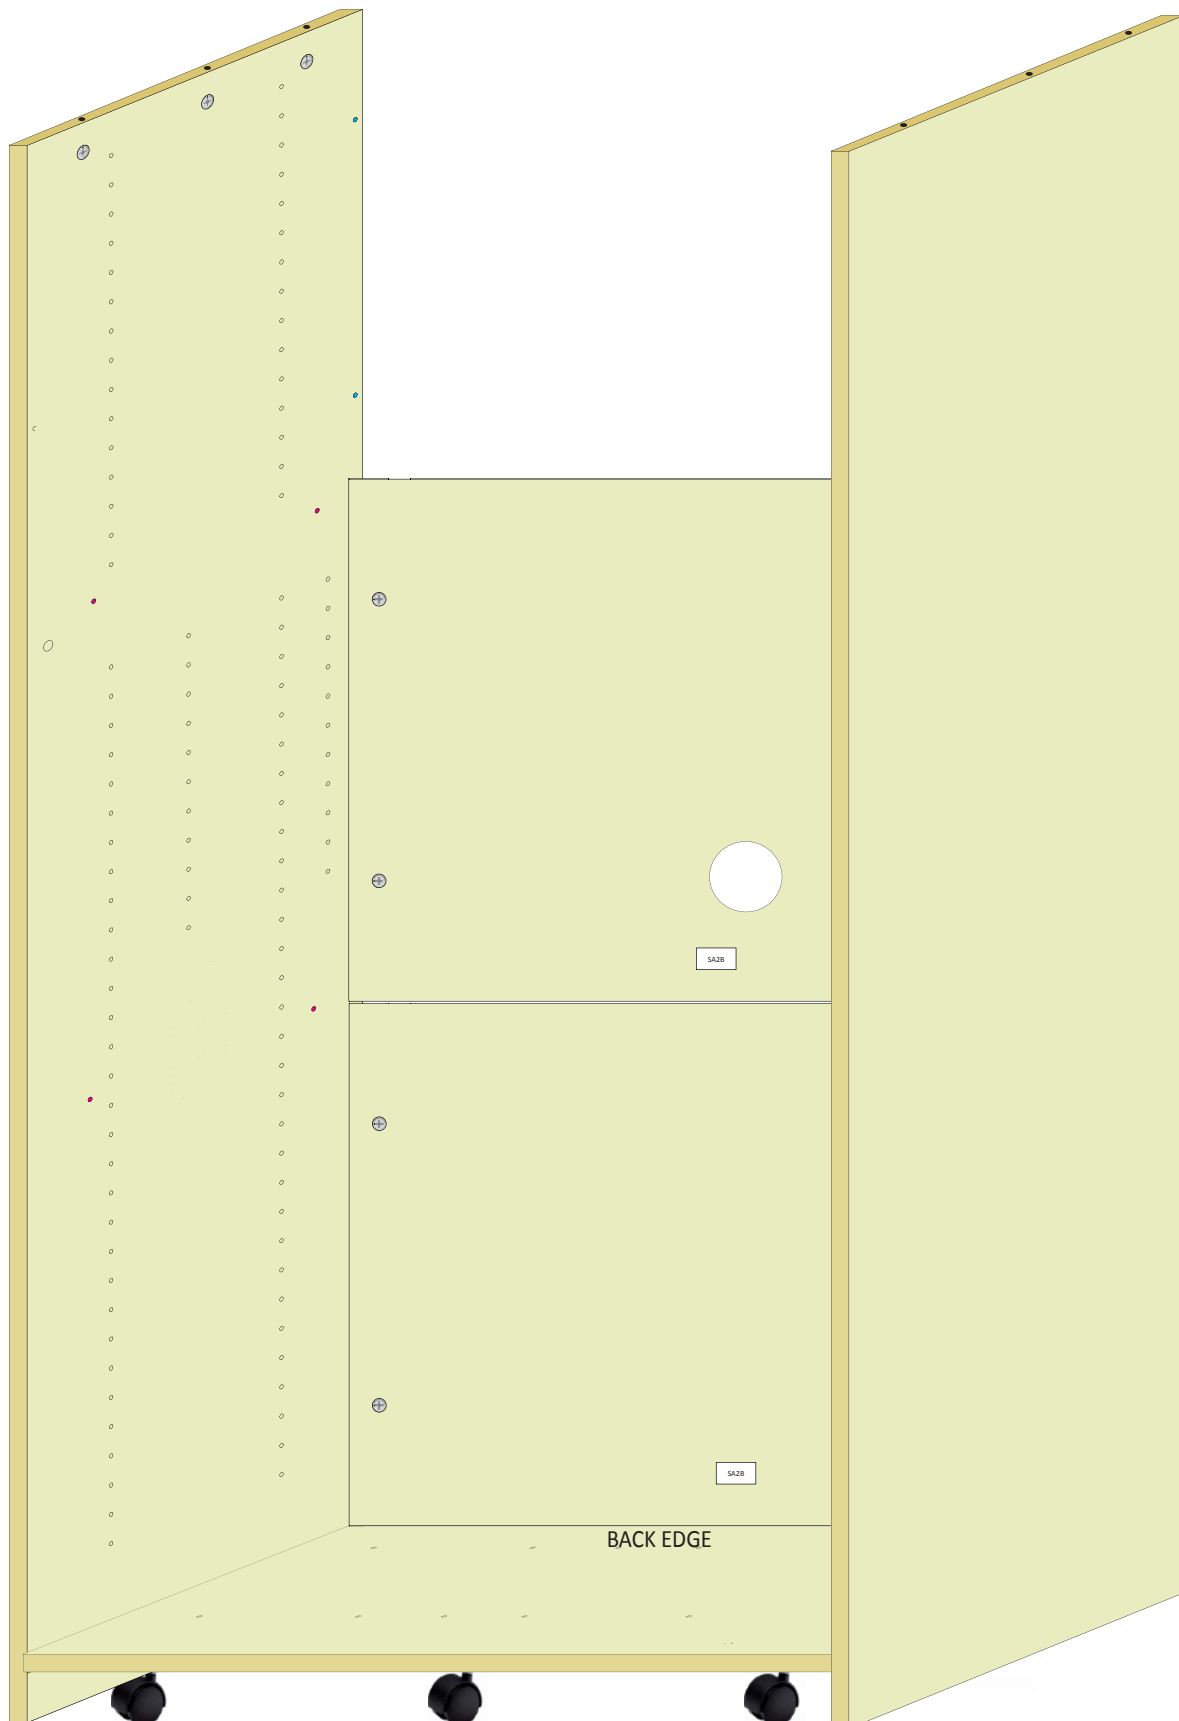


STEP 5

You will need panels from box -

Knightshayes 2


You will require panels KH M LSH from this already opened box

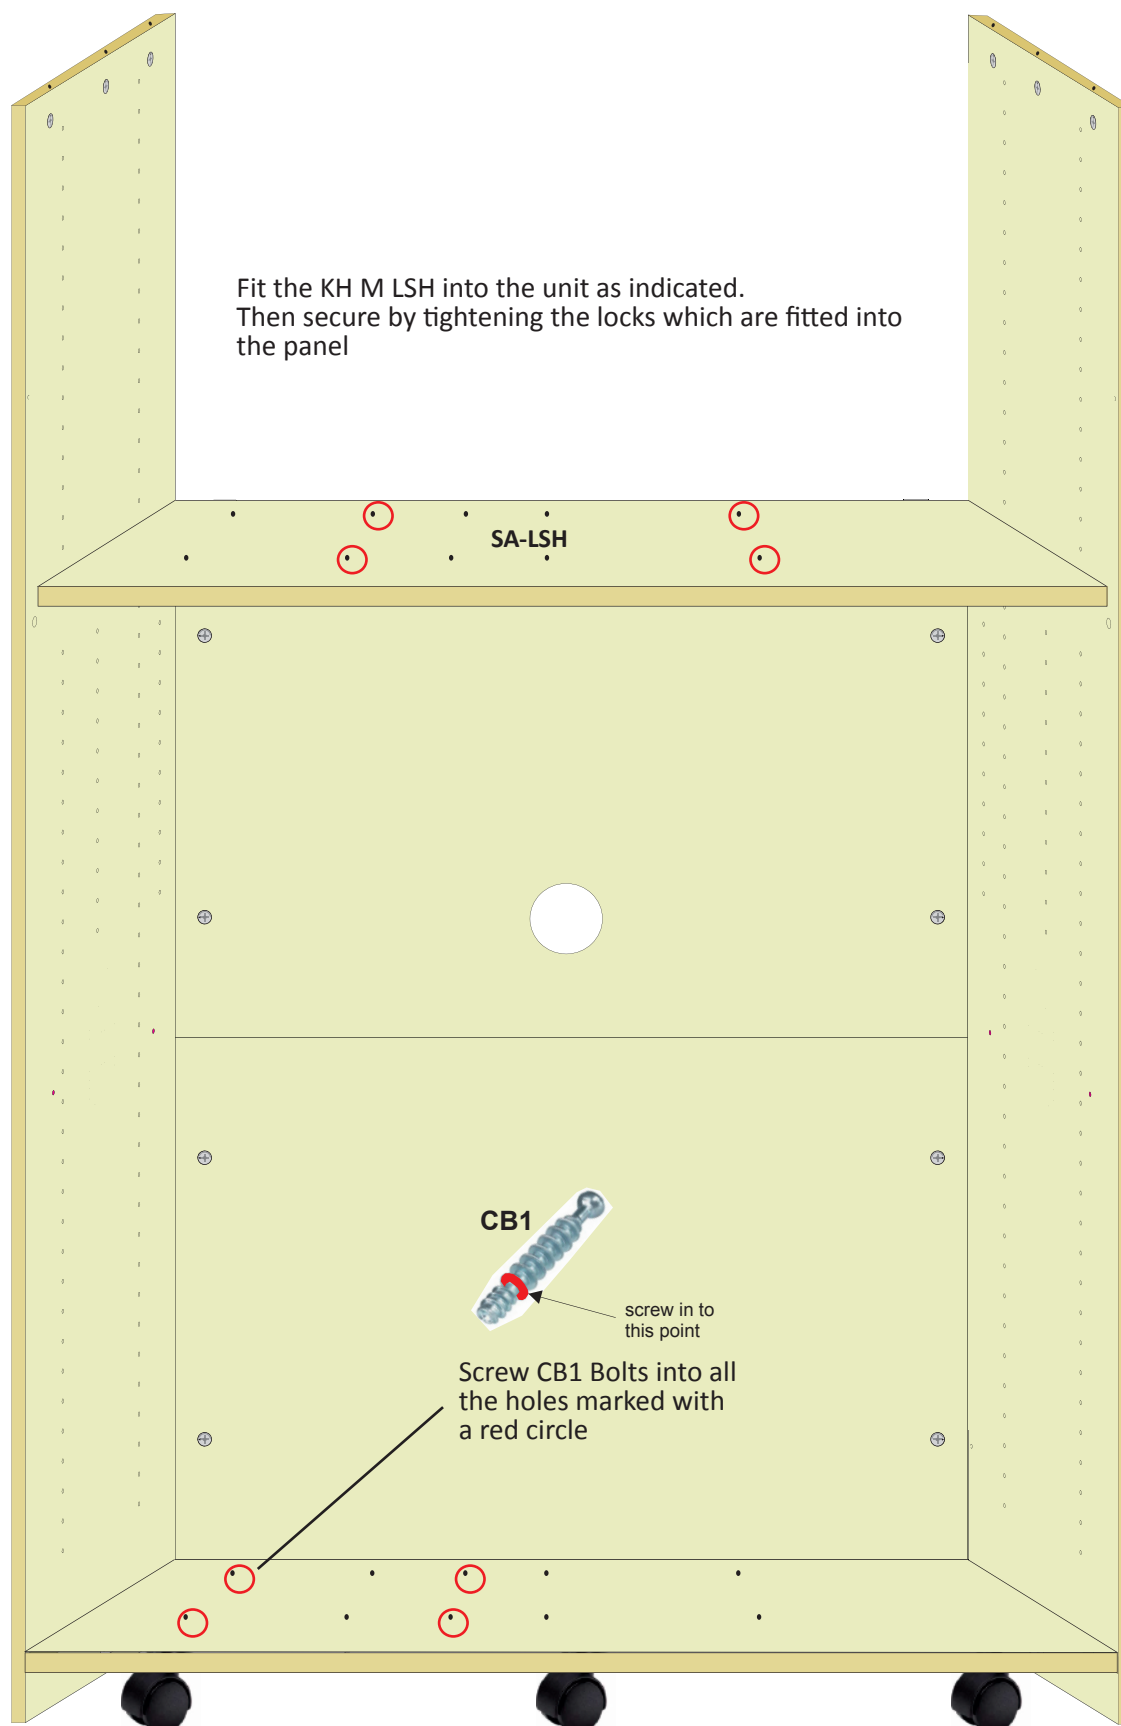

STEP 6
You will need panels from box -

Knightshayes 3

You will require
the final panel from
this box SA-190-BACK

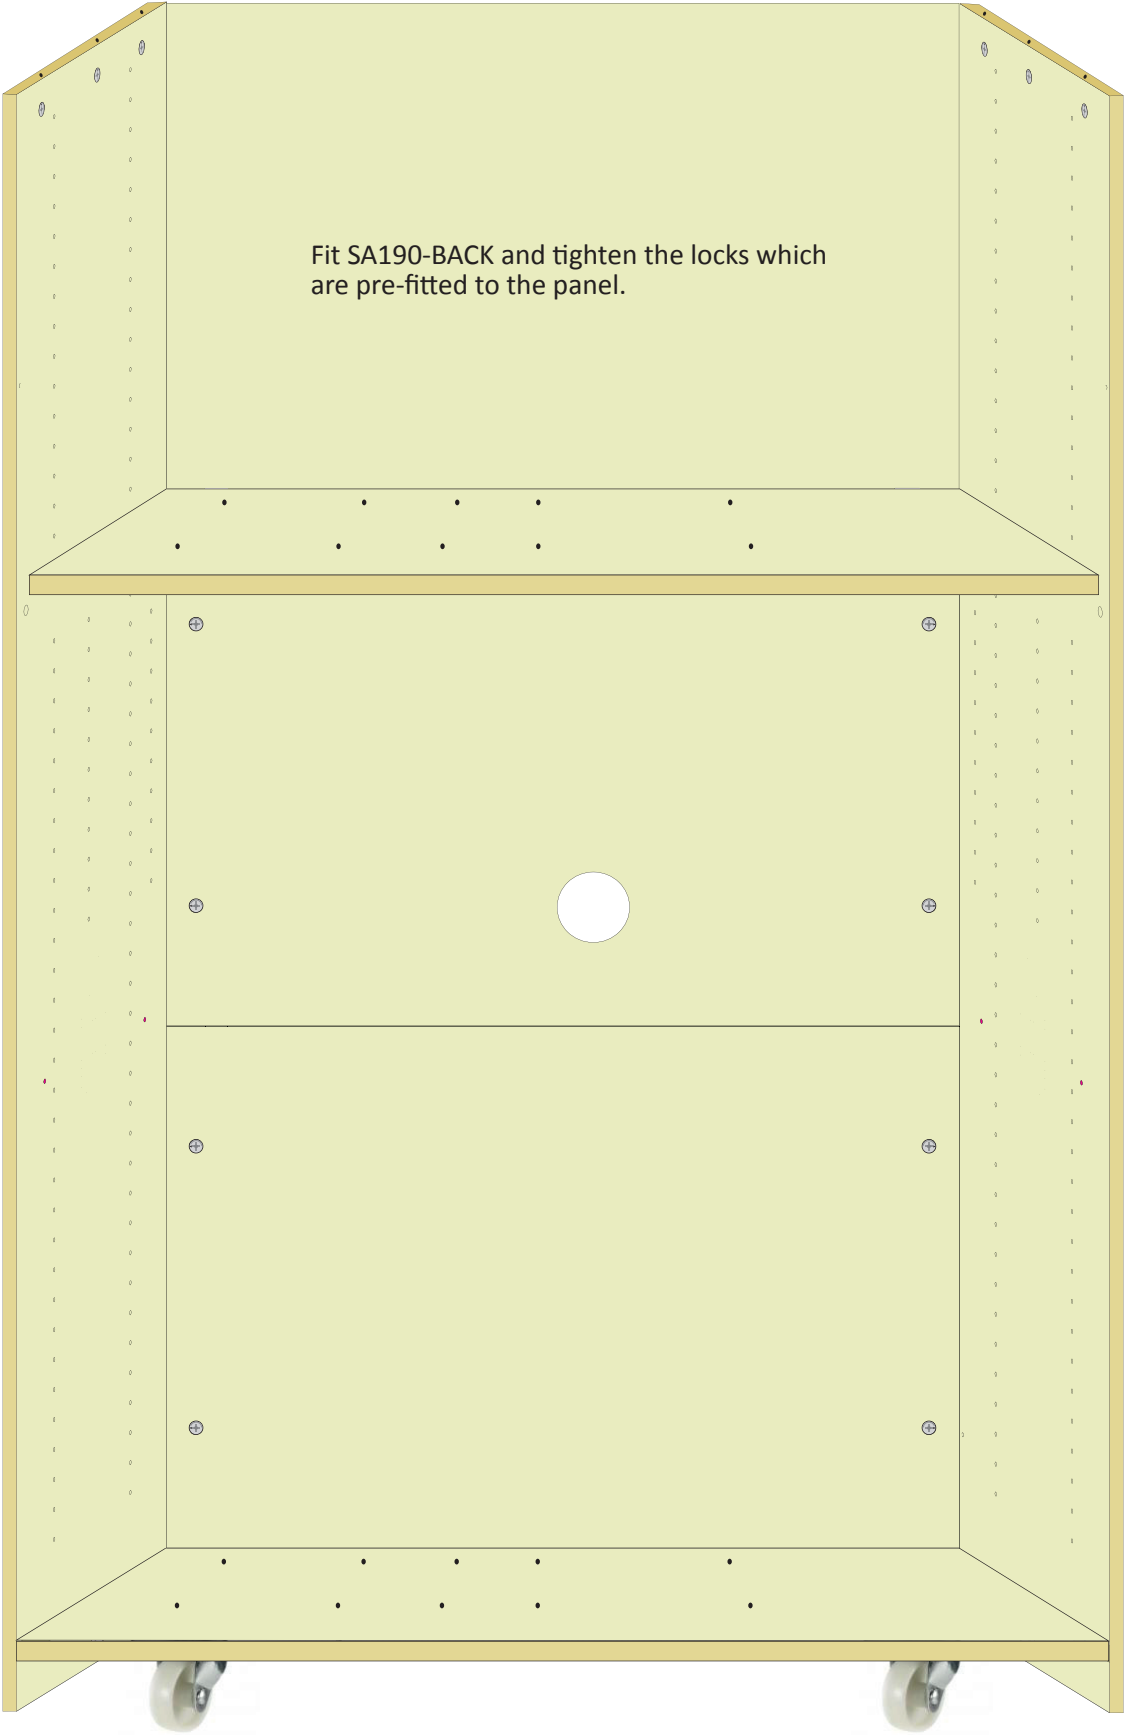


STEP 7

You will need to open box -

Knightshayes 5

You will need panels
KH M BCD x 2 and KH M TCD
x 2 from this box

Ensure the centre dividers are the correct way up with the label indicating the top of the panel at the top.
If in doubt there is also a small 3mm drilled hole in the upper rear corner of the panels to indicate the top.
Insert CL1 connecting locks into all four CD panels (in the same way as in step 2)


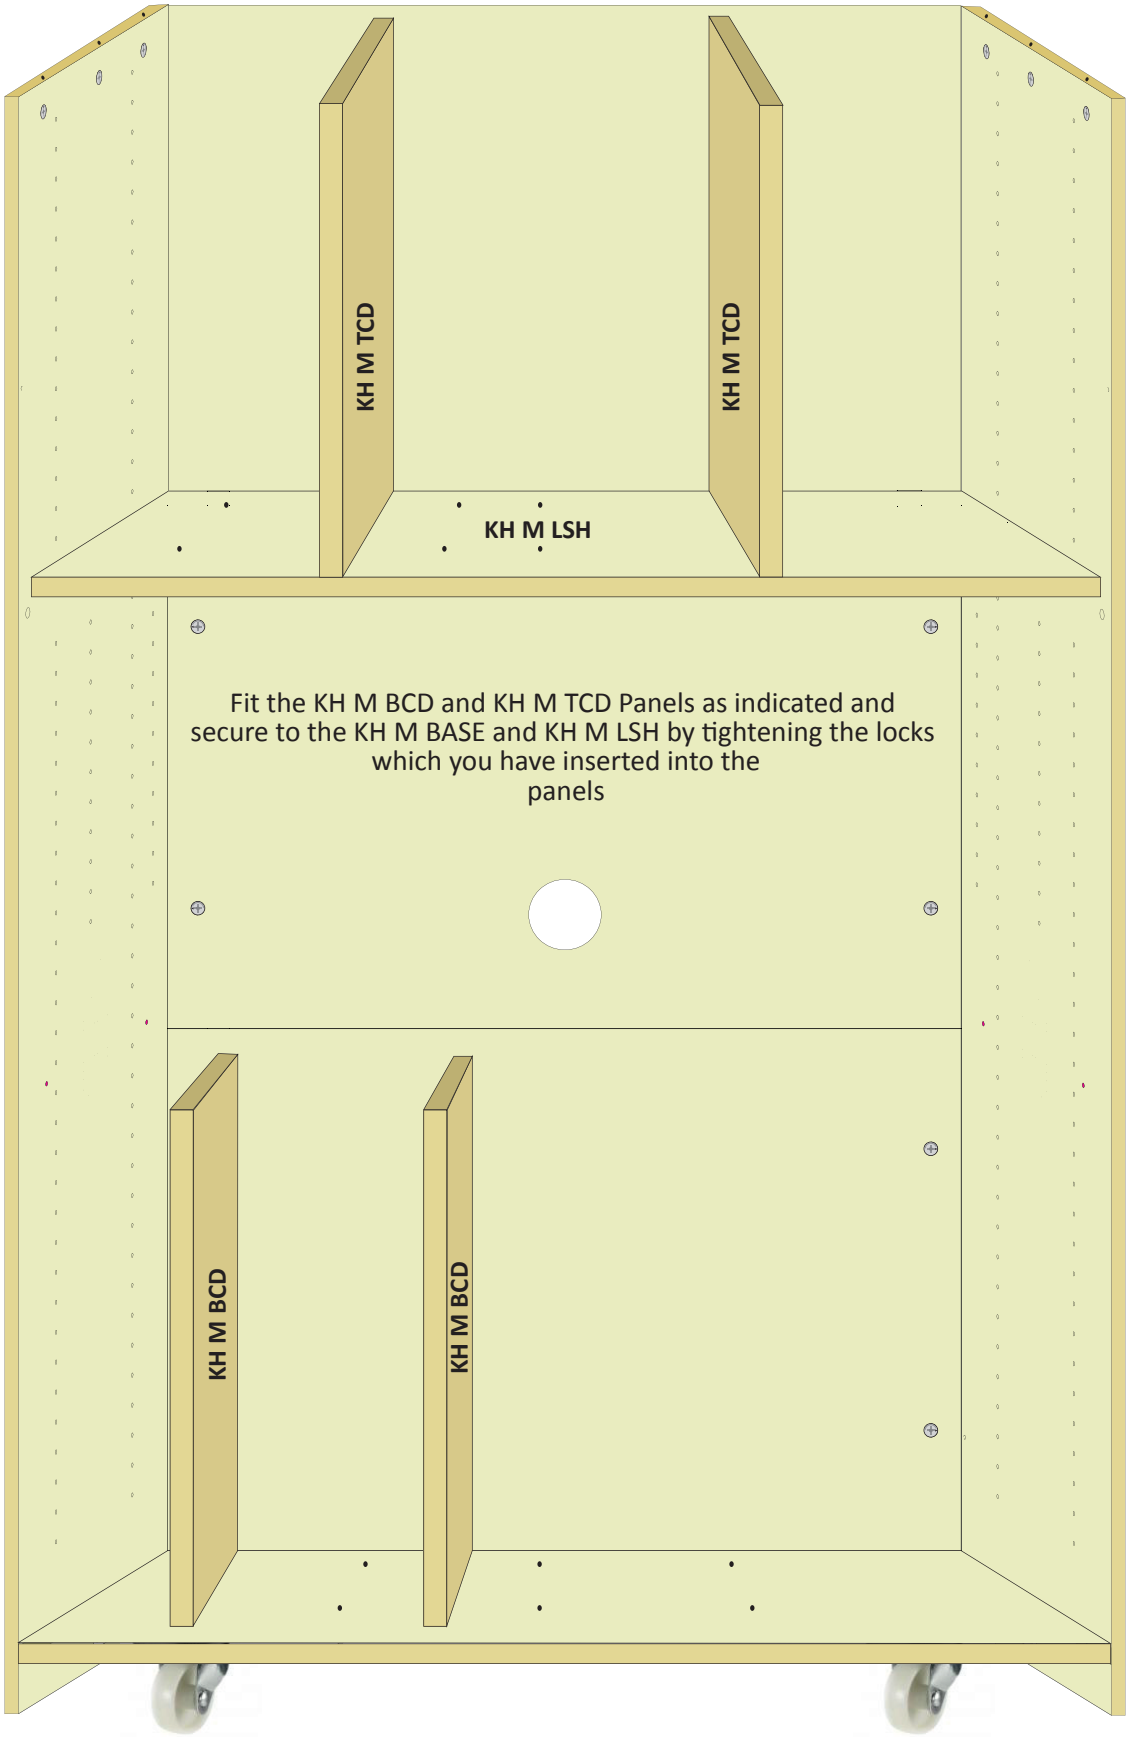


STEP 8

You will need to open box -

Knightshayes 4

You will require panel KH M TOP from this box keep the other panel to one side

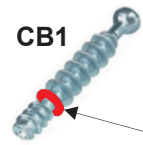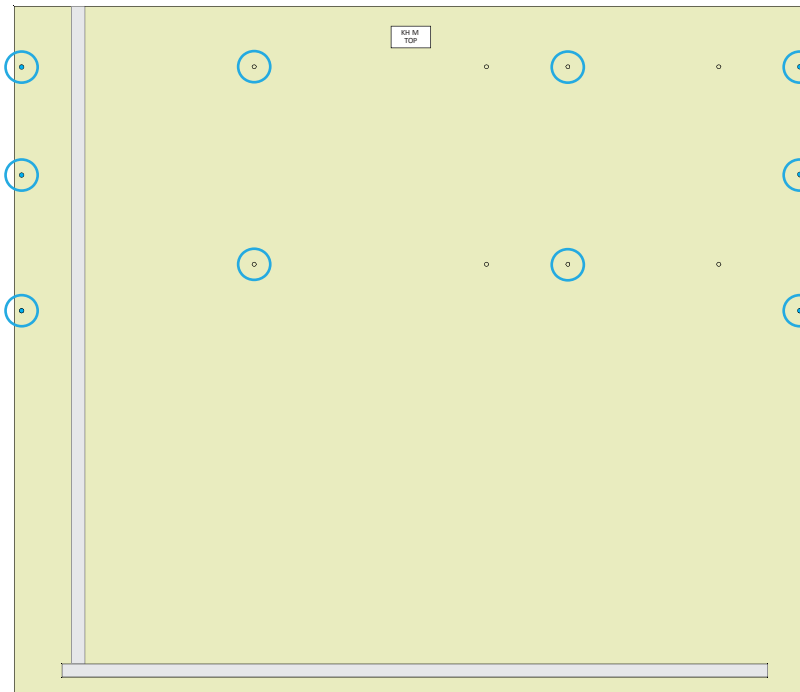

screw in to
this point

Screw CB1 Bolts into all
the holes marked with
a blue circle


Place the KH M TOP onto the top of the section you have already constructed and tighten the connecting locks to secure in both the KH M SIDES and both of the KH M TCD panels.

STEP 9

You will need panels from box -

Knightshayes 2

You will require panels KH M SSH, KH M SH and KH M DS from this box

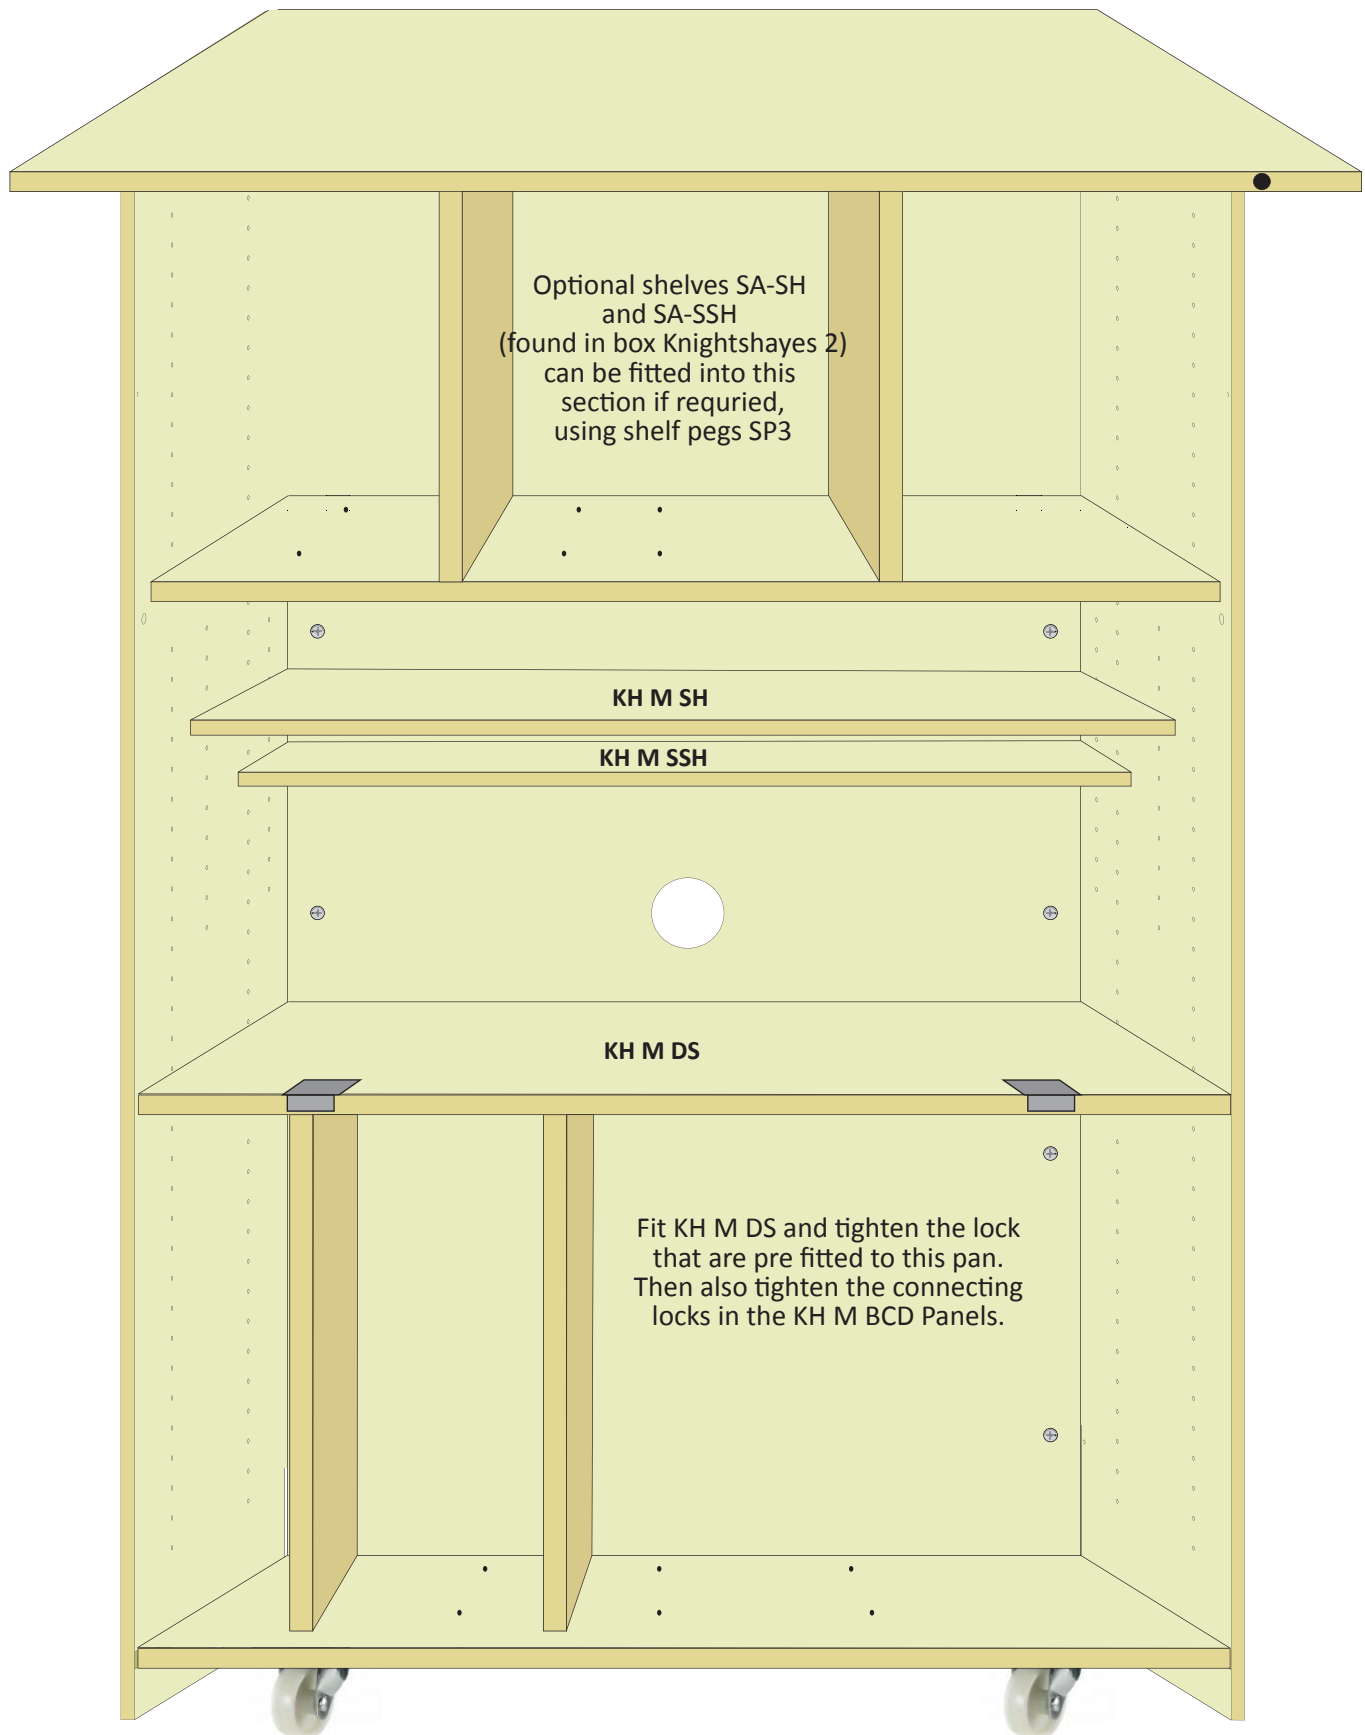


STEP 10

You will need panels from boxes -


Knightshayes 2

Knightshayes 4

You will require the final panel from these boxes KH M DESK, KH M TLEG (left & right) & KH M LBAR

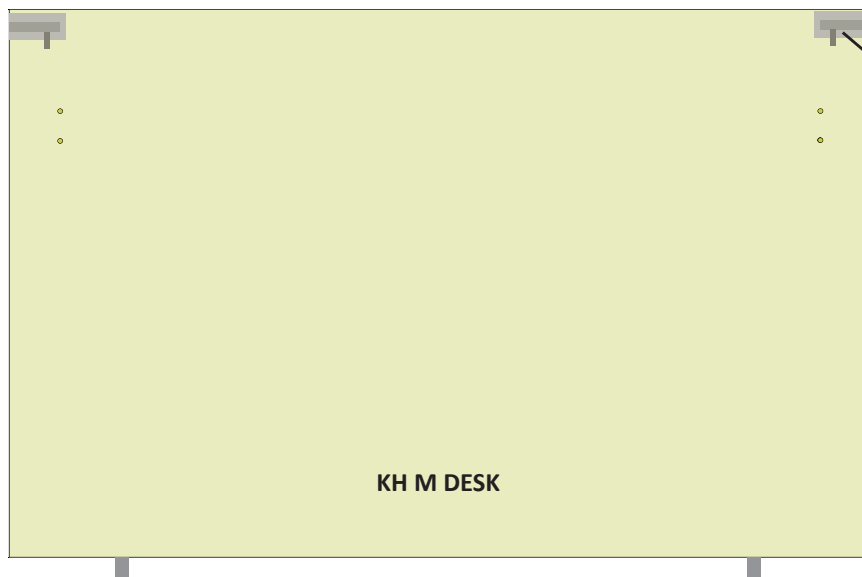


Attach Bolts BB1 with
Screws 30-15S

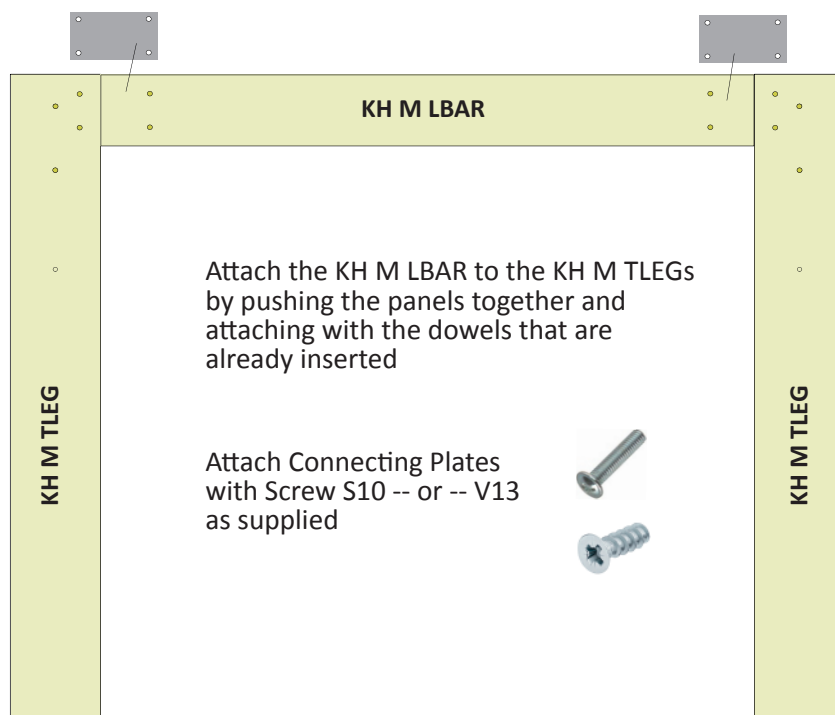

Attach the constructed leg section to the KH M DESK using the Folding Leg Bracket (FLB1) and screws S10 OR V13 as supplied

STEP 11

Attach the complete desk to the main section using the two part hinges that are already attached to the desk and the desk shelf -- OR -- hinge H3 and screws 35-15S as supplied. Once in place ensure it is secured with bolts supplied. The hinges may require a small amount of lubrication on the hinge bar to allow proper free movement.

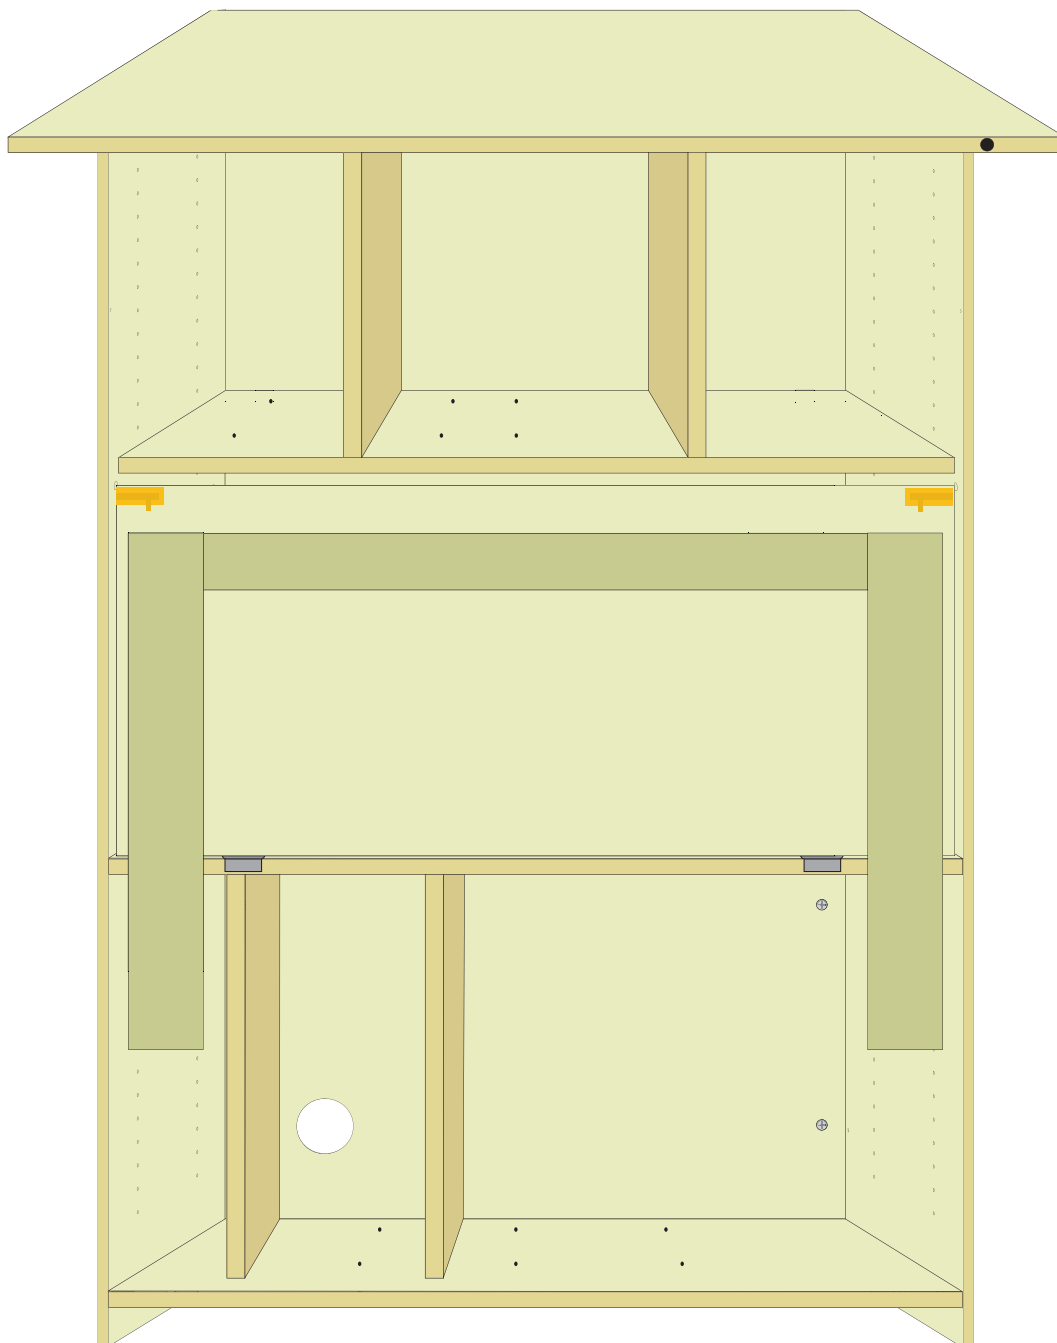

IMPORTANT

WHEN USING THE DESK
ALWAYS MAKE SURE TO
HAVE FOLDED OUT THE
LEG BEFORE UNDOING
THE BOLT AND FOLDING
THE DESK DOWN.
FAILURE TO DO THIS MAY
RESULT IN DAMAGE TO
THE HINGES AND THE UNIT

THIS COMPLETES CONSTRUCTION OF THE
CENTRE SECTION OF YOUR UNIT

STEP 12

You will need to open box -


Knightshayes 6

You will need panels
all of the panels from
this box

Before you start to construct this section you need to decide if you would like it to be fitted to the Left Hand side or the Right Hand side of the centre section. The standard configuration is to fit it to the Left Hand Side.

OPTION 1 - To fit to the LEFT HAND SIDE

OPTION 2 - To fit to the RIGHT HAND SIDE

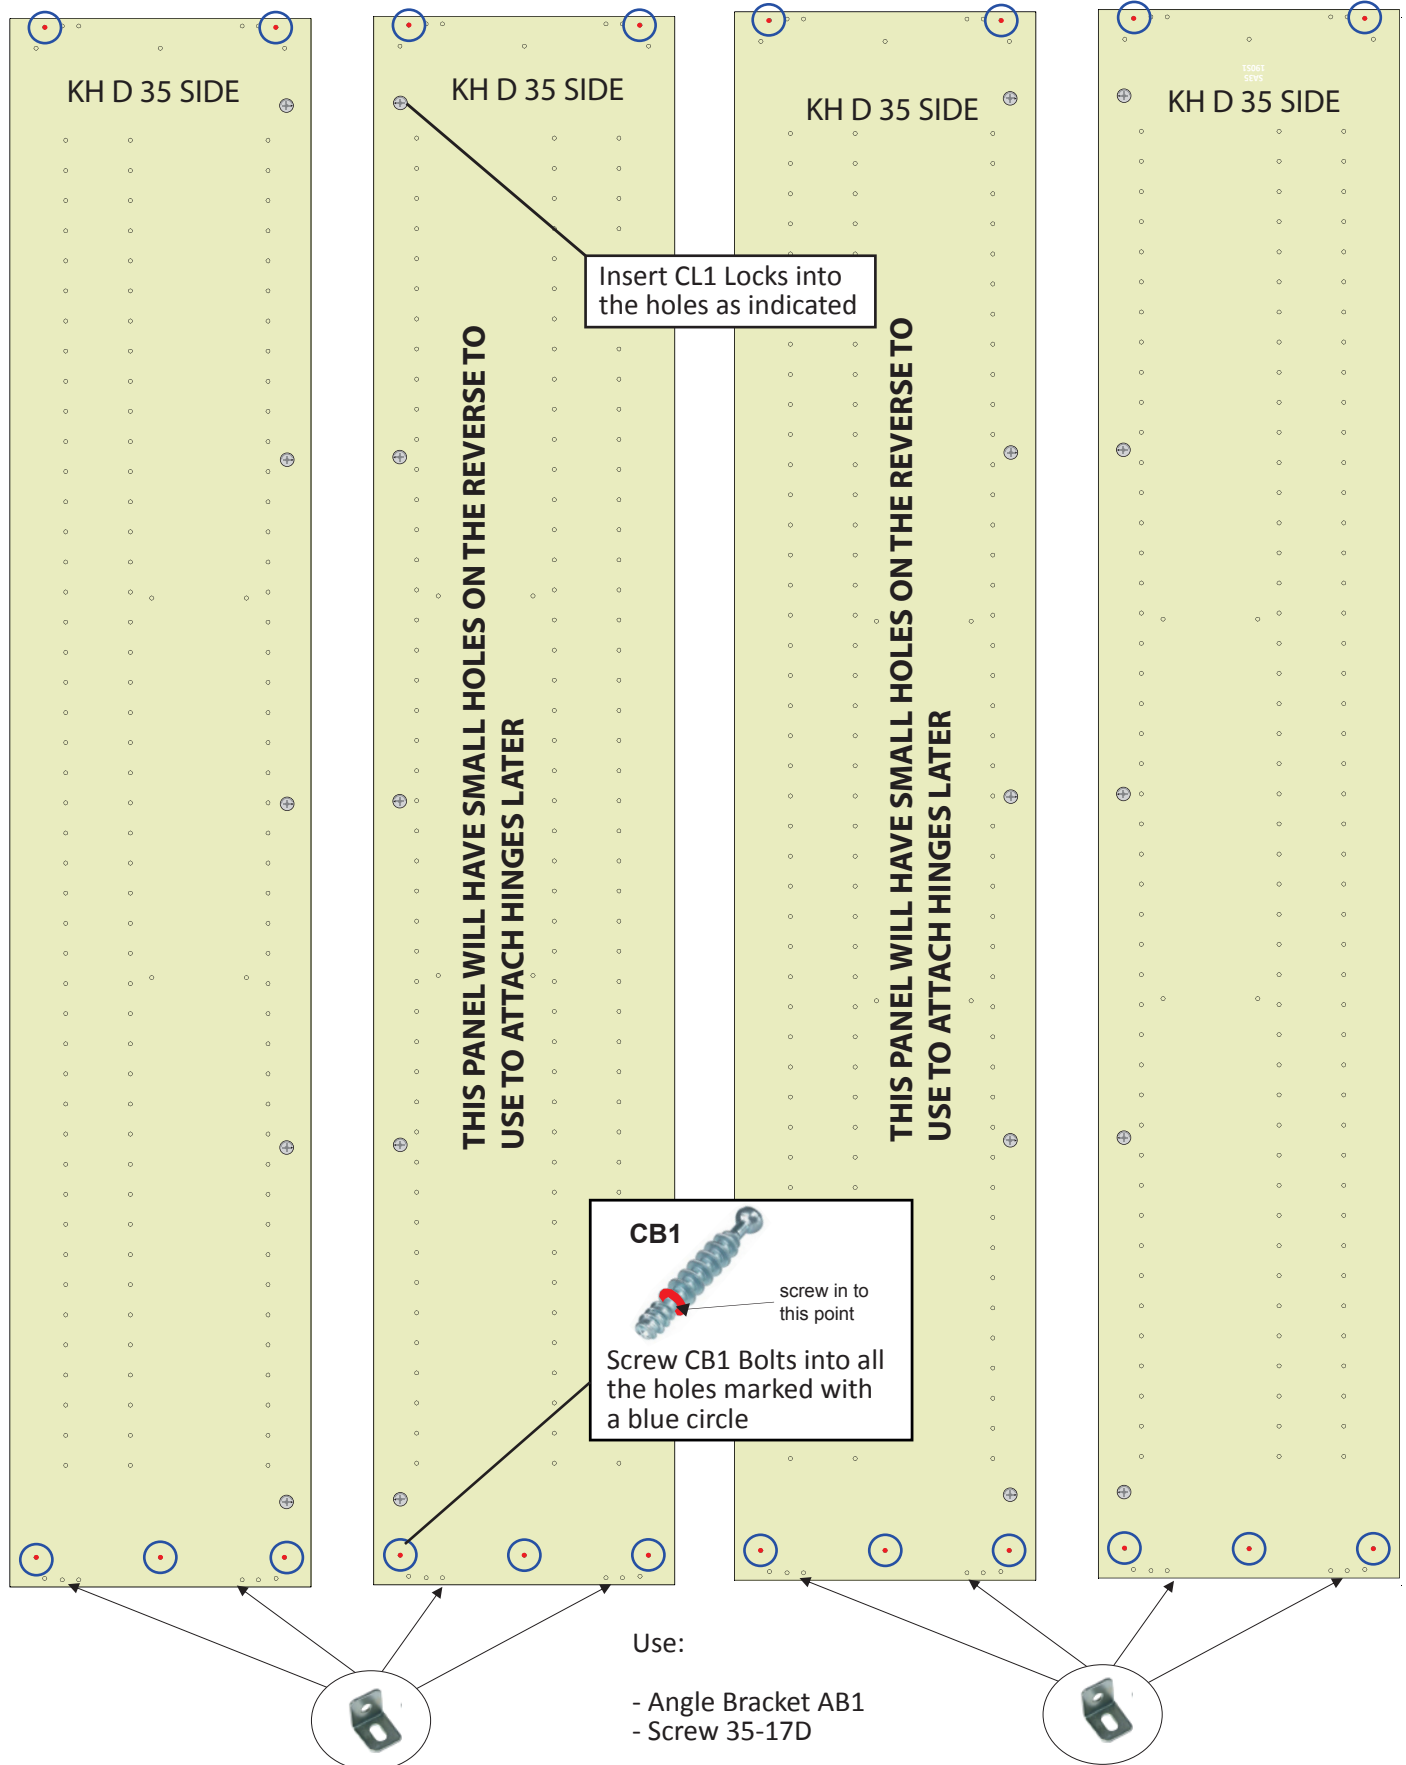


STEP 13

You will need to open box -

Knightshayes 8

You will need panels
SA35-TOP &
SA35-BASE from this box


Insert CL1 connecting locks into the SA35-TOP and the SA35-BASE as shown below. Then attach the C2 casters to the SA35-BASE using screws 35-17D as shown below.

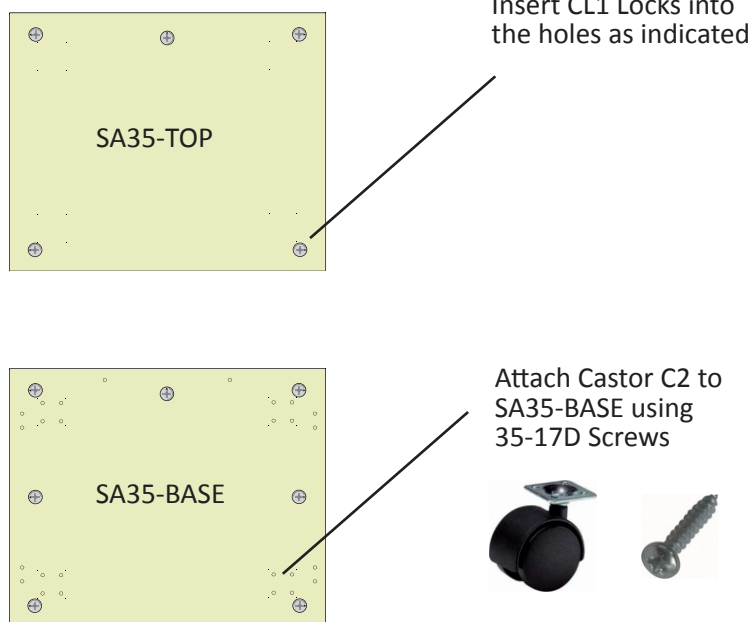


STEP 14

With the KH D 35 SIDE laying on the solid flat clean surface (we recommend the floor). Attach both KH D SIDES to the KH D BASE and KH D TOP and secure by tightening the locks you have already fitted. Then fix the angle brackets to the base using screw 35-17D.

OPTION 1 - To fit to the LEFT HAND SIDE

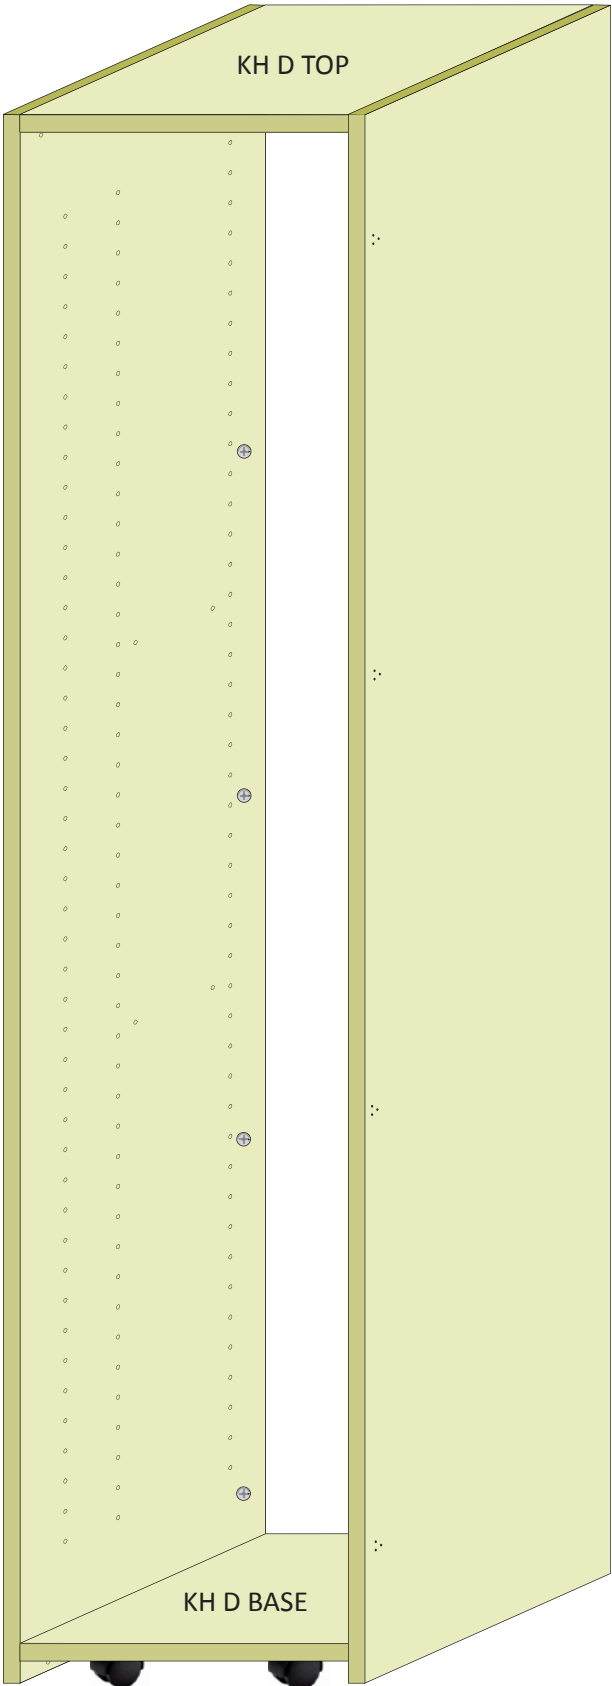

OPTION 2 - To fit to the RIGHT HAND SIDE

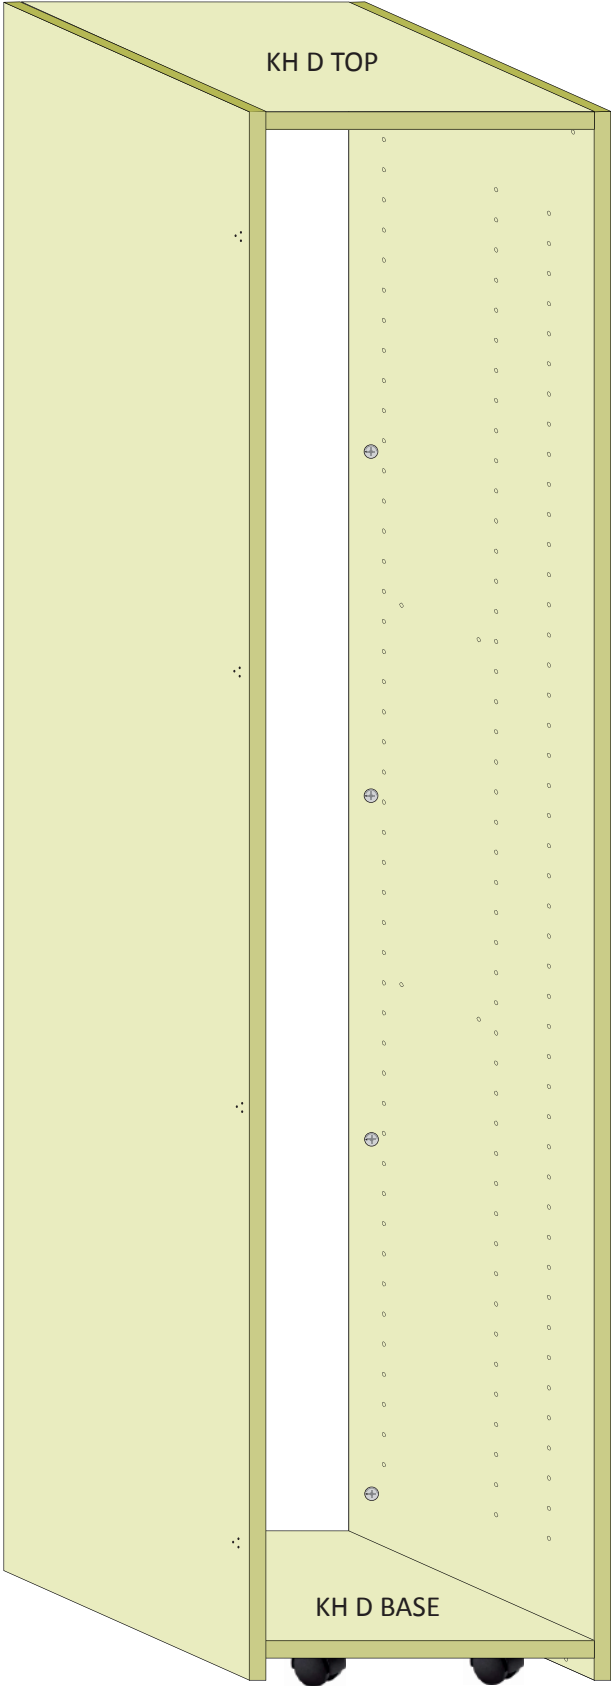

STEP 15


You will need to open box -

Knightshayes 12

With the Door Fascia Panel KH D FASCIA laying on the solid flat clean surface (we recommend the floor). Attach the section that you have already assembled and secure by tightening the locks which you have already inserted into the panels.

OPTION 1 - To fit to the LEFT HAND SIDE


OPTION 2 - To fit to the RIGHT HAND SIDE

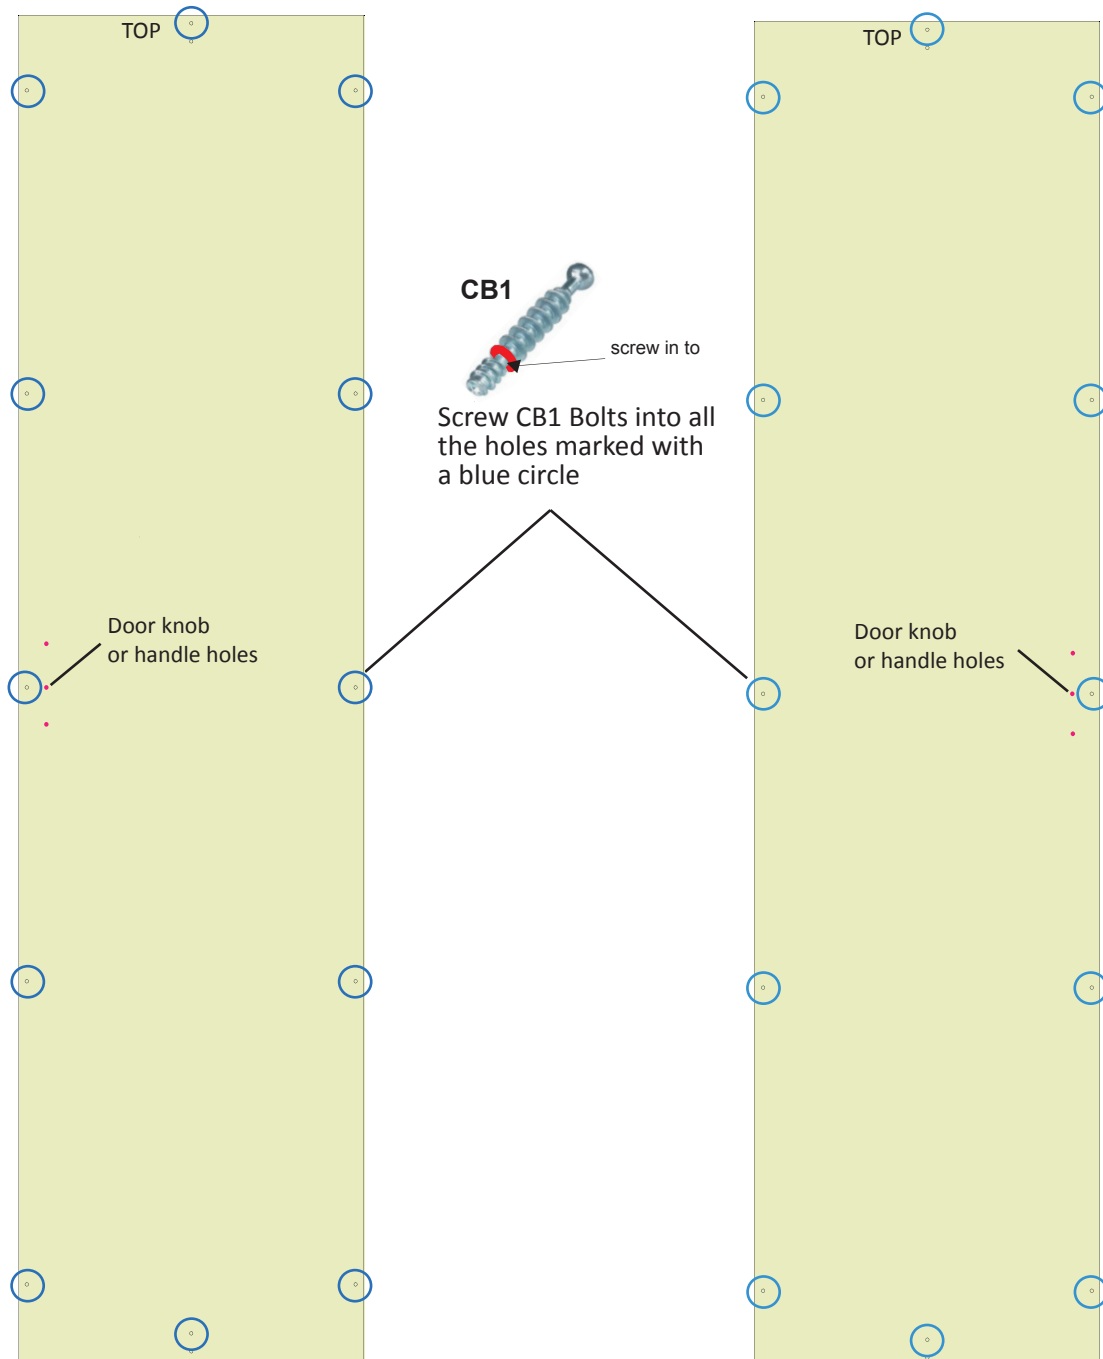

STEP 16



Using Hinge H2 and Screws 30-15S attach the completed door section to the centre section you have already constructed.


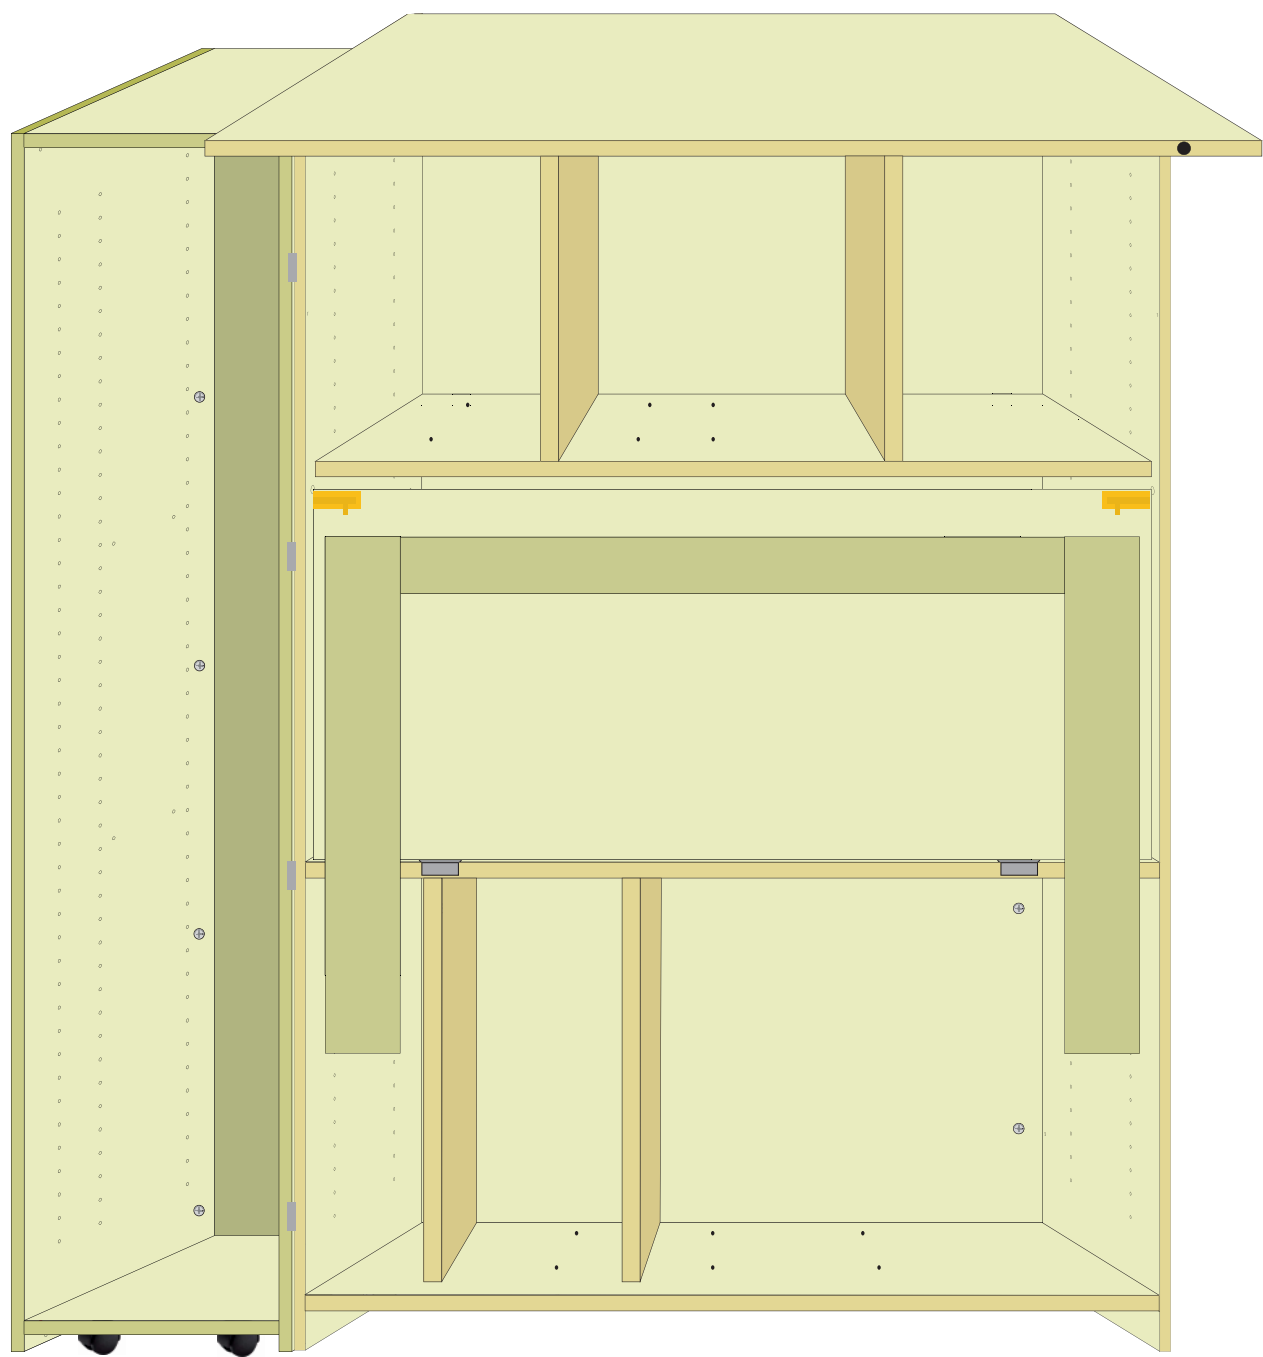


STEP 17


You will need to open box -

Knightshayes 9

You will require
panels KH D DLEG &
KH D DESK
from this box

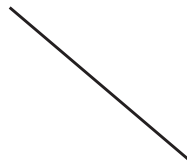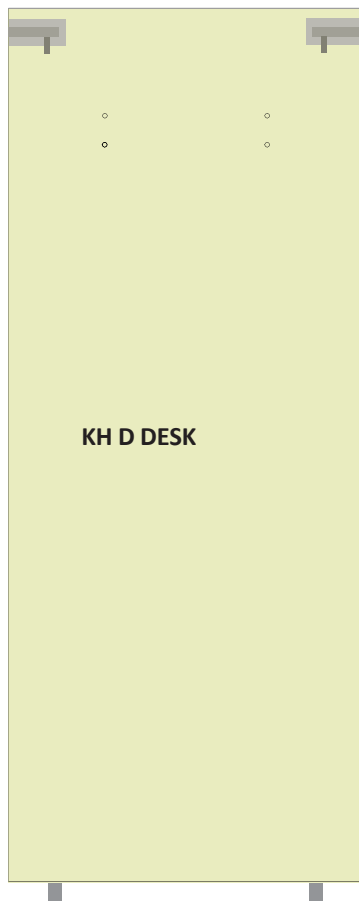

Attach Bolts BB1 with
Screws 30-15S

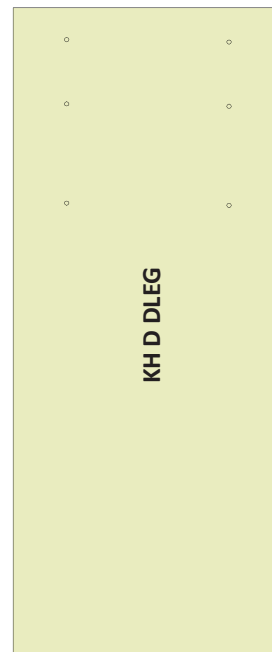

Attach the KH D DLEG to the KH D DESK using the Folding Leg Bracket (FLB1) and screws
S10 OR V13 as supplied



STEP 18

You will need to open box -


Knightshayes 9

You will require
the final panel
SA35-DS from this
box




Screw CB2 Bolts into all the holes marked with a red circle and indicated with an arrow below.

Fit the KH D DS panel onto the CB2 bolts you have fitted and tighten the fittings to secure the shelf

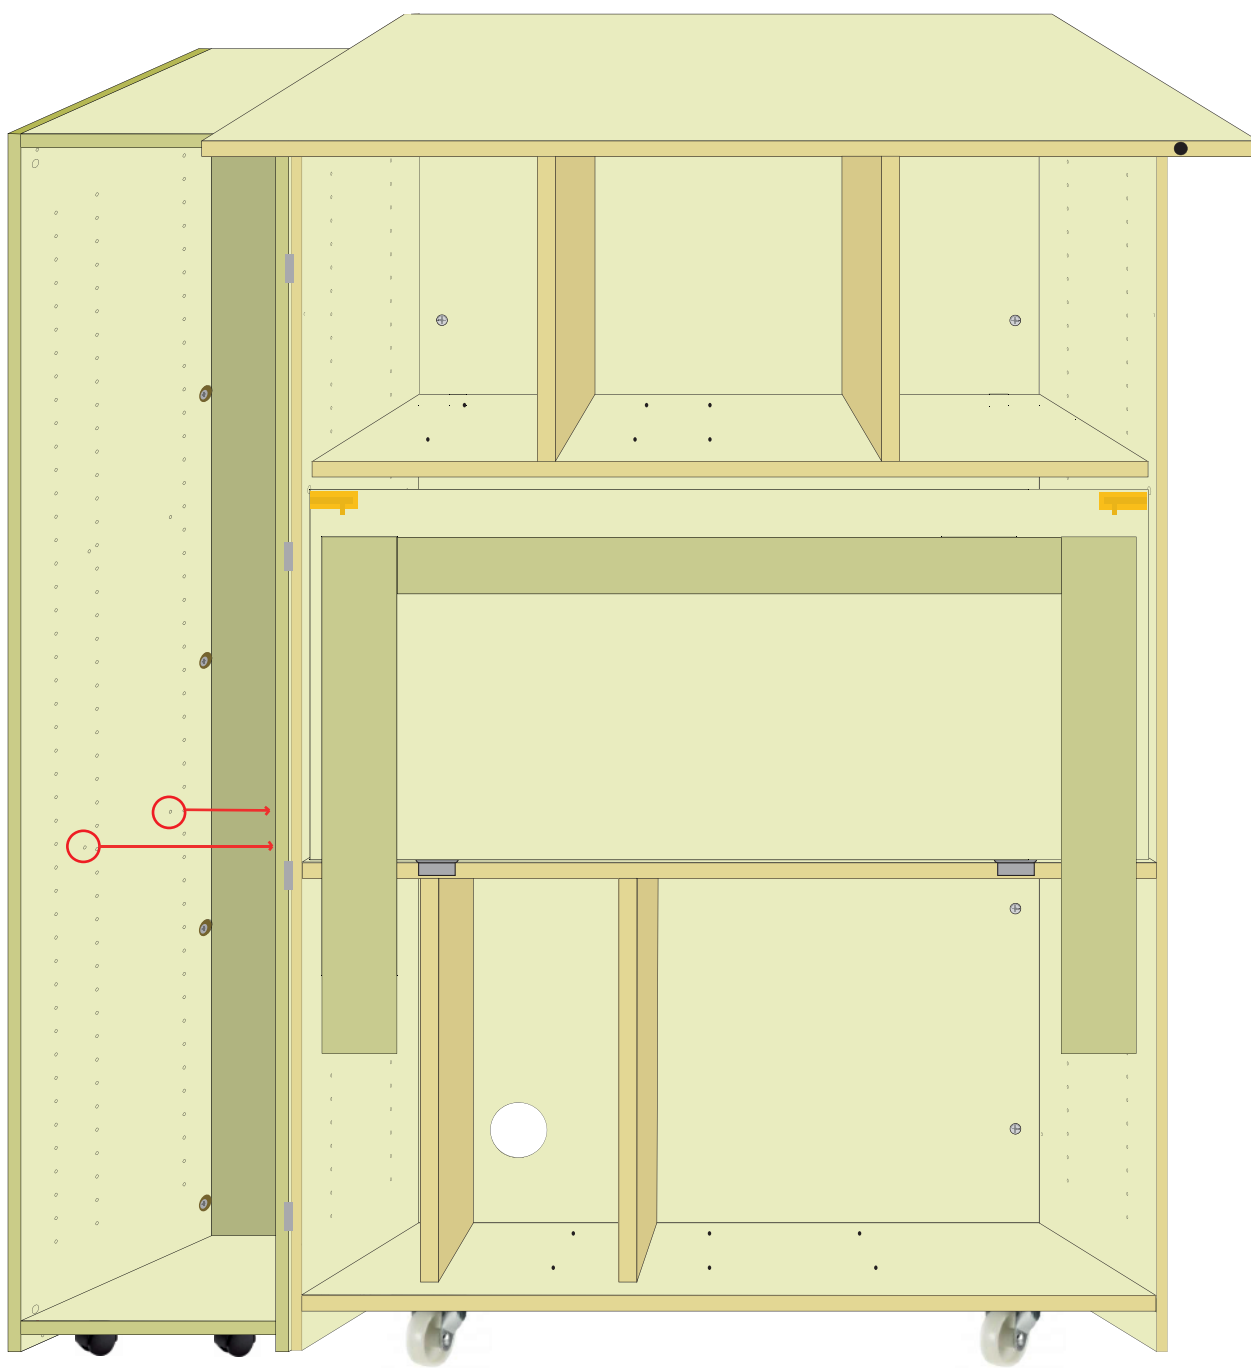

STEP 19

Attach the complete desk to the door section using the two part hinges that are already attached to the desk and the desk shelf -- OR -- hinge H3 and screws 35-15S as supplied. Once in place ensure it is secured with bolts supplied. The hinges may require a small amount of lubrication on the hinge bar to allow proper free movement.

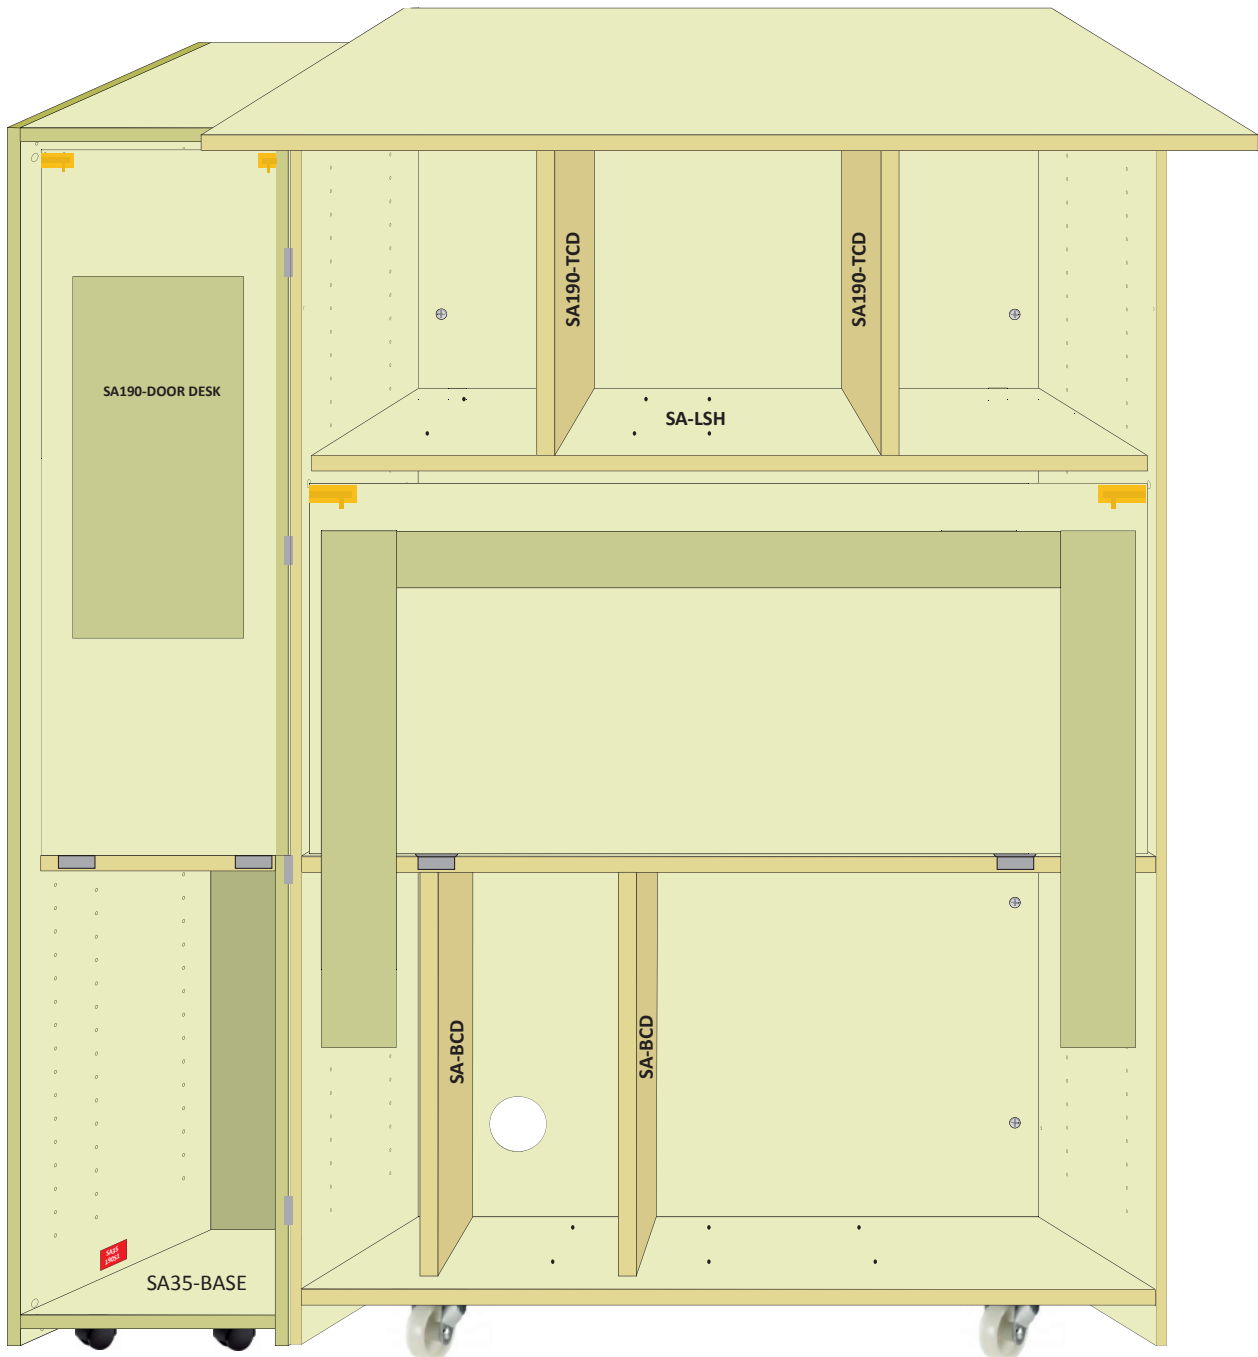

IMPORTANT

WHEN USING THE DESK
ALWAYS MAKE SURE TO
HAVE FOLDED OUT THE
LEG BEFORE UNDOING
THE BOLT AND FOLDING
THE DESK DOWN.
FAILURE TO DO THIS MAY
RESULT IN DAMAGE TO
THE HINGES AND THE UNIT

STEP 20

You will need panels from box -


Knightshayes 7

You will need panels
KH D 26 SIDE &
KH D 35 SIDE from
this box

Before you start to construct this section you need to decide if you would like it to be fitted to the Left Hand side or the Right Hand side of the centre section. The standard configuration is to fit it to the Right Hand Side.

OPTION 1 - To fit to the LEFT HAND SIDE

OPTION 2 - To fit to the RIGHT HAND SIDE

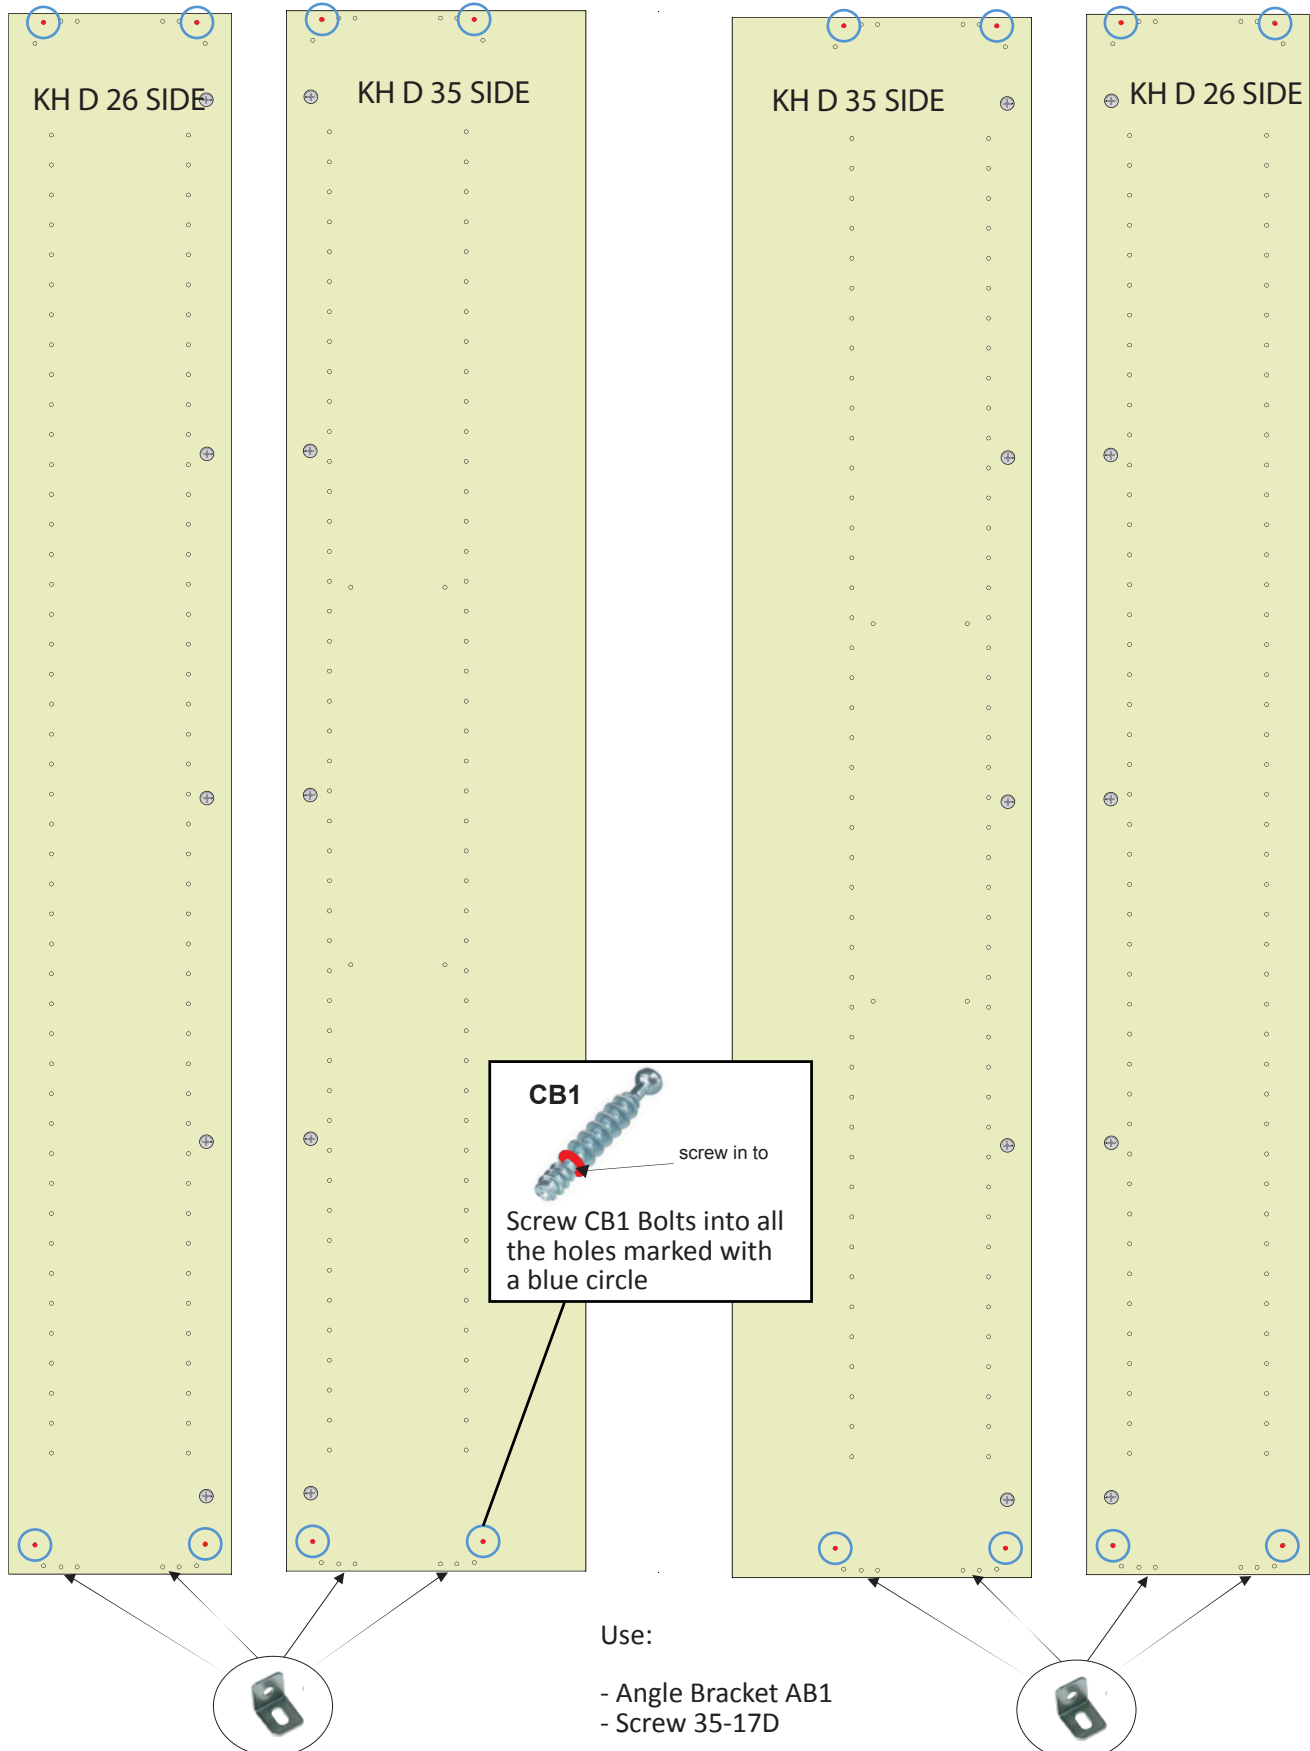



STEP 21

You will need panels from box -

Knightshayes 8

You will need panels
KH D 26 TOP &
KH D 26 BASE from this box


Insert CL1 connecting locks into the KH D 26 TOP and the KH D 26 BASE as shown below. Then attach the C2 casters to the KH D 26 BASE using screws 35-17D as shown below.

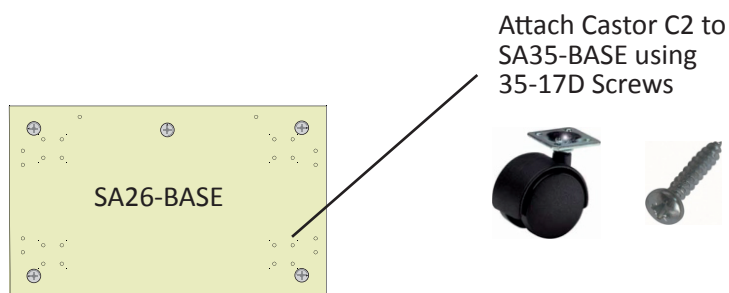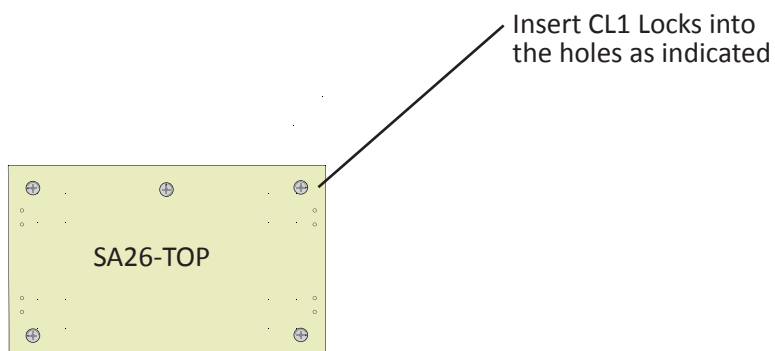


STEP 22

With the KH D 35 SIDE laying on the solid flat clean surface (we recommend the floor). Attach the KH D 35 SIDE and KH D 26 SIDE to the KH D 26 BASE and KH D 26 TOP and secure by tightening the locks you have already fitted to the panels. Then fix the angle brackets to the base using screw 35-17D.

OPTION 1 - To fit to the LEFT HAND SIDE

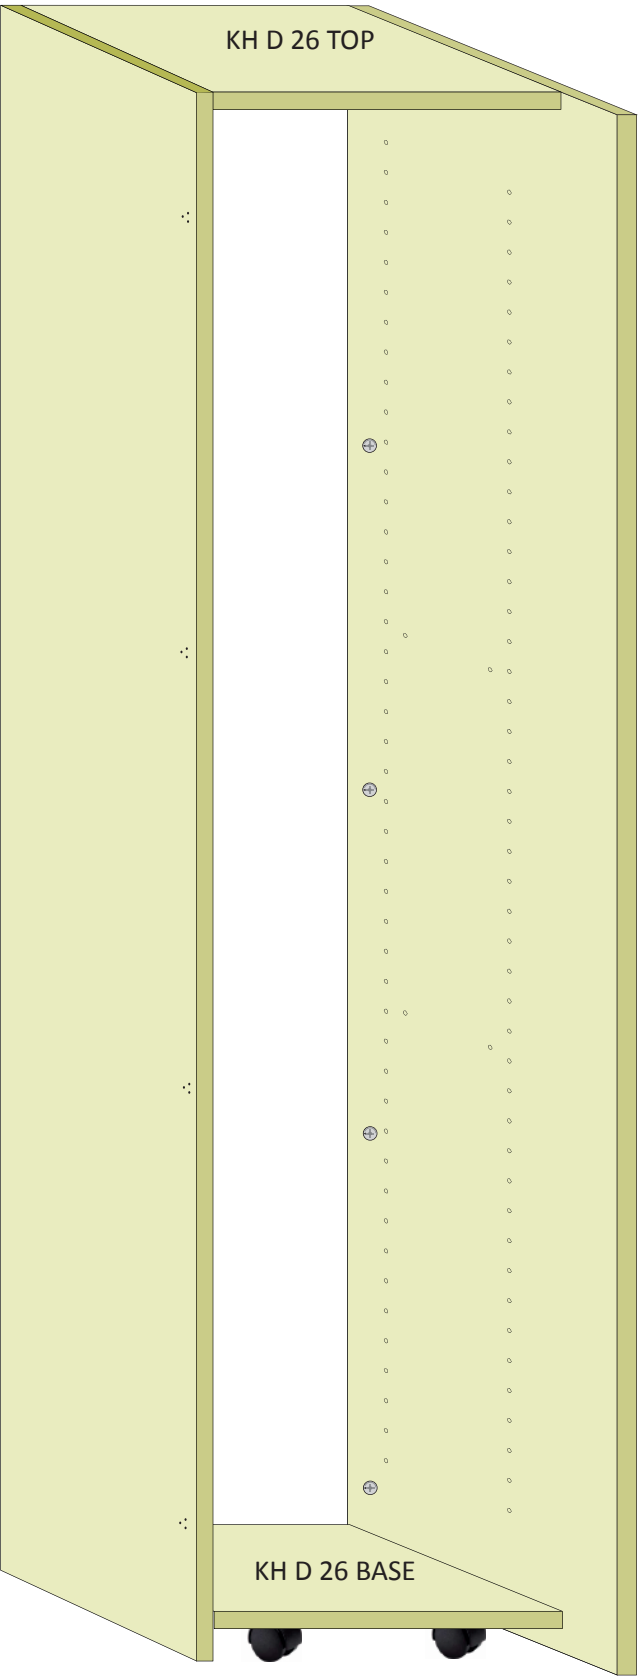

OPTION 2 - To fit to the RIGHT HAND SIDE

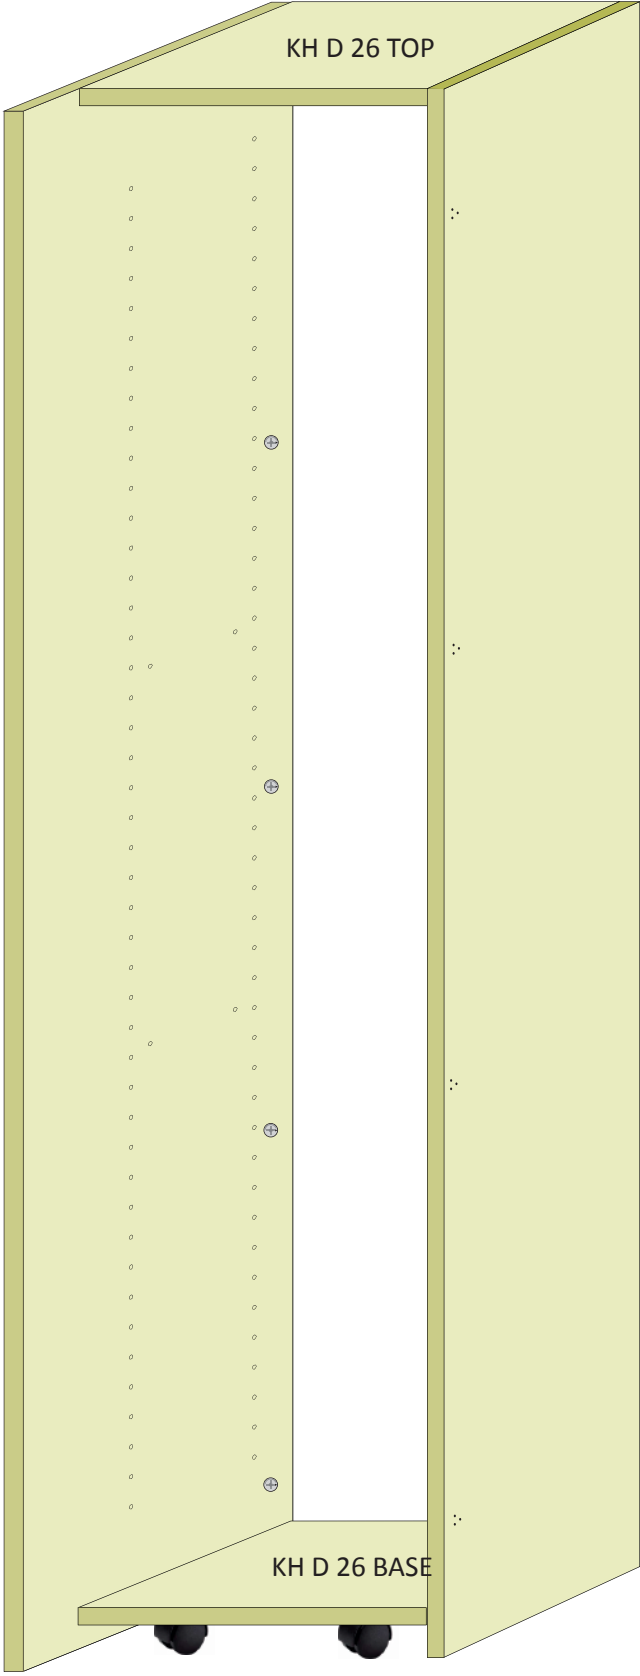

STEP 23


You will need panels from box -

Knightshayes 12

With the Door Fascia Panel KH D FASCIA laying on the solid flat clean surface (we recommend the floor). Attach the section that you have already assembled and secure by tightening the locks which you have already inserted into the panels.

OPTION 1 - To fit to the LEFT HAND SIDE


OPTION 2 - To fit to the RIGHT HAND SIDE

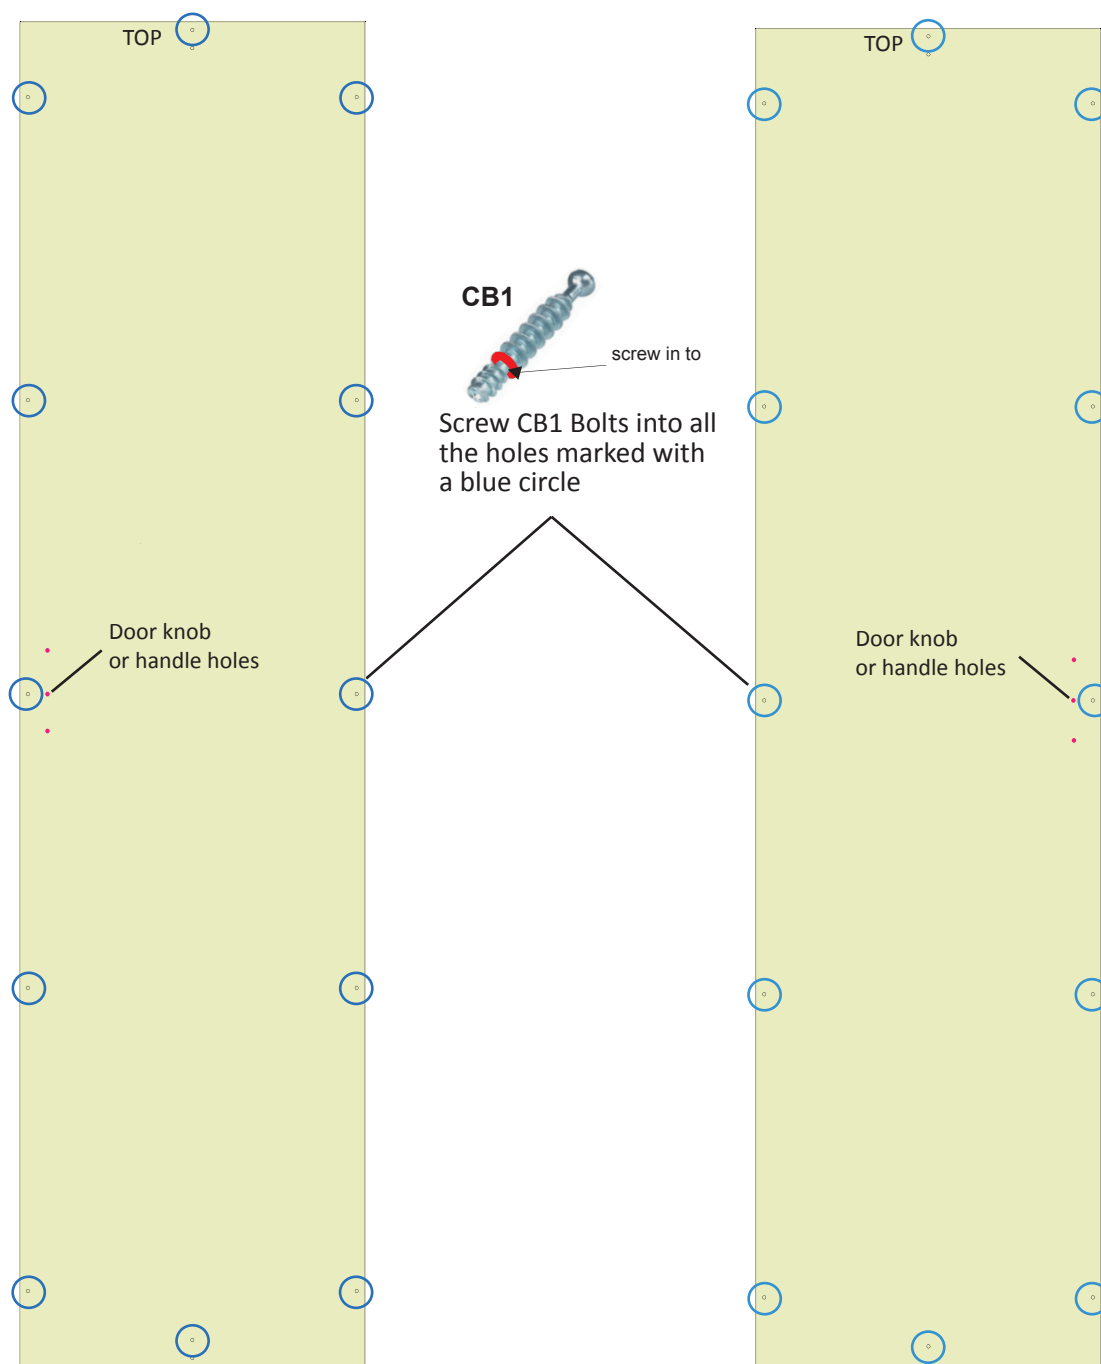

STEP 24



Using Hinge H2 and Screws 30-15S attach the completed door section to the centre section you have already constructed.

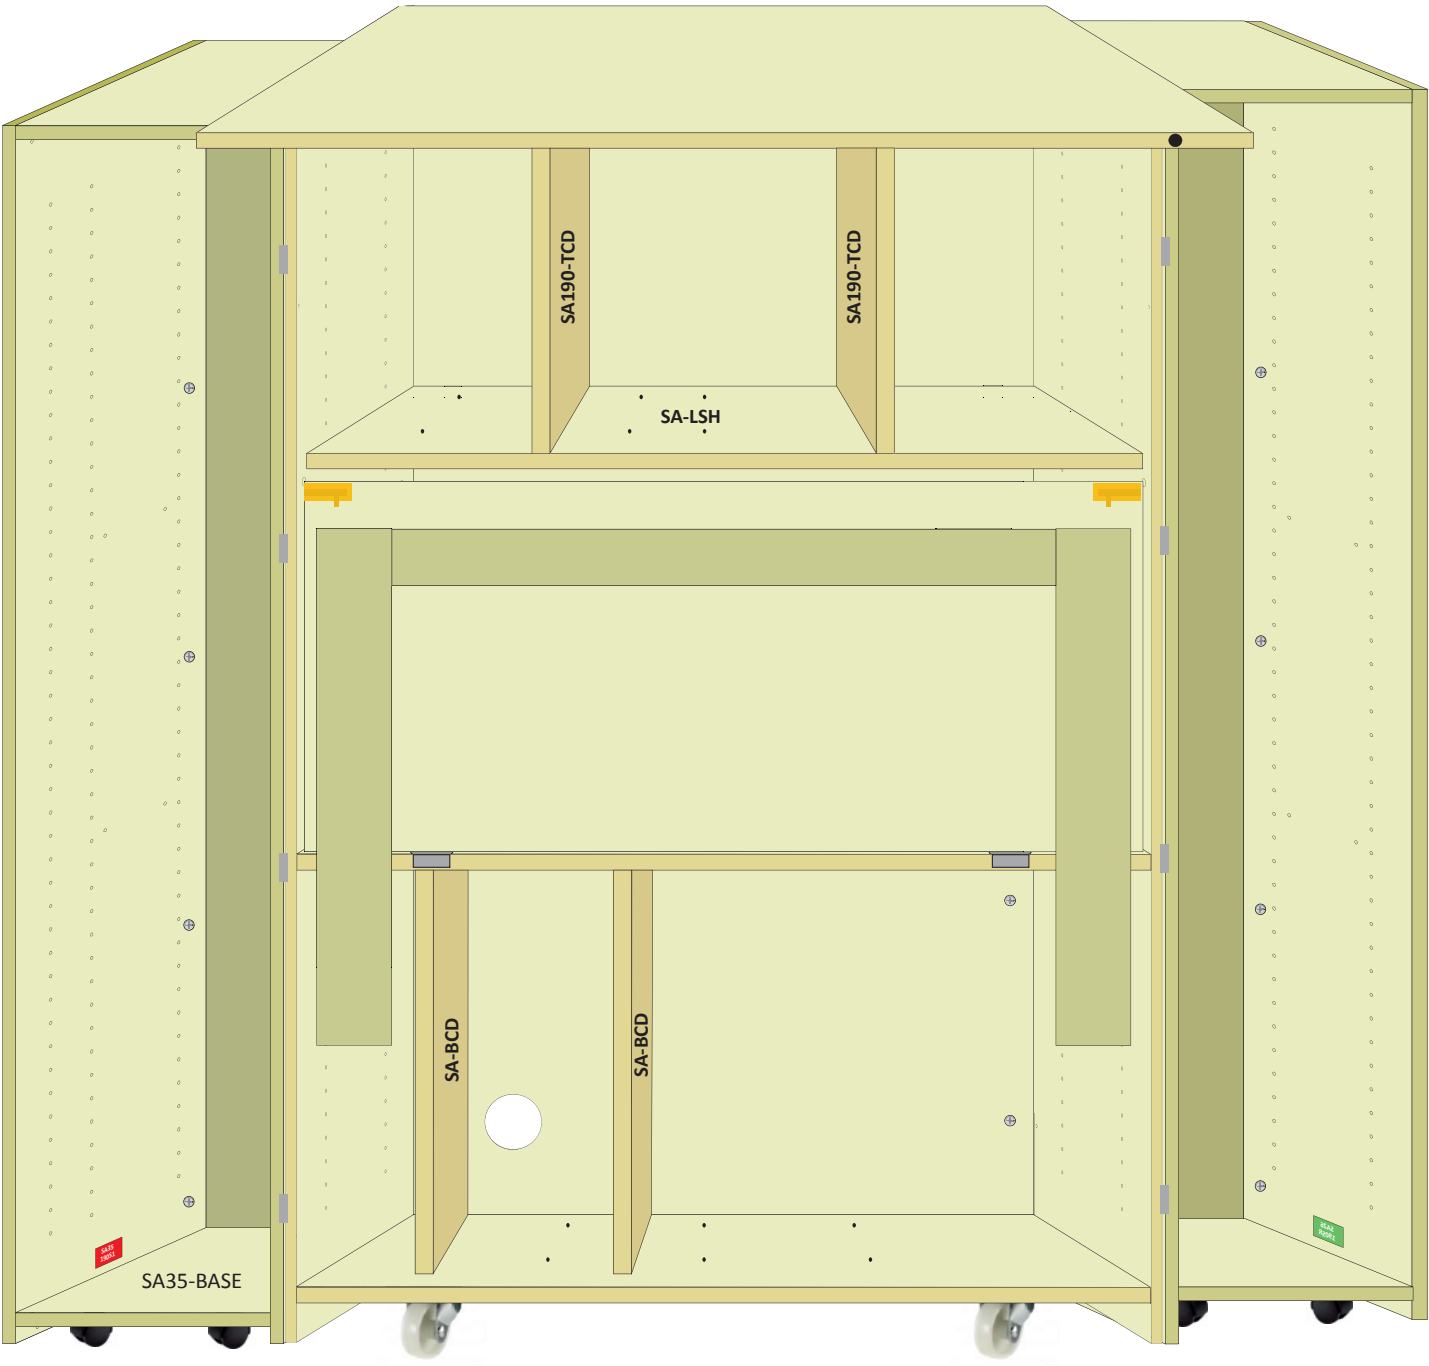

STEP 25

You will need panels from boxes -

Knightshayes 7


Knightshayes 8

You will require panels KH D 8 SIDE X 2, KH D TOP, KH D BASE and KH D BAR

Attach Castor C2 to SA8-BASE using 35-17D Screws



Screw CB2 Bolts into all the holes marked with a red circle

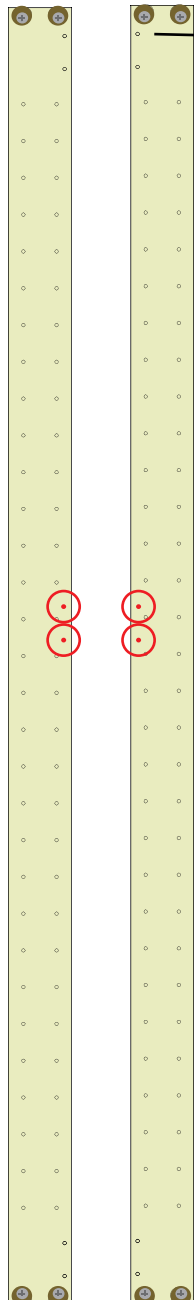


Attach the KH D 8 sides to the KH D 8 BAR and secure by tightening the locks

The fit the KH D 8 TOP and KH D 8 BASE in the same way.

STEP 26



Using Hinge H2 and Screws 30-15S attach the completed rack section to the door section you have already constructed.

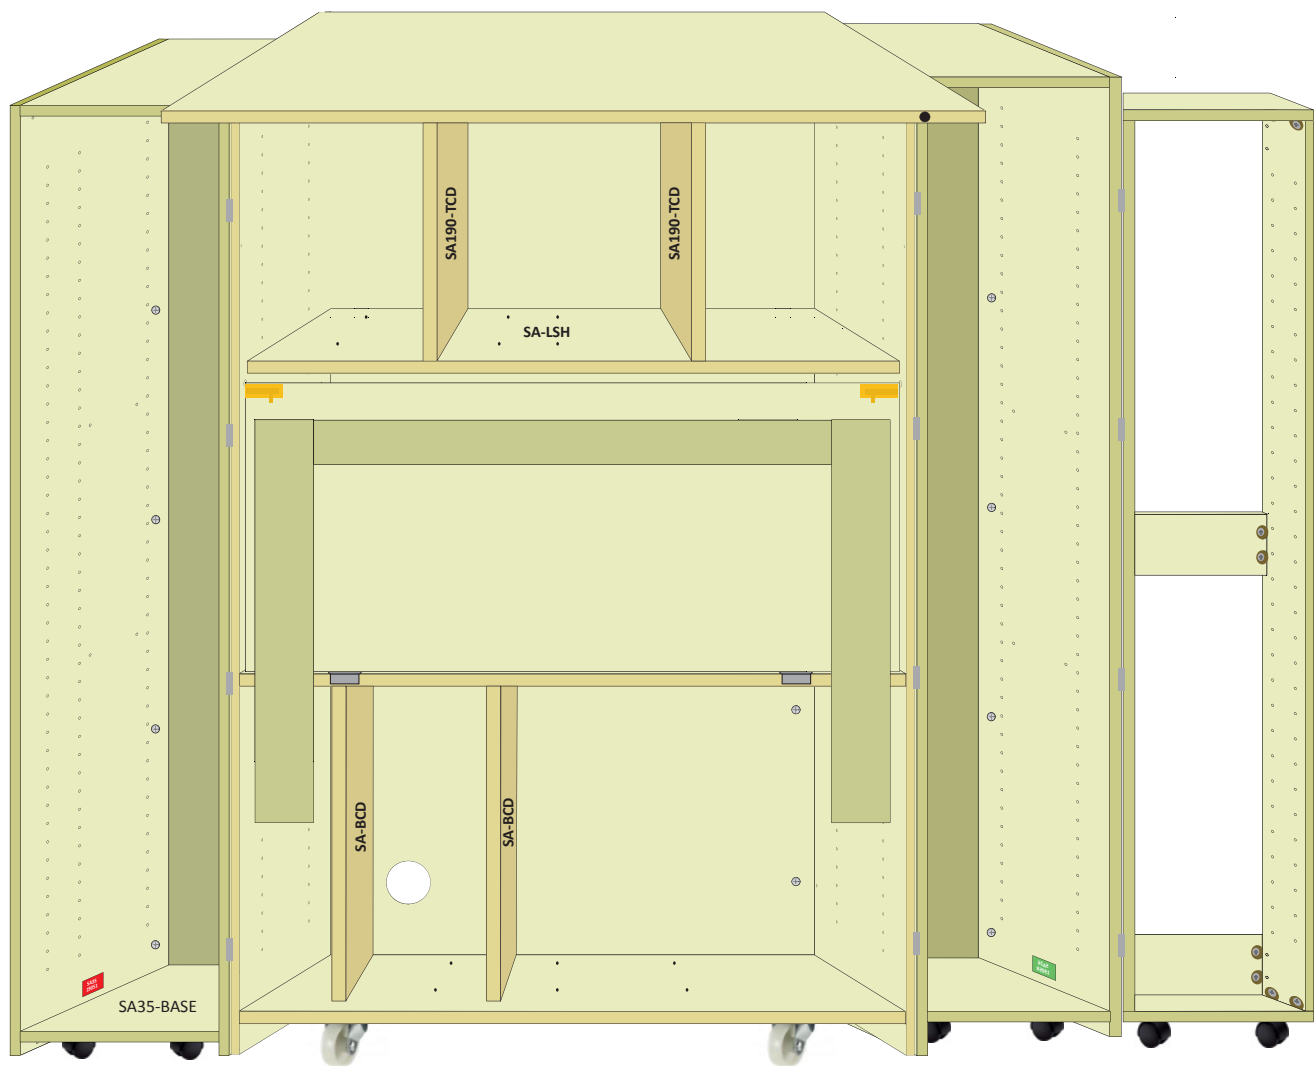

STEP 27

You will need to open box -

Knightshayes 8


Add shelves, racks and ribbon holders to the rack section you have just constructed



Shown above are a ribbon dowel and holders. To fit insert SP1 shelf pegs into the two holes in each holder and then press the holder into the side of the rack you have constructed. You can then fill the dowel with ribbon and drop onto the holders.



Fit KH D 8 Shelves to the rack as shown. Fully insert the acrylic into the shelves and then fit to the rack using SP1 shelf pegs and SR1 shelf retainers.

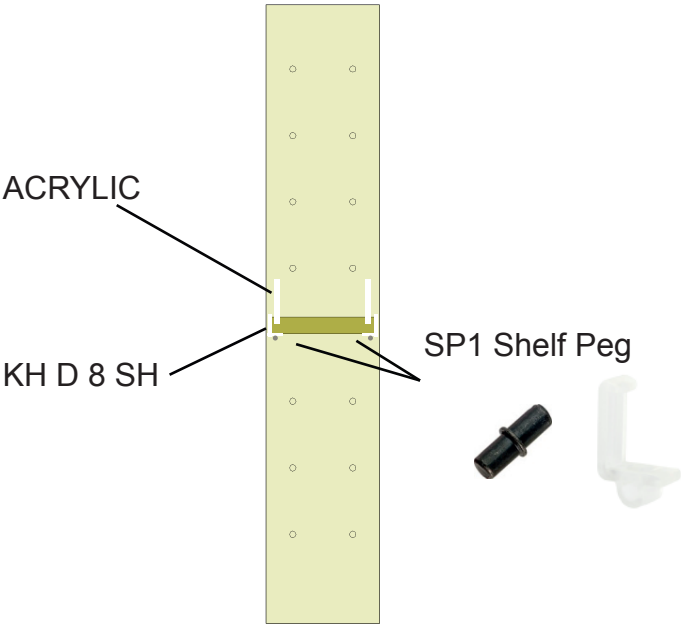

STEP 29

You will need to open boxes -

Knightshayes

10

Knightshayes

11

Suggested box layout

A standard layout of boxes is shown below. The best way to fit the boxes is to start at the bottom of each section, insert a box then add shelf pegs (SP1) and a shelf above then continue until the section is full. Use MDF shelves and SP1 shelf pegs as supplied.





The Storeaway Knightshayes 2.0 unit is designed and manufactured in the UK by:

