









Assembly Instructions




It is strongly recommended to have two persons present when assembling this item. We advise that you follow the assembly instructions carefully.

Please be careful during construction as section of the cupboard may be unstable until construction is complete.


Your hardware pack should contain the following:

	CONNECTING BOLT (CB1) X 68		FOLDING LEG BRACKET (FLB1) X 4		TABLE HINGE X 4
	CONNECTING LOCK (CL1) X 68		WOODEN DOWEL X 81		
	MINI CONNECTING LOCK (CB2) X 16		SHELF SUPPORT (SP3) X 108		CABLE OUTLET X 1
	SHELF PEG (SP1) X 2		SHELF RETAINER (SR1) X 2		BOLT (BB1) X 4
	BLACK CASTOR (C2) X 14		ANGLE BRACKET (AB1) X 12		
	SCREW (S10) X 24		HANDLE (HANDLE1) X 2		
	SCREW (35-17D) X 80		SCREW (S30) X 4		CONNECTING PLATE X 2
	SCREW (35-15S) X 36		HINGE (H2) X 6		SCREW (30-15S) X 36

STEP 1

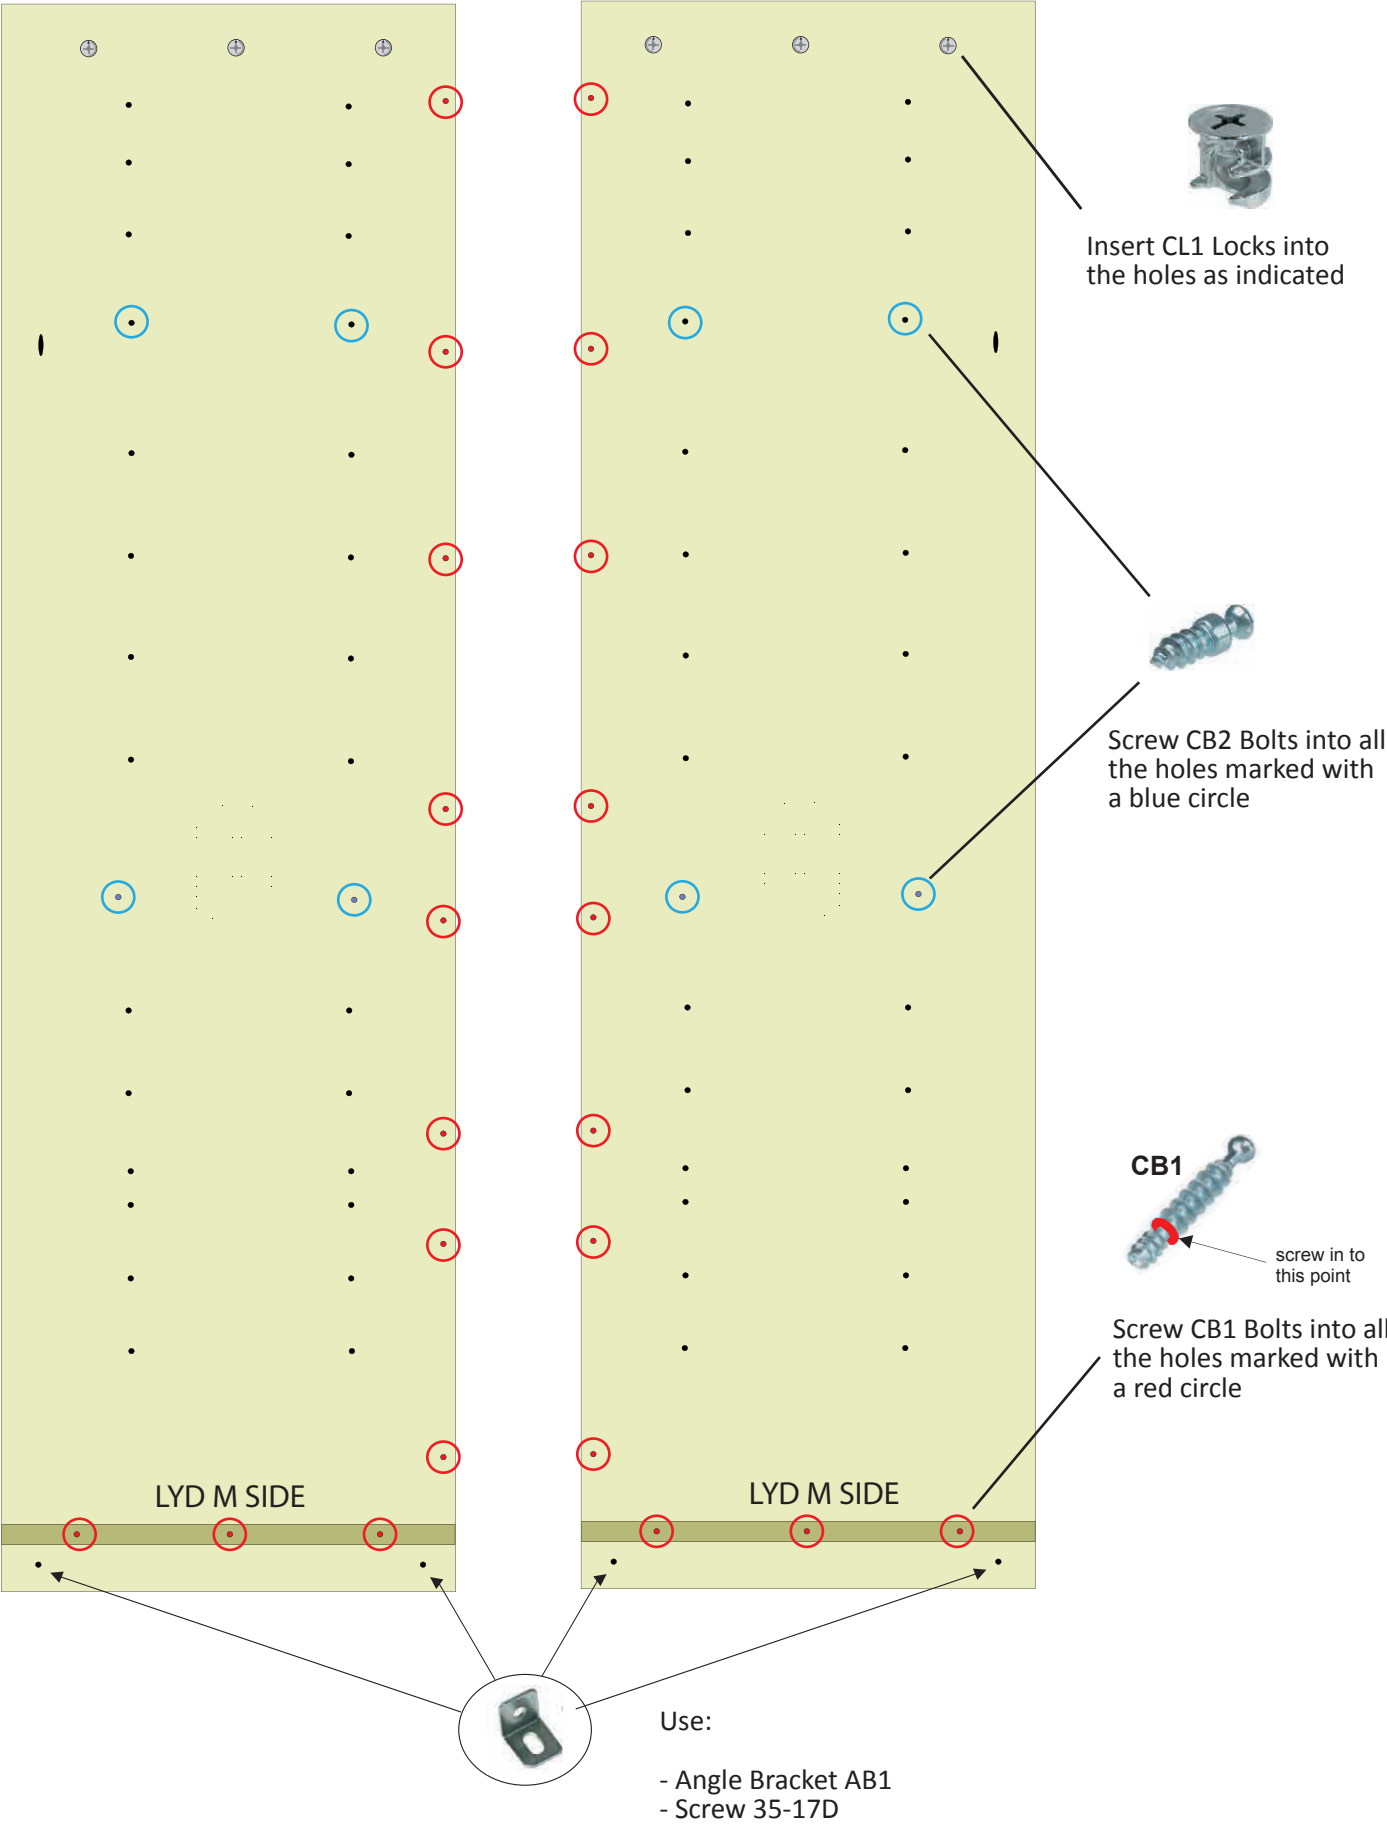

STEP 2

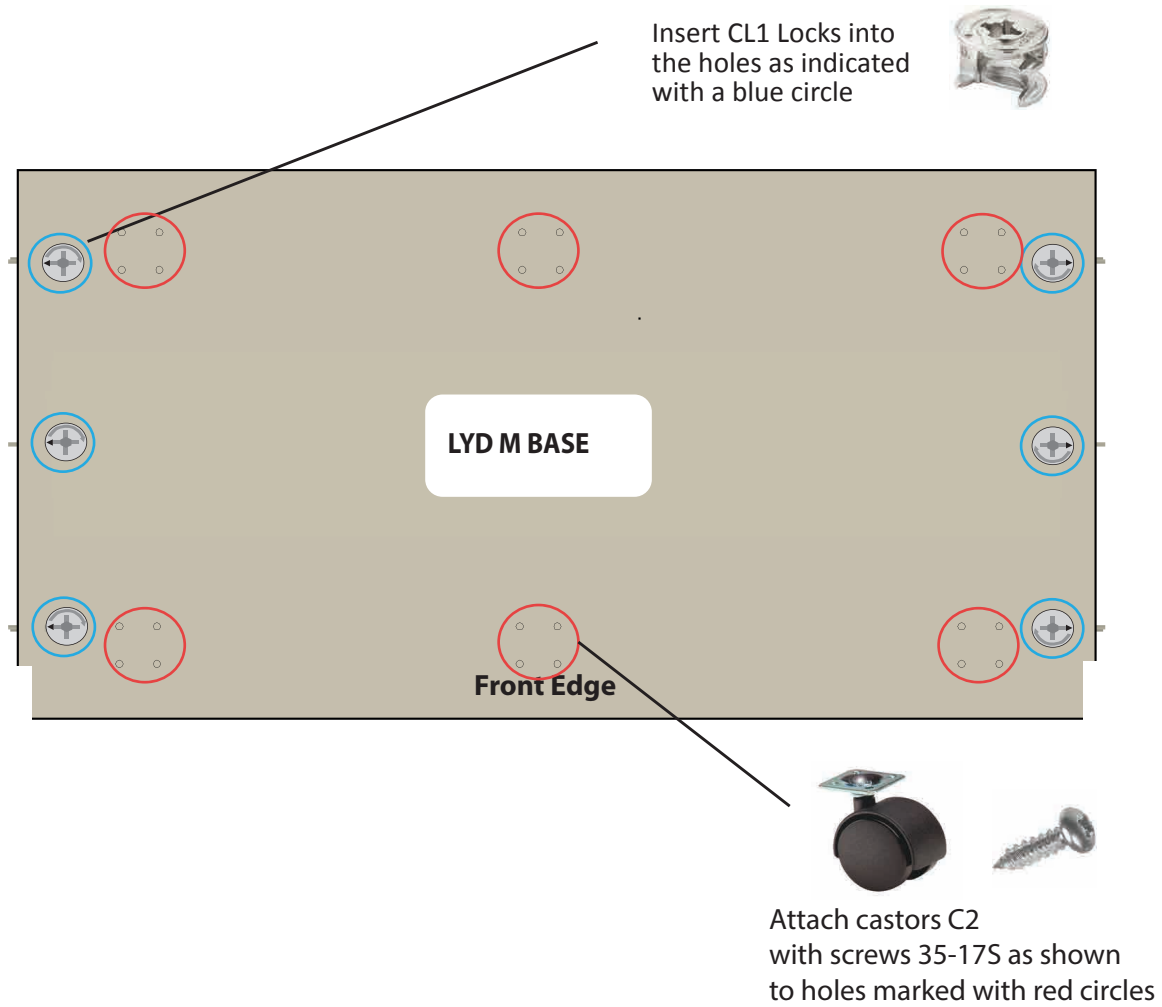


STEP 3

Insert CL1 Locks into the holes in the LYD M LOW BACK x 2, LYD M MID BACK, LYD M TOP BACK panels from this box


STEP 4

With the LYD M SIDE (LEFT) laying on the solid flat clean surface (we recommend the floor) attach the four back panels and the base. Secure by turning all of the connecting locks in the backs and the base approx one half turn. Then screw the remaining 35-17D screws into the angle brackets to secure the side to the base.

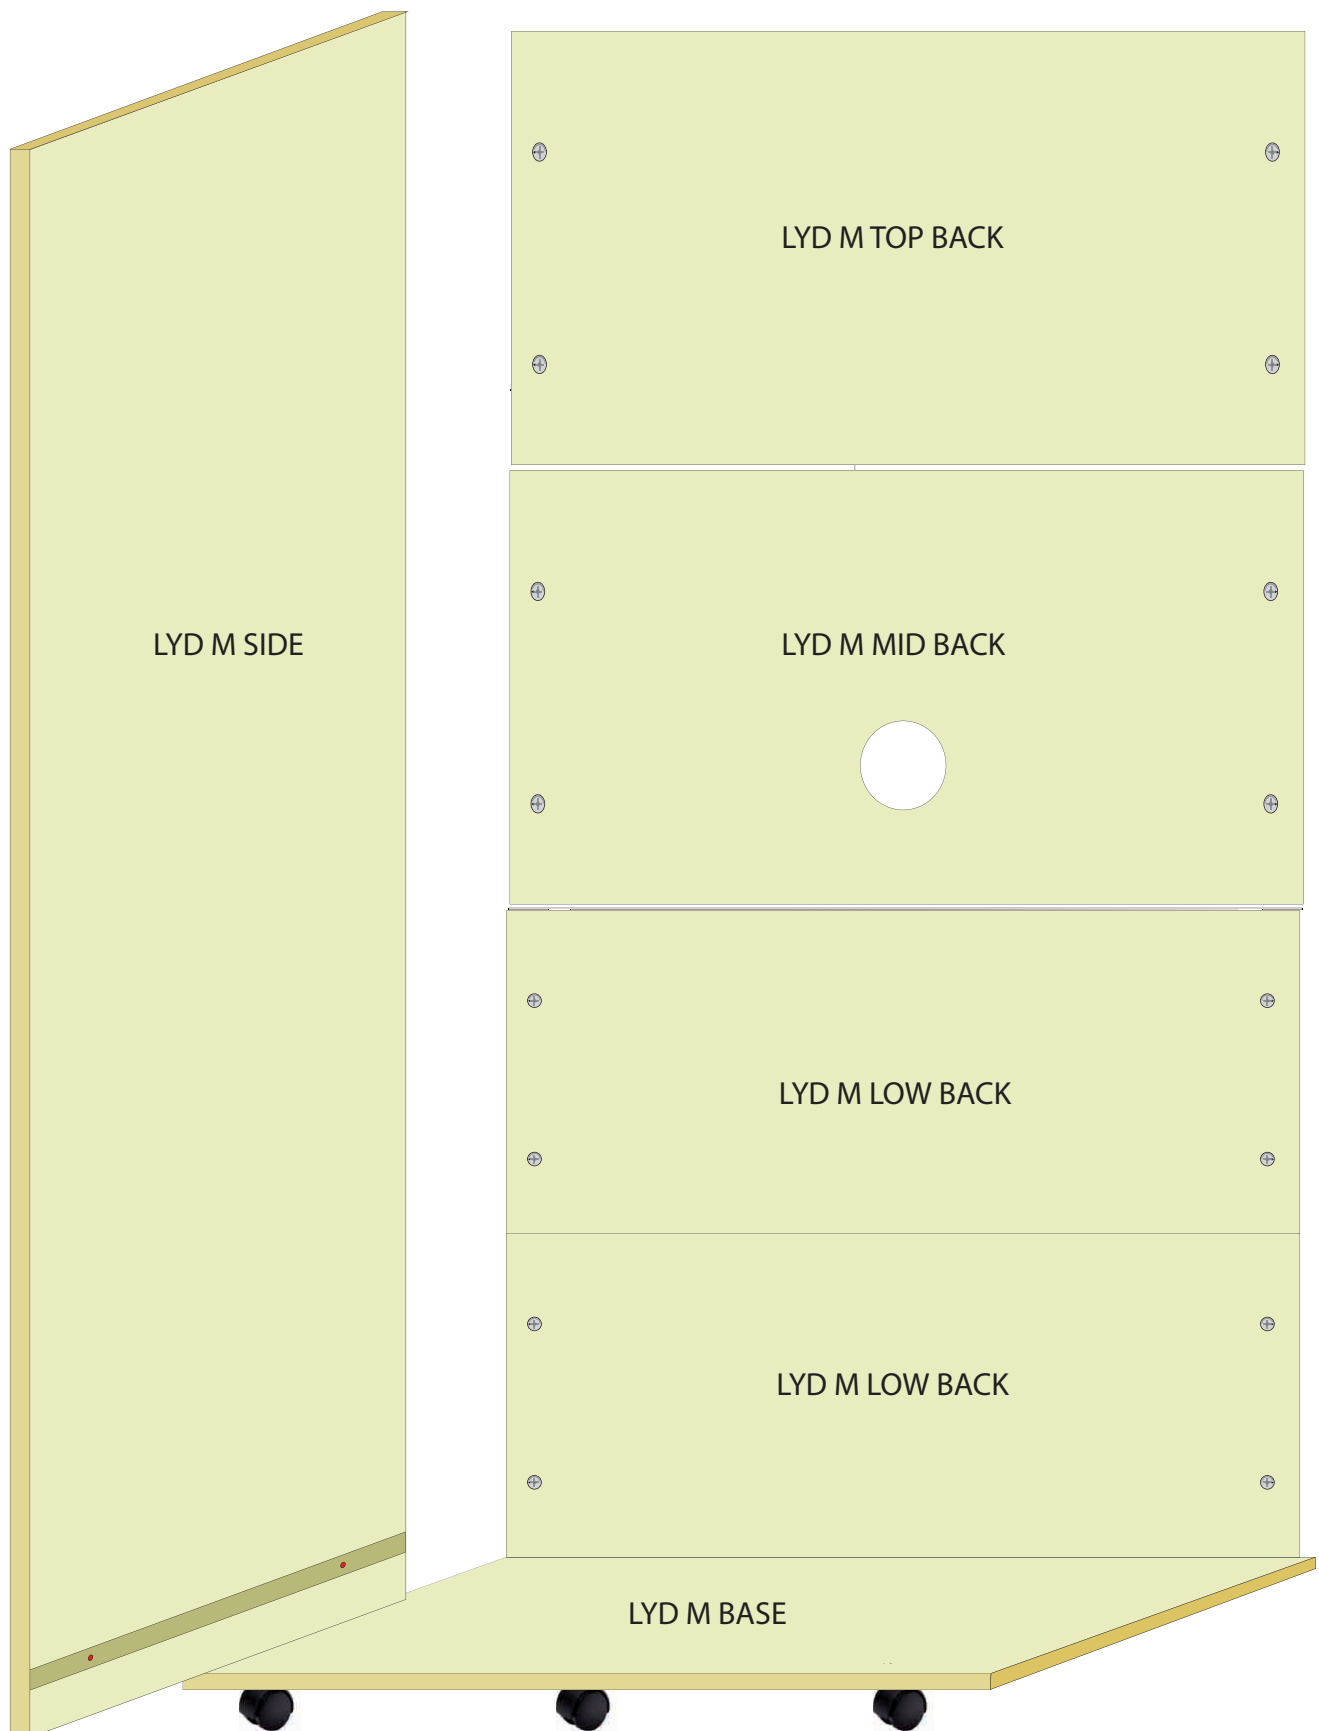


STEP 5


With the unit still laying on the floor place the LYD M SIDE (right) onto the top and secure all the connecting locks and angle brackets. Then carefully stand the unit onto its wheels. **IT IS HIGHLY RECOMMENDED TO HAVE TWO PEOPLE TO COMPLETE THIS STEP TO AVOID INJURY OR DAMAGE TO THE PRODUCT.**

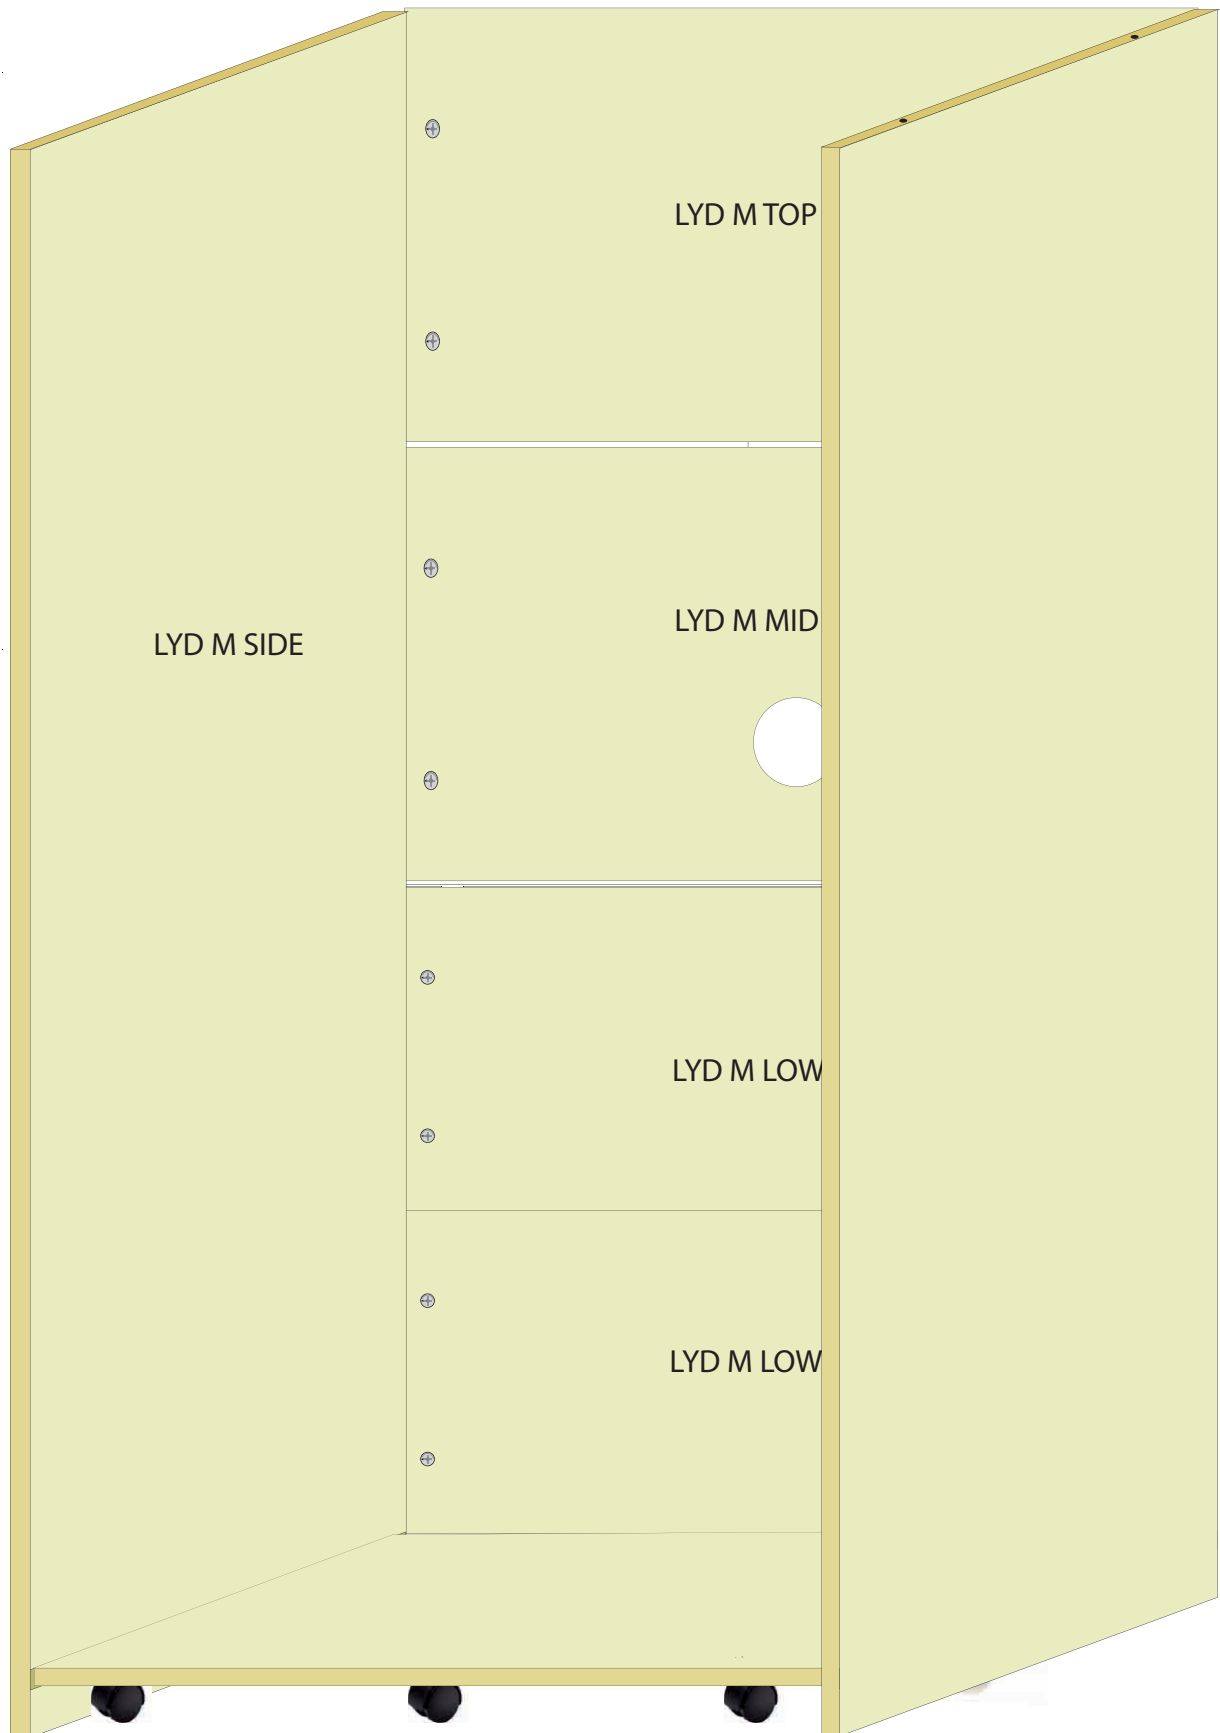


STEP 6

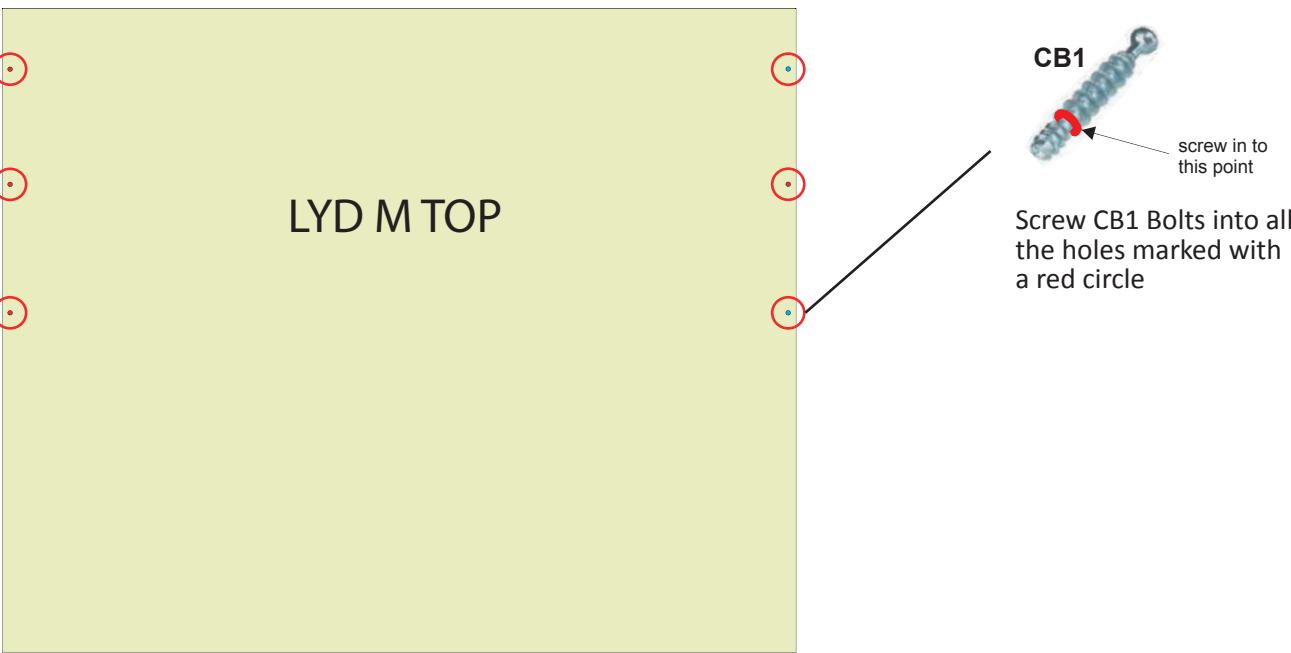

Fit the LYD M TOP to the unit by tightening all of the connecting locks.

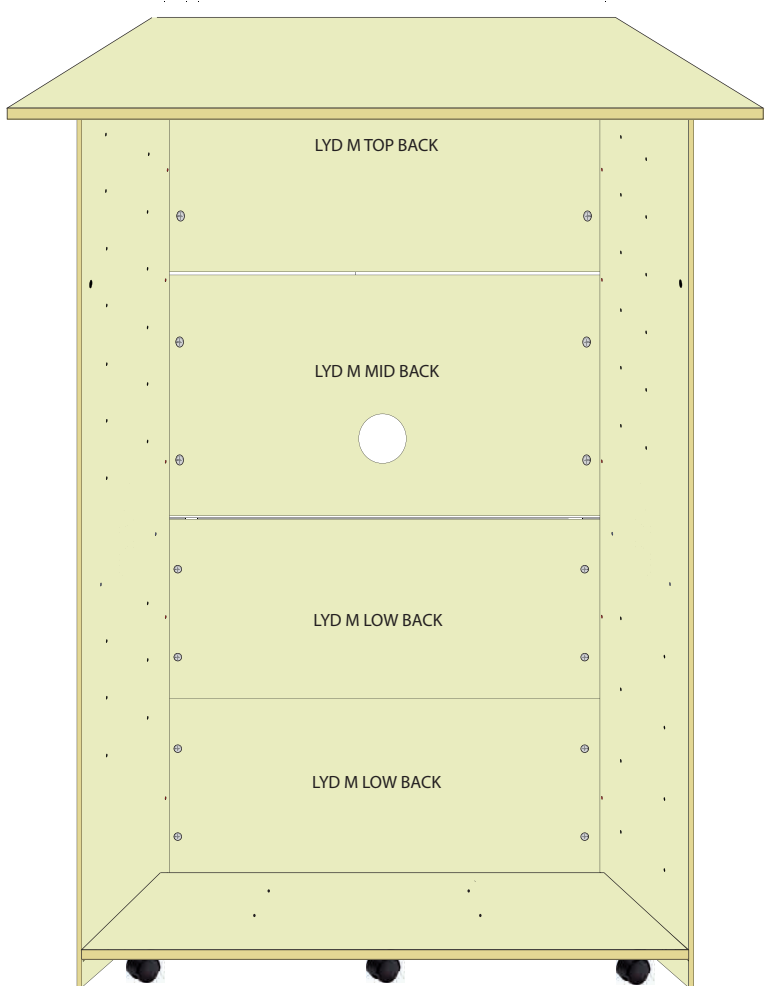


STEP 7

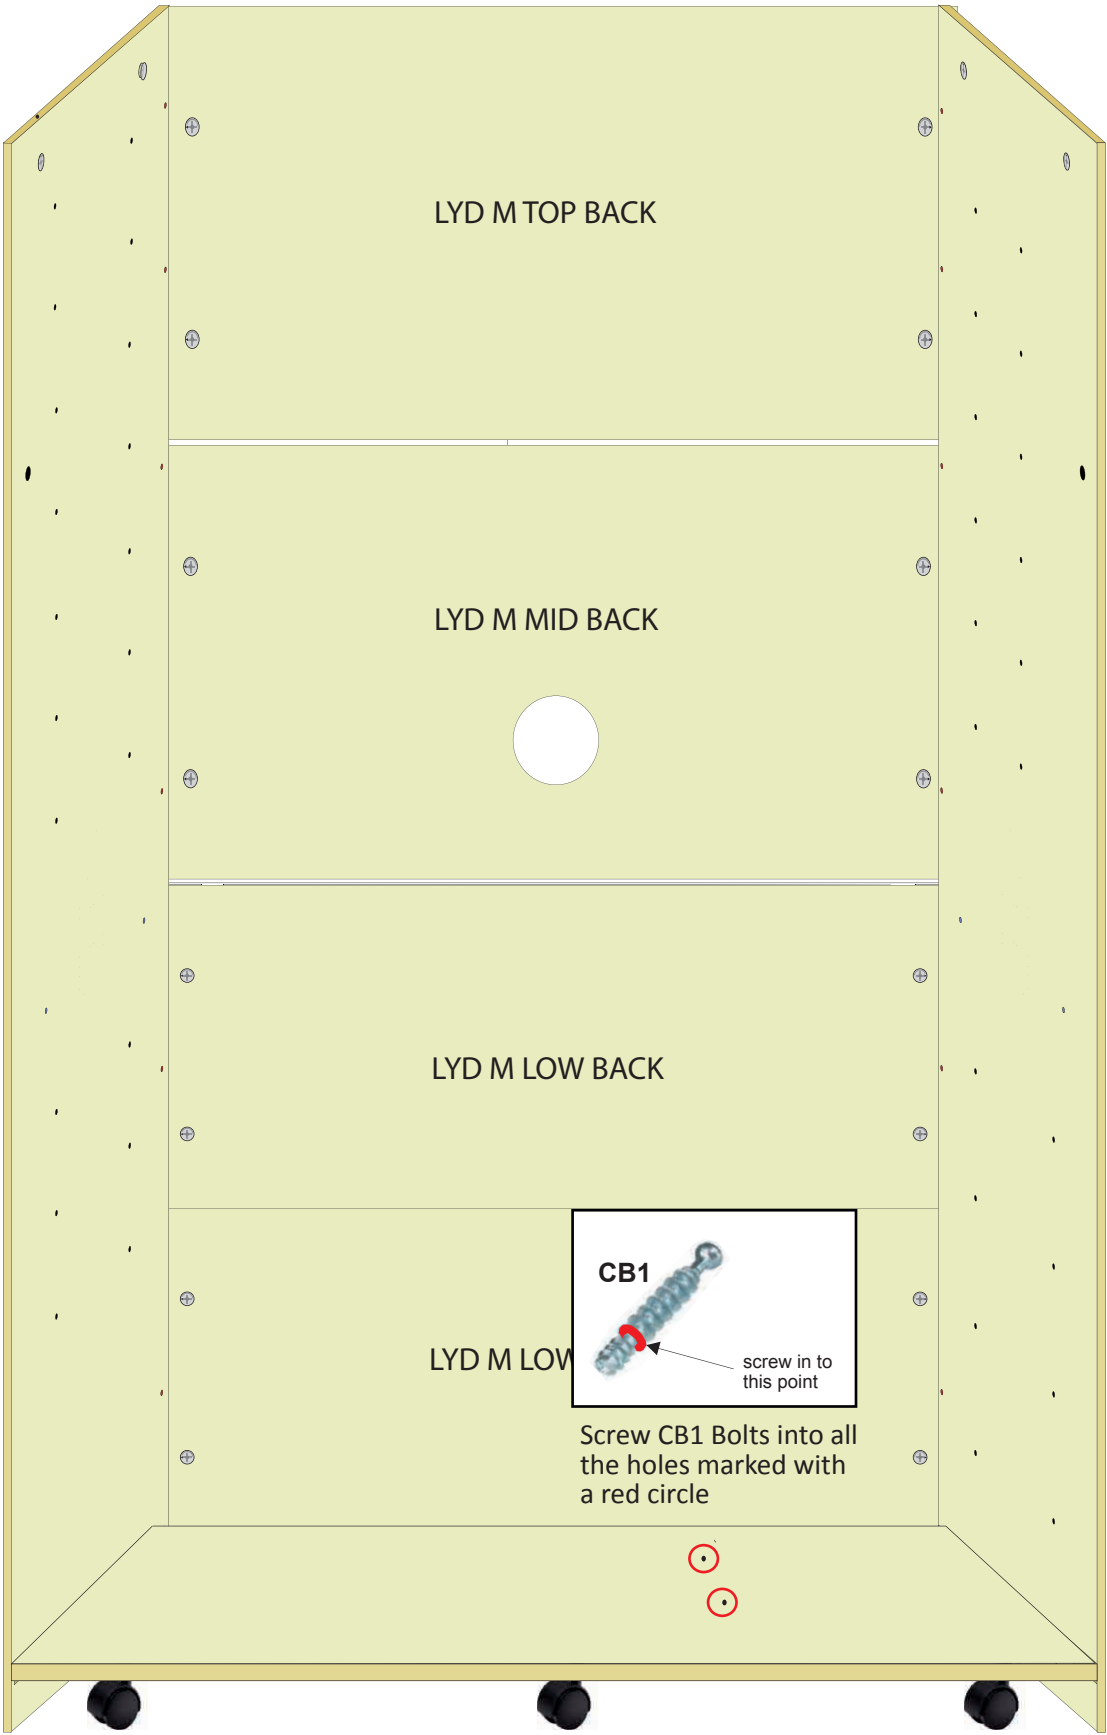


STEP 8

You will require LYD M BCD. Fit the bottom centre divider as shown below using connecting locks and the bolts you have already fitted to the base. Ensure you fit it the correct way up - there will be a small drilled dot in the top back corner of the panel.

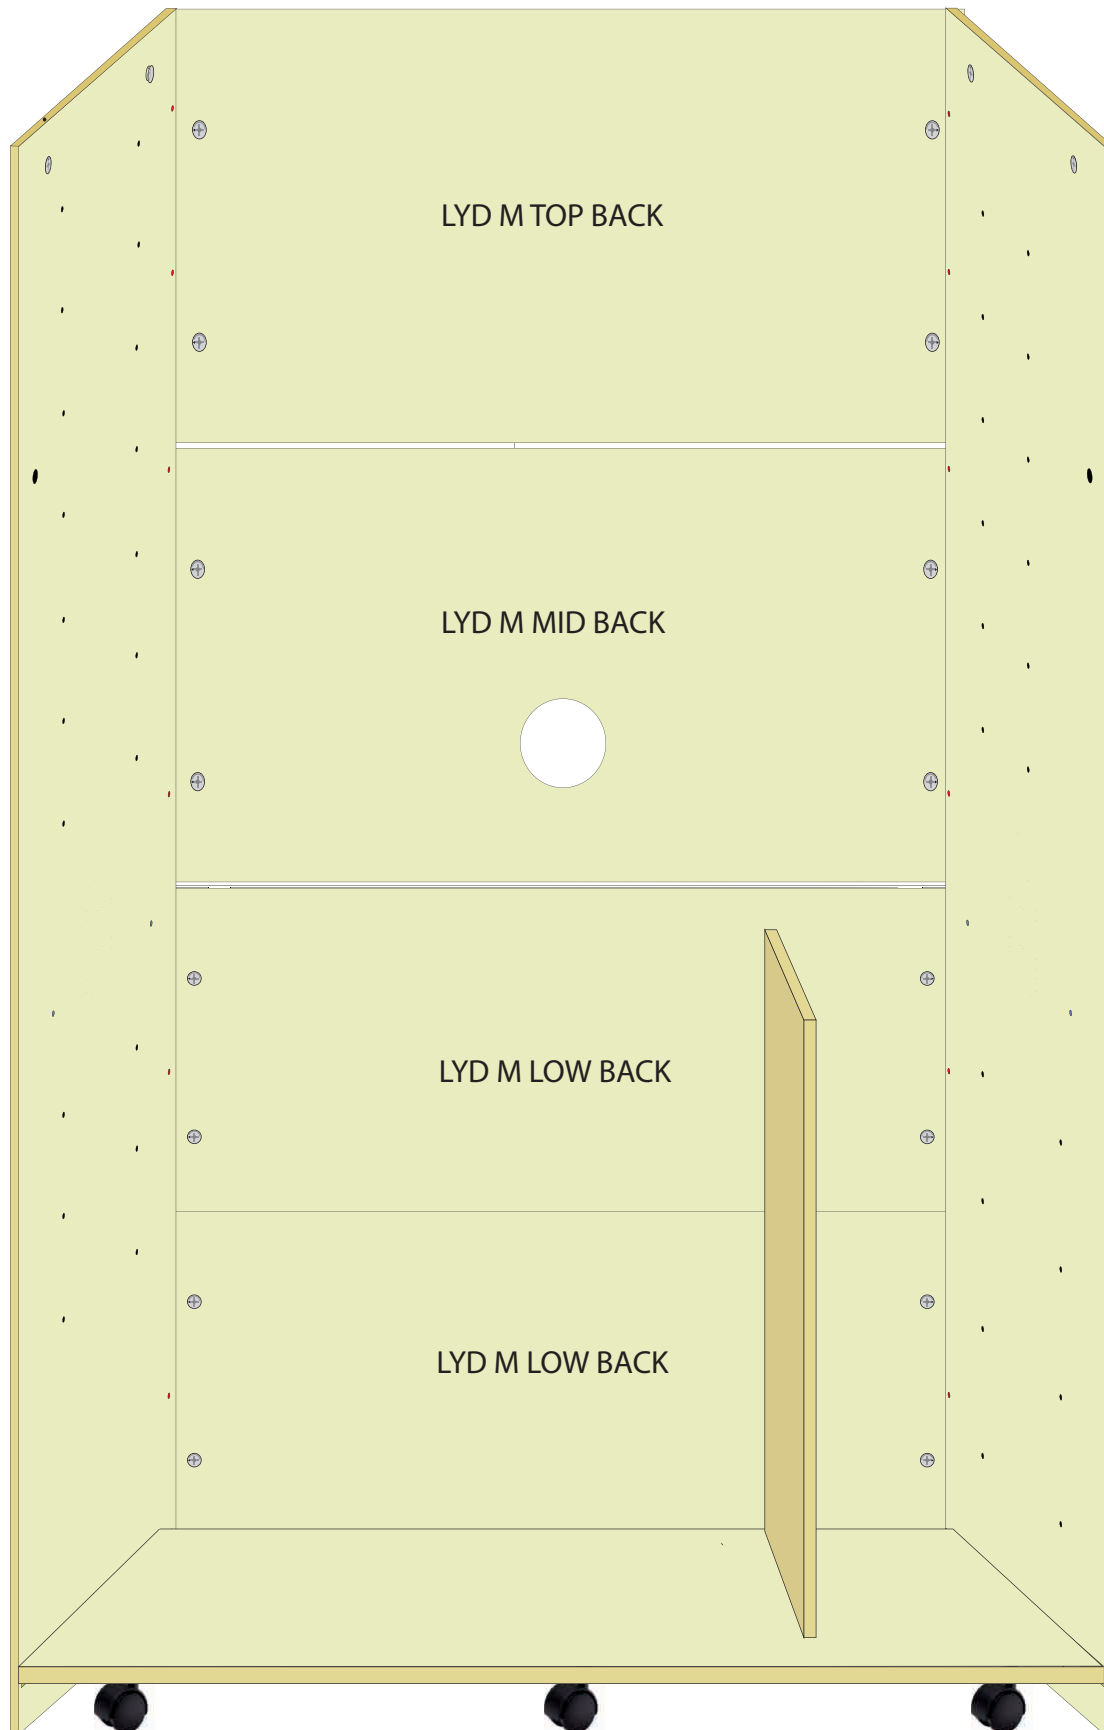


STEP 9

You will require LYD M DSH. Fit the table hinges and connecting bolts as shown below.

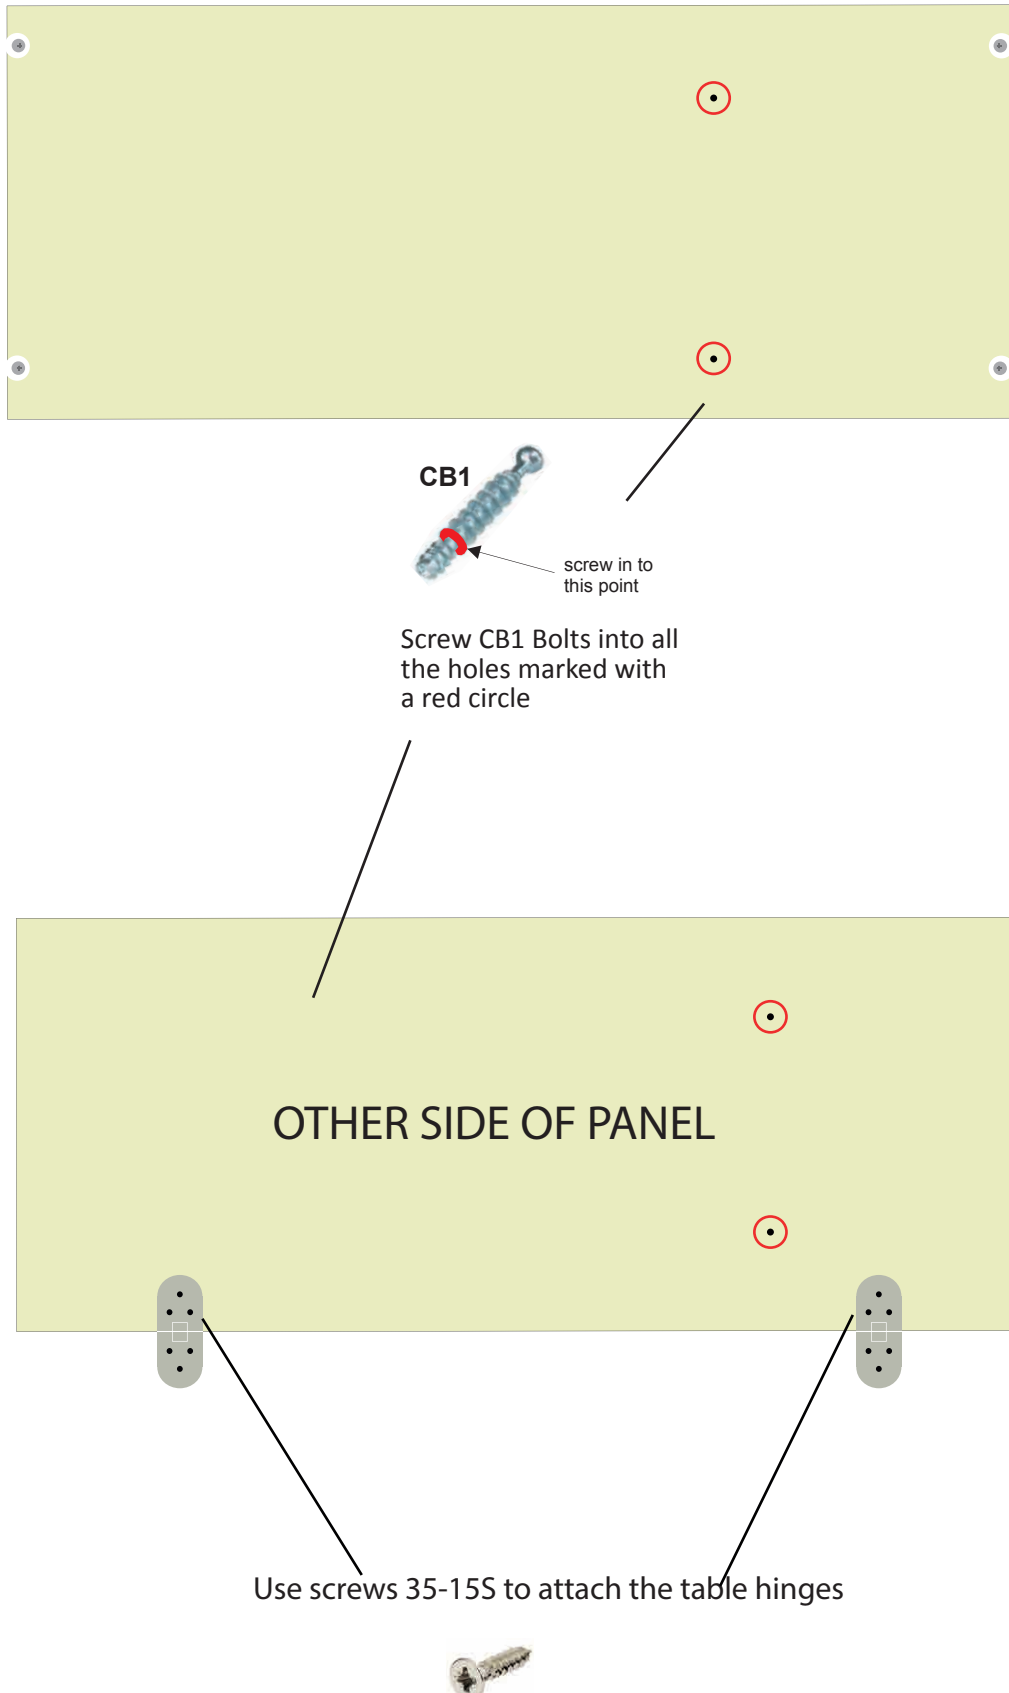


STEP 10

Fit the desk shelf and tighten all of the connecting locks including those pre-fitted into the underside of the desk shelf.

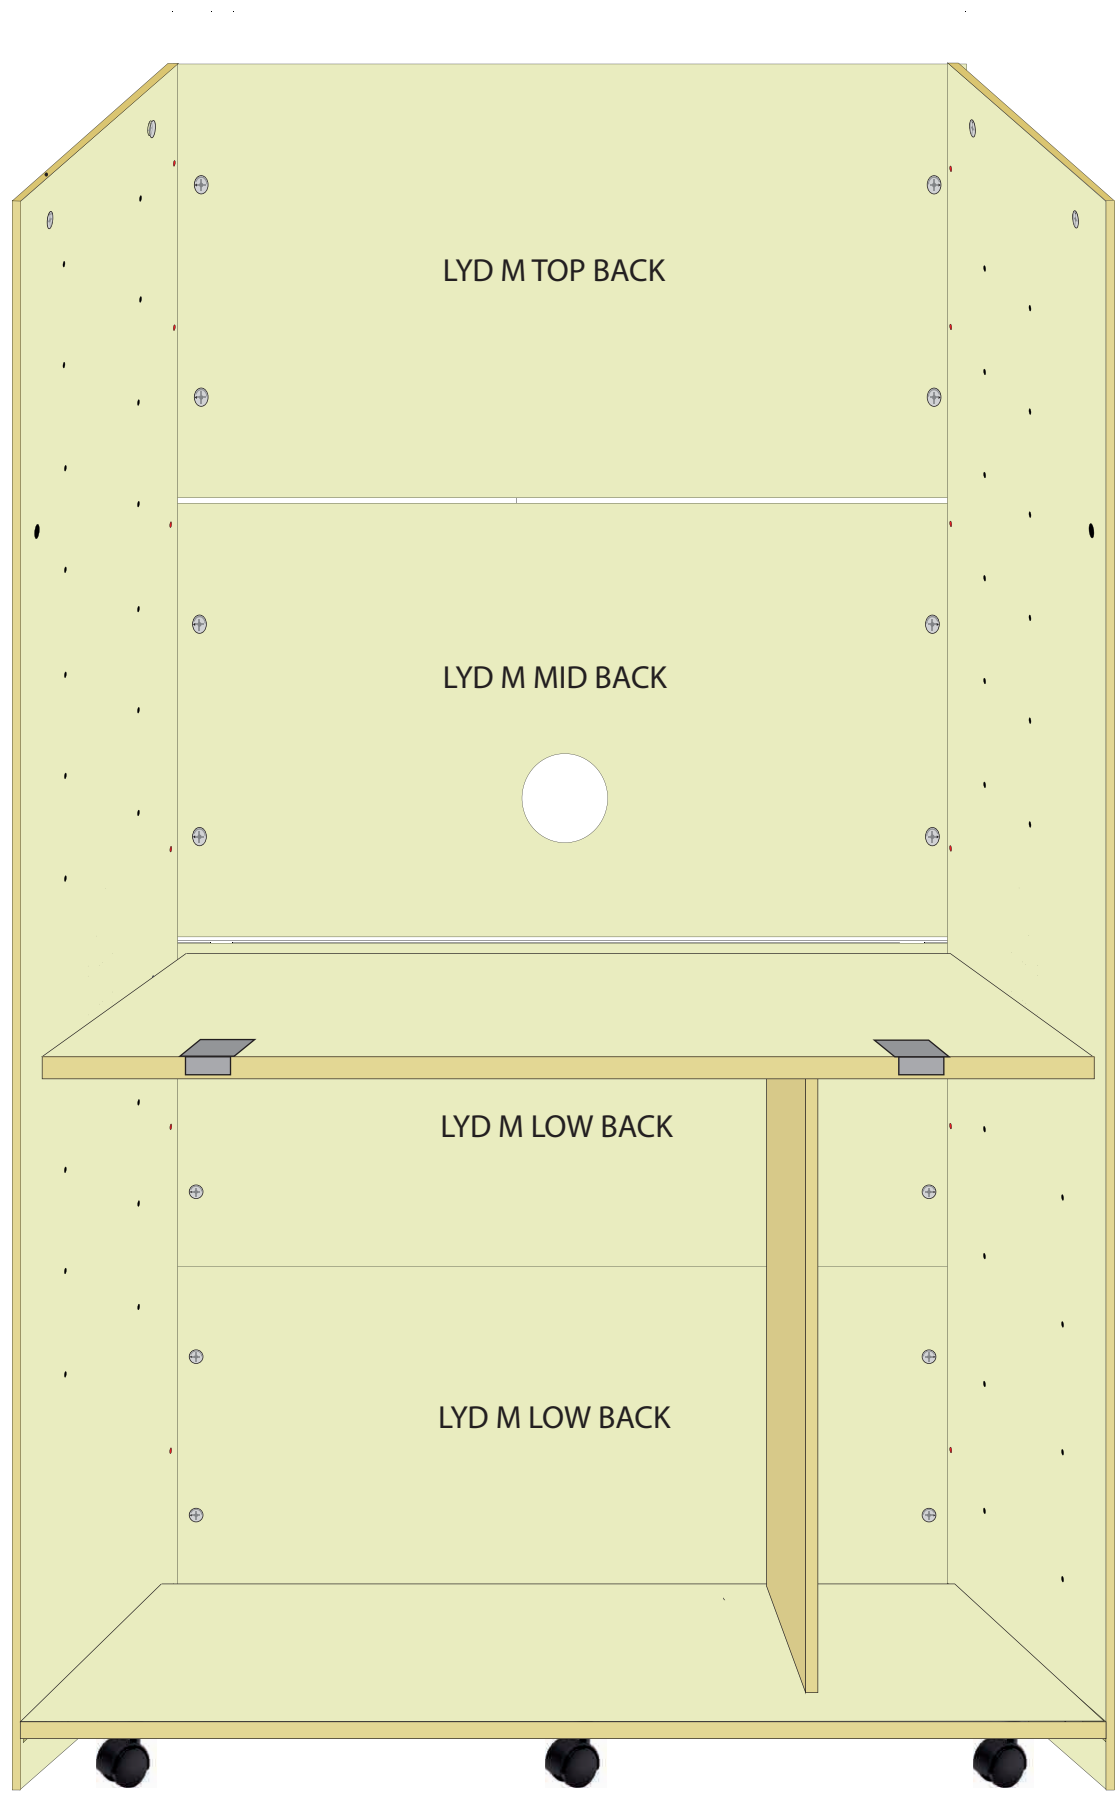



STEP 11

You will require LYD M MCD. Fit the mid centre divider as shown below using connecting locks and the bolts you have already fitted to the desk shelf.

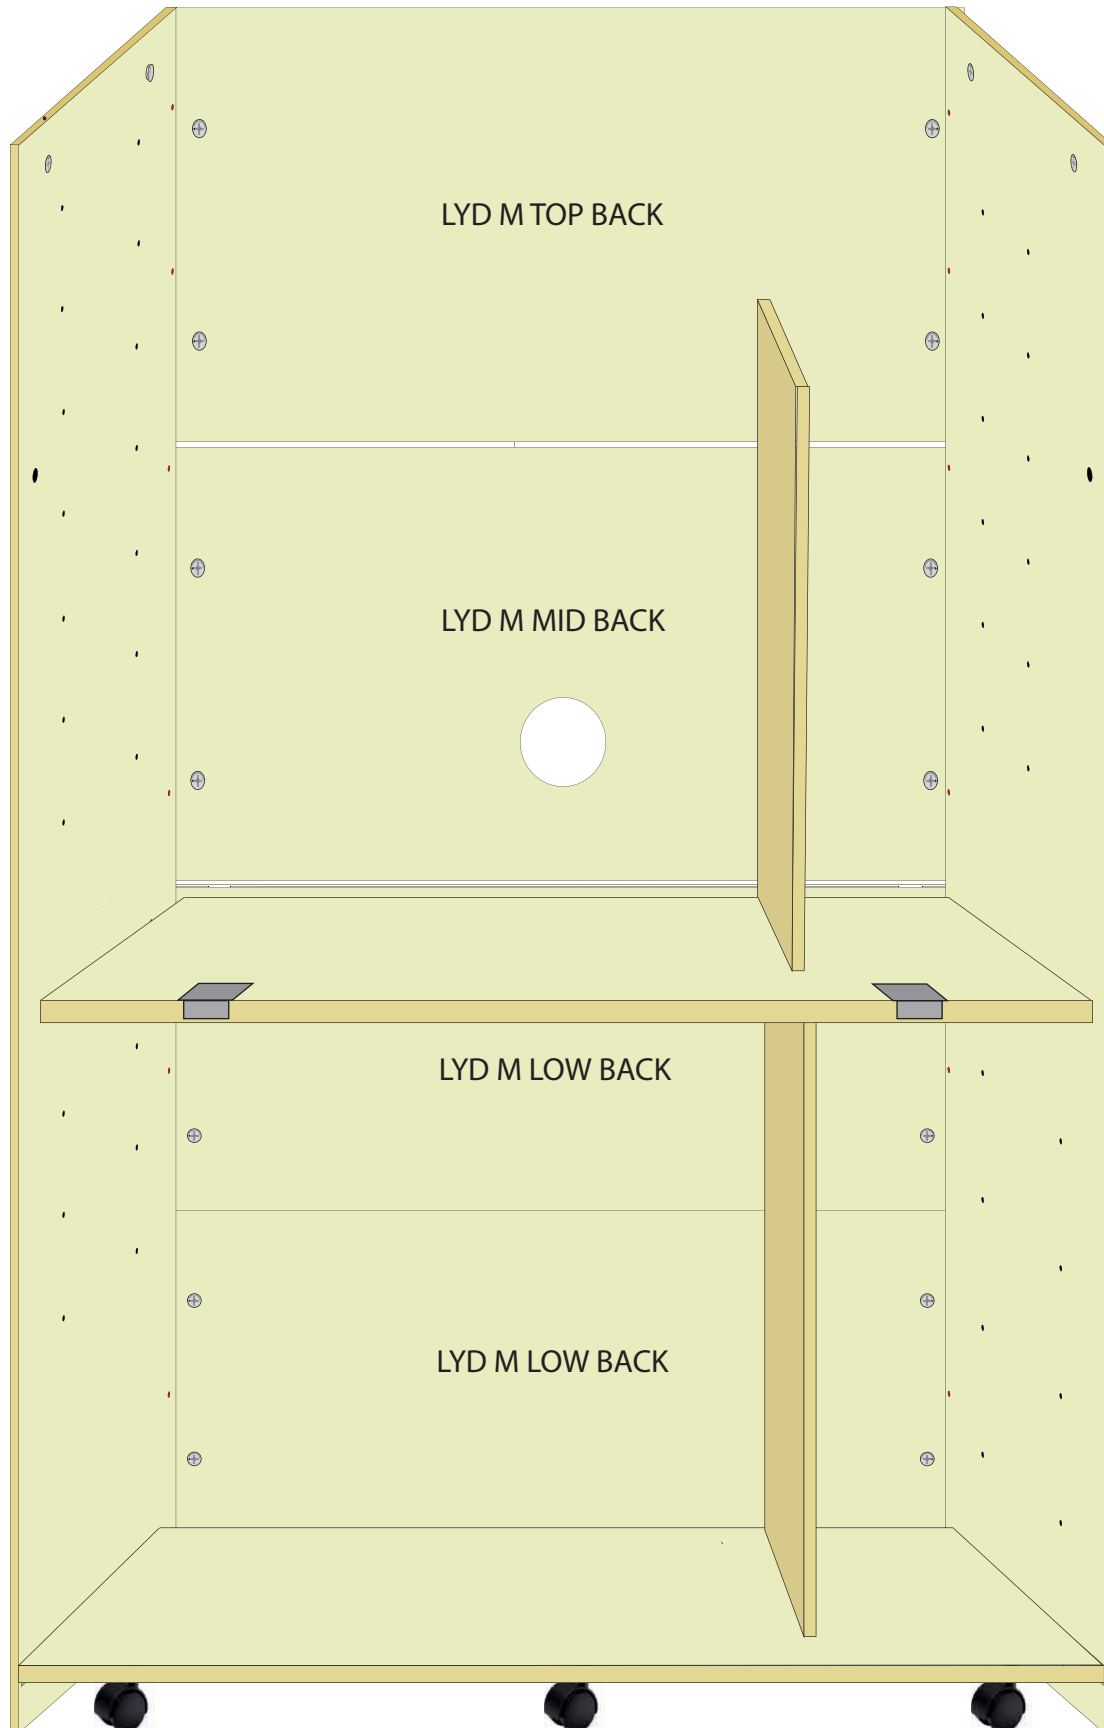


STEP 12

Fit the LYD M FIXSH to the unit by tightening all of the connecting locks.

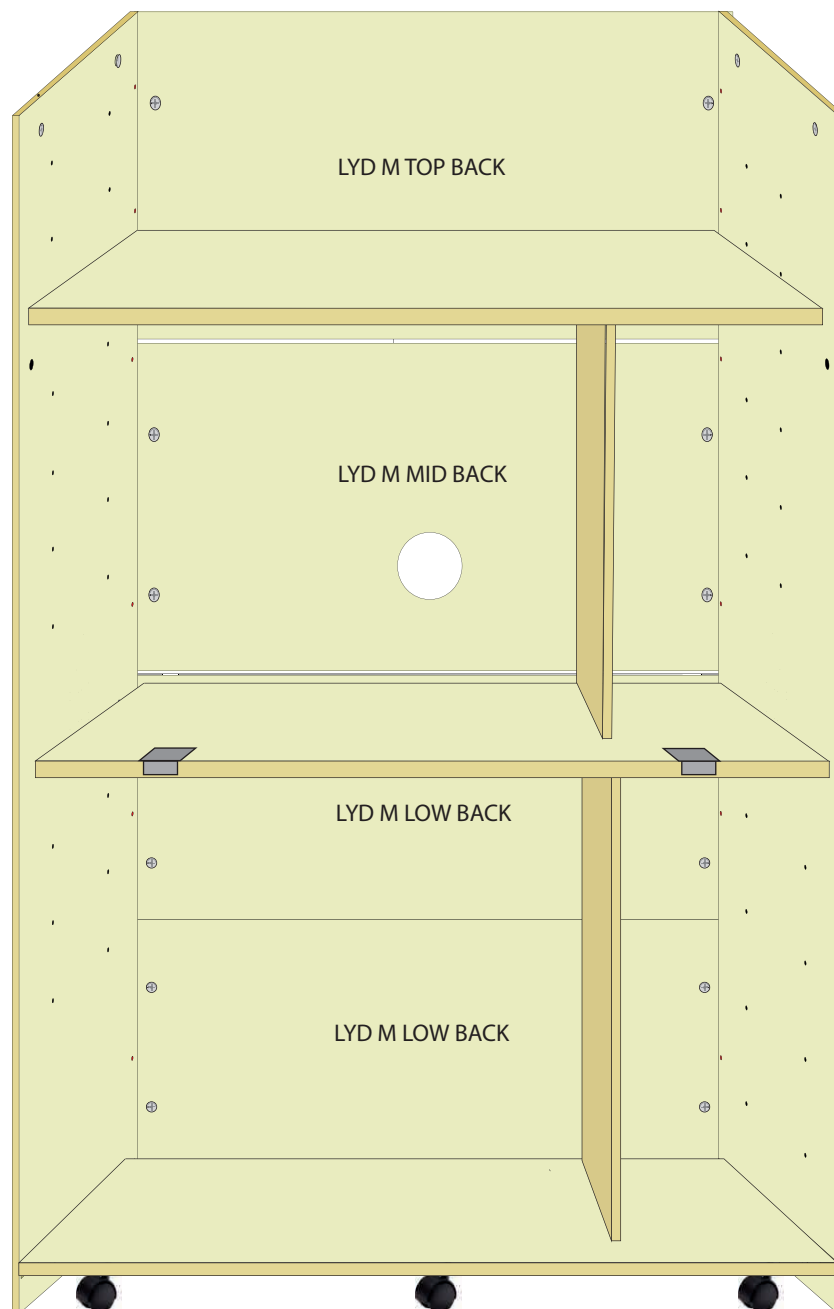
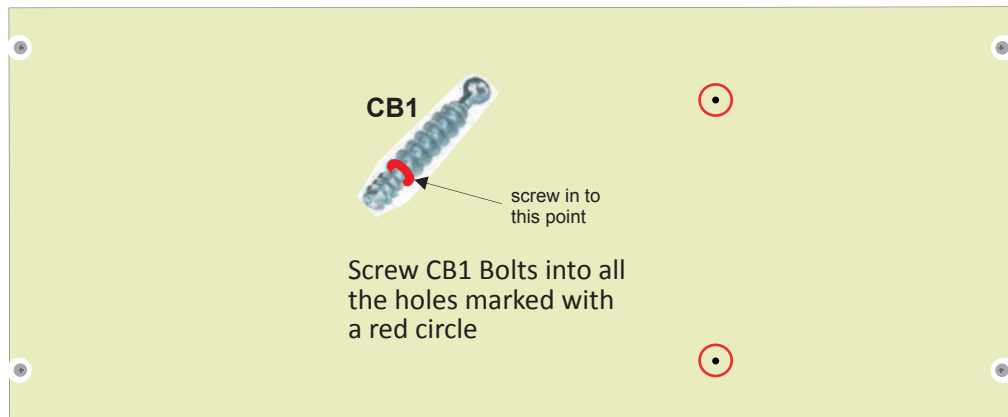


STEP 13 -

You will require LYD M DESK, LYD M TLEG x 2 and LYD M LBAR

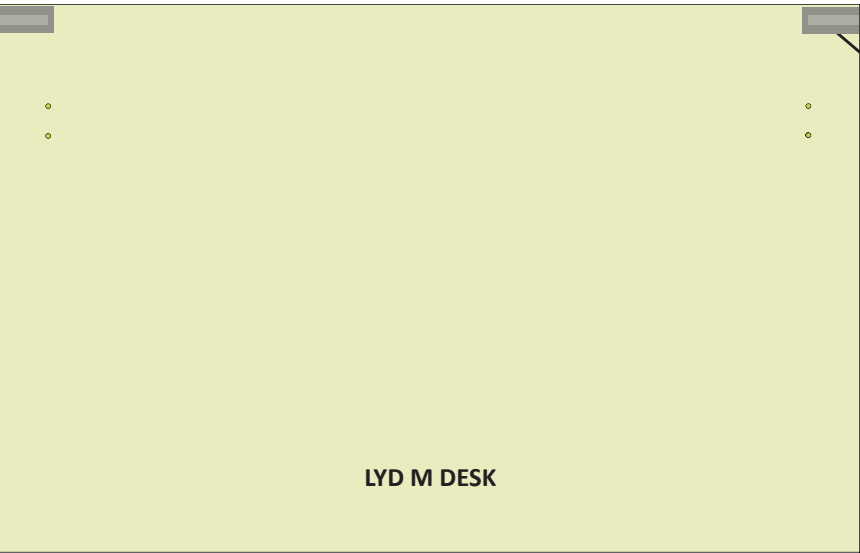


Attach Bolts BB1 with
Screws 35-15S

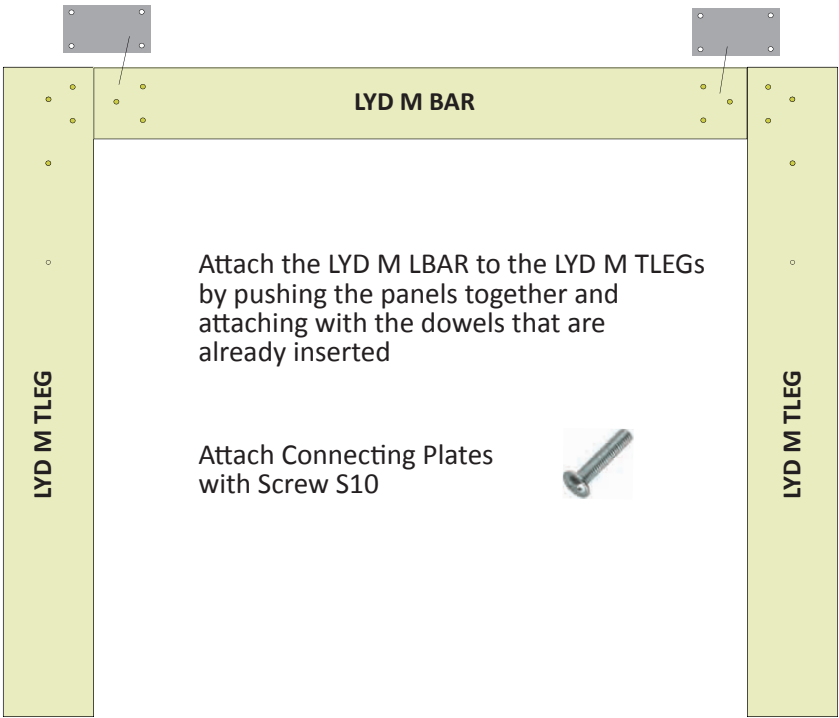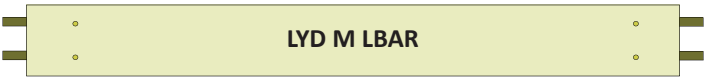

Attach the constructed leg section to the LYD M DESK using the Folding Leg Bracket (FLB1) and screws S10 (to fix into the brass inserts) and screws 35-15S (to fix into the pre-drilled holes)

STEP 14

Attach the complete desk to the main section using the table hinge that you have already attached to the desk shelf use screws 35-15S. Once in place ensure it is secured with bolts supplied.

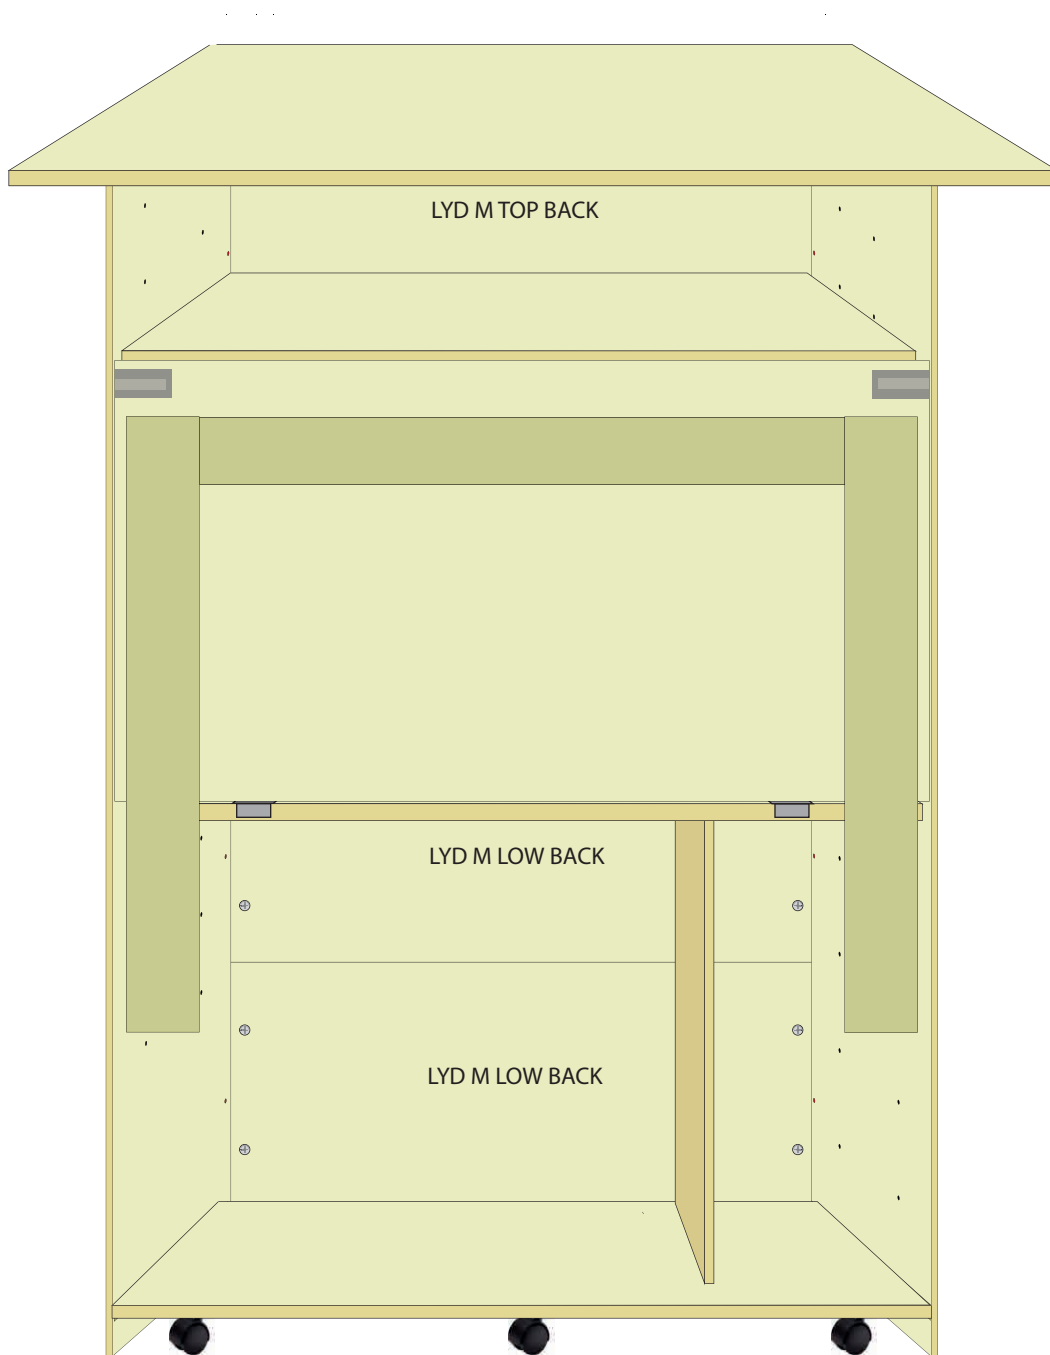


IMPORTANT

WHEN USING THE DESK
ALWAYS MAKE SURE TO
HAVE FOLDED OUT THE
LEG BEFORE UNDOING
THE BOLT AND FOLDING
THE DESK DOWN.
FAILURE TO DO THIS MAY
RESULT IN DAMAGE TO
THE HINGES AND THE UNIT

THIS COMPLETES CONSTRUCTION OF THE
CENTRE SECTION OF YOUR UNIT


STEP 15

NOTE When fitting the CB2 Bolts in the blue circles these are used to fit the desk in the door section. Please fit these to the left OR right door section depending on which side you require the desk

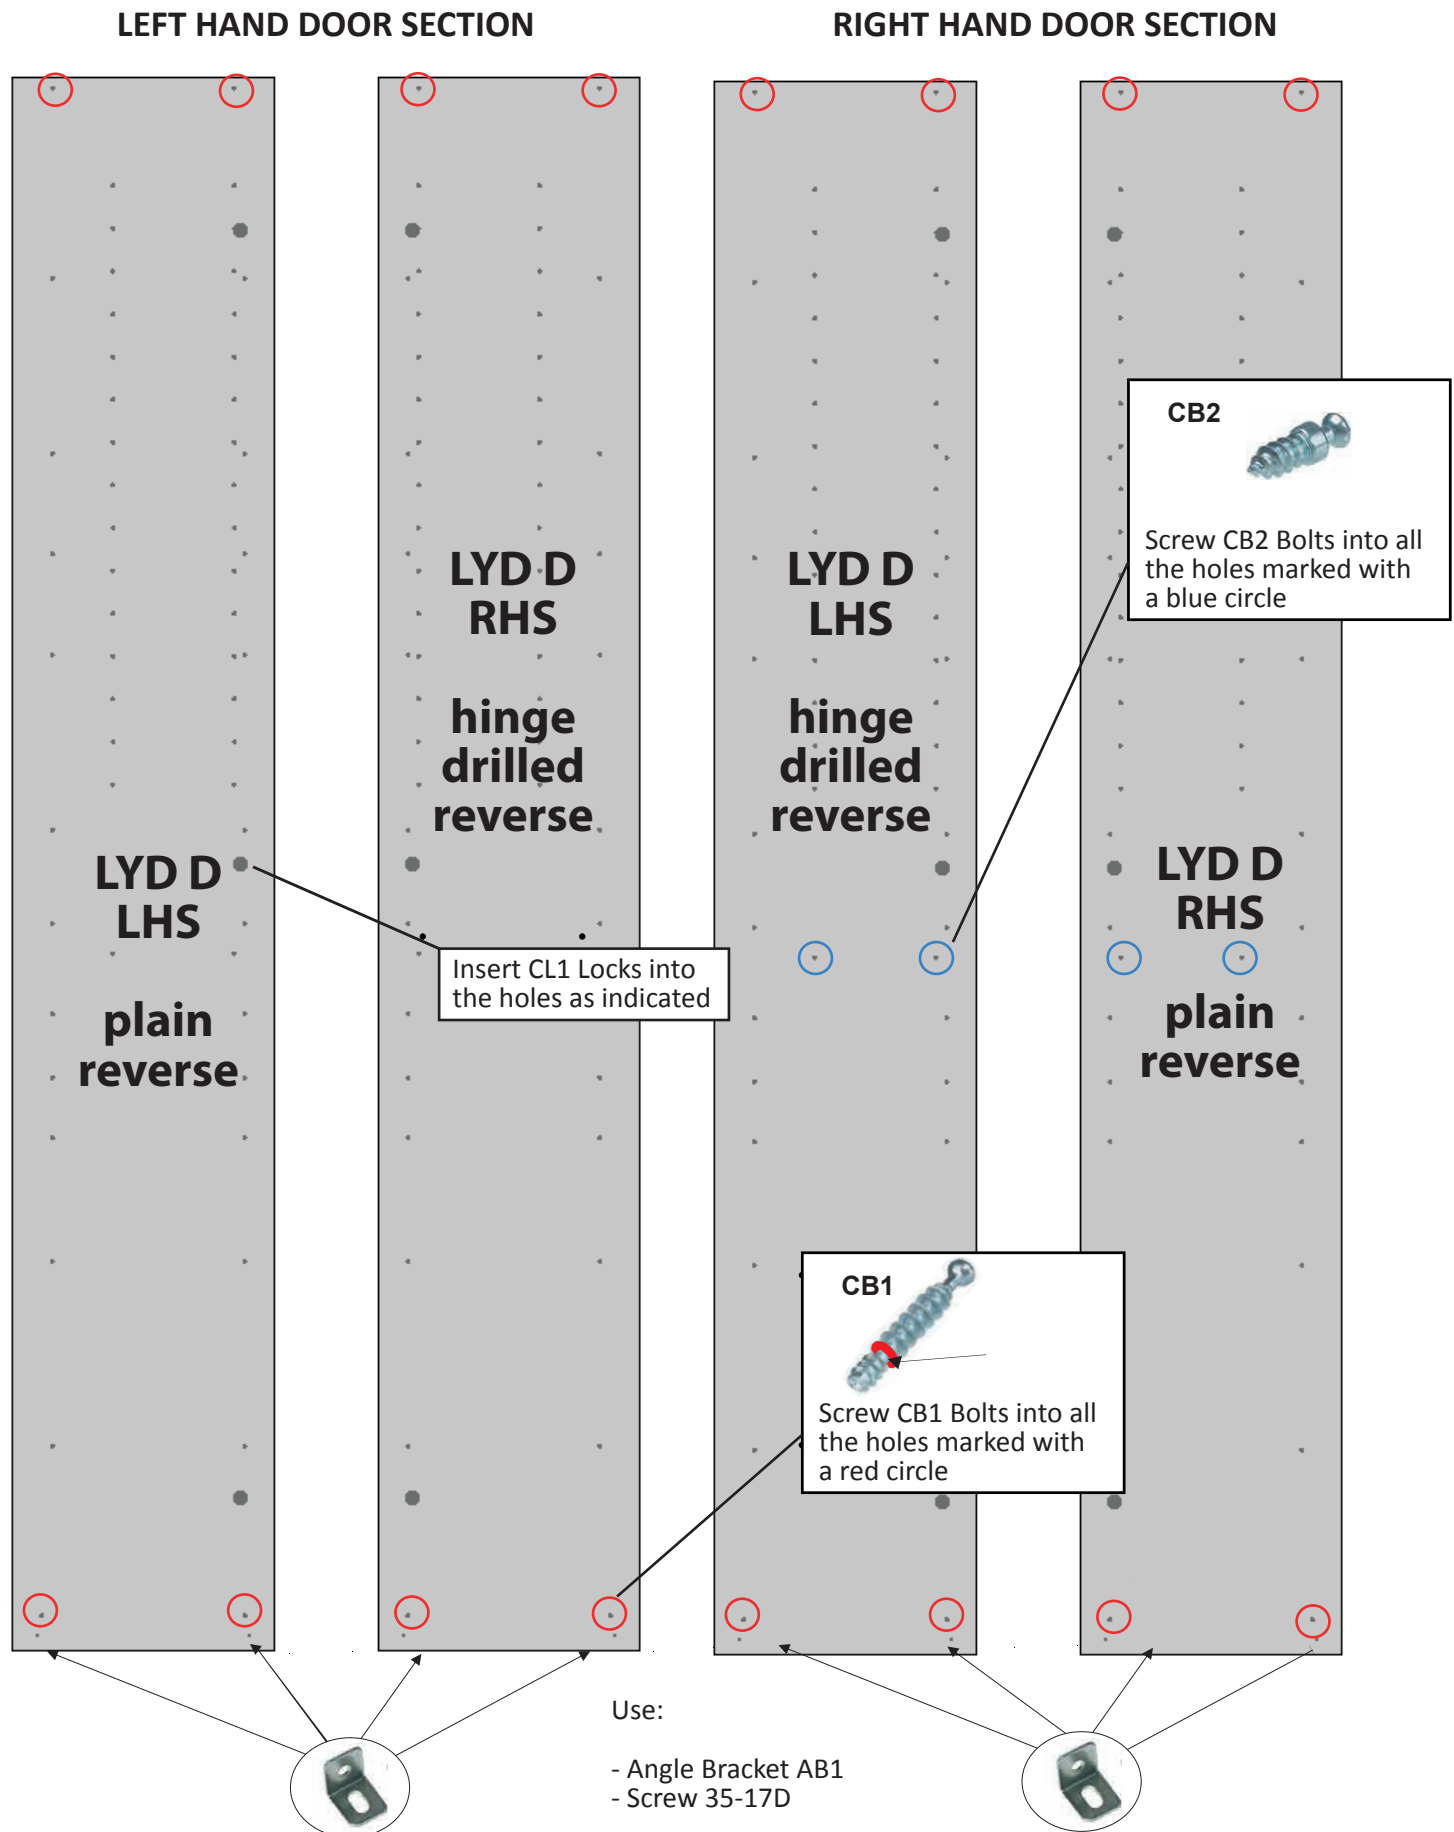


STEP 16

Insert CL1 connecting locks into the LYD D TOP and the LYD D BASE as shown below. Then attach the C2 casters to the LYD D BASE using screws 35-17D as shown below. Repeat this process for both top and base panels.

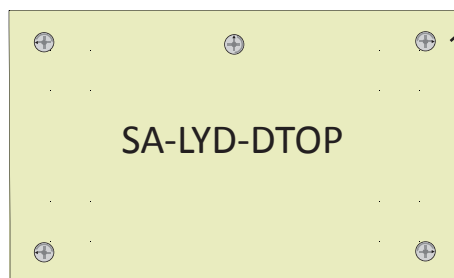

Insert CL1 Locks into the holes as indicated

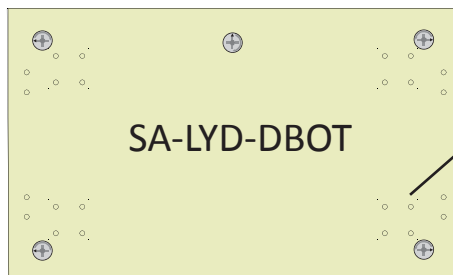

Attach Castor C2 to SA35-BASE using 35-17D Screws




STEP 17

With the LYD D LHS laying on the solid flat clean surface (we recommend the floor). Attach the LYD D LHS and LYD D RHS to the LYD D BASE and LYD D TOP and secure by tightening the locks you have already fitted. Then fix the angle brackets to the base using screw 35-17D.

LEFT HAND SIDE DOOR SECTION

RIGHT HAND SIDE DOOR SECTION

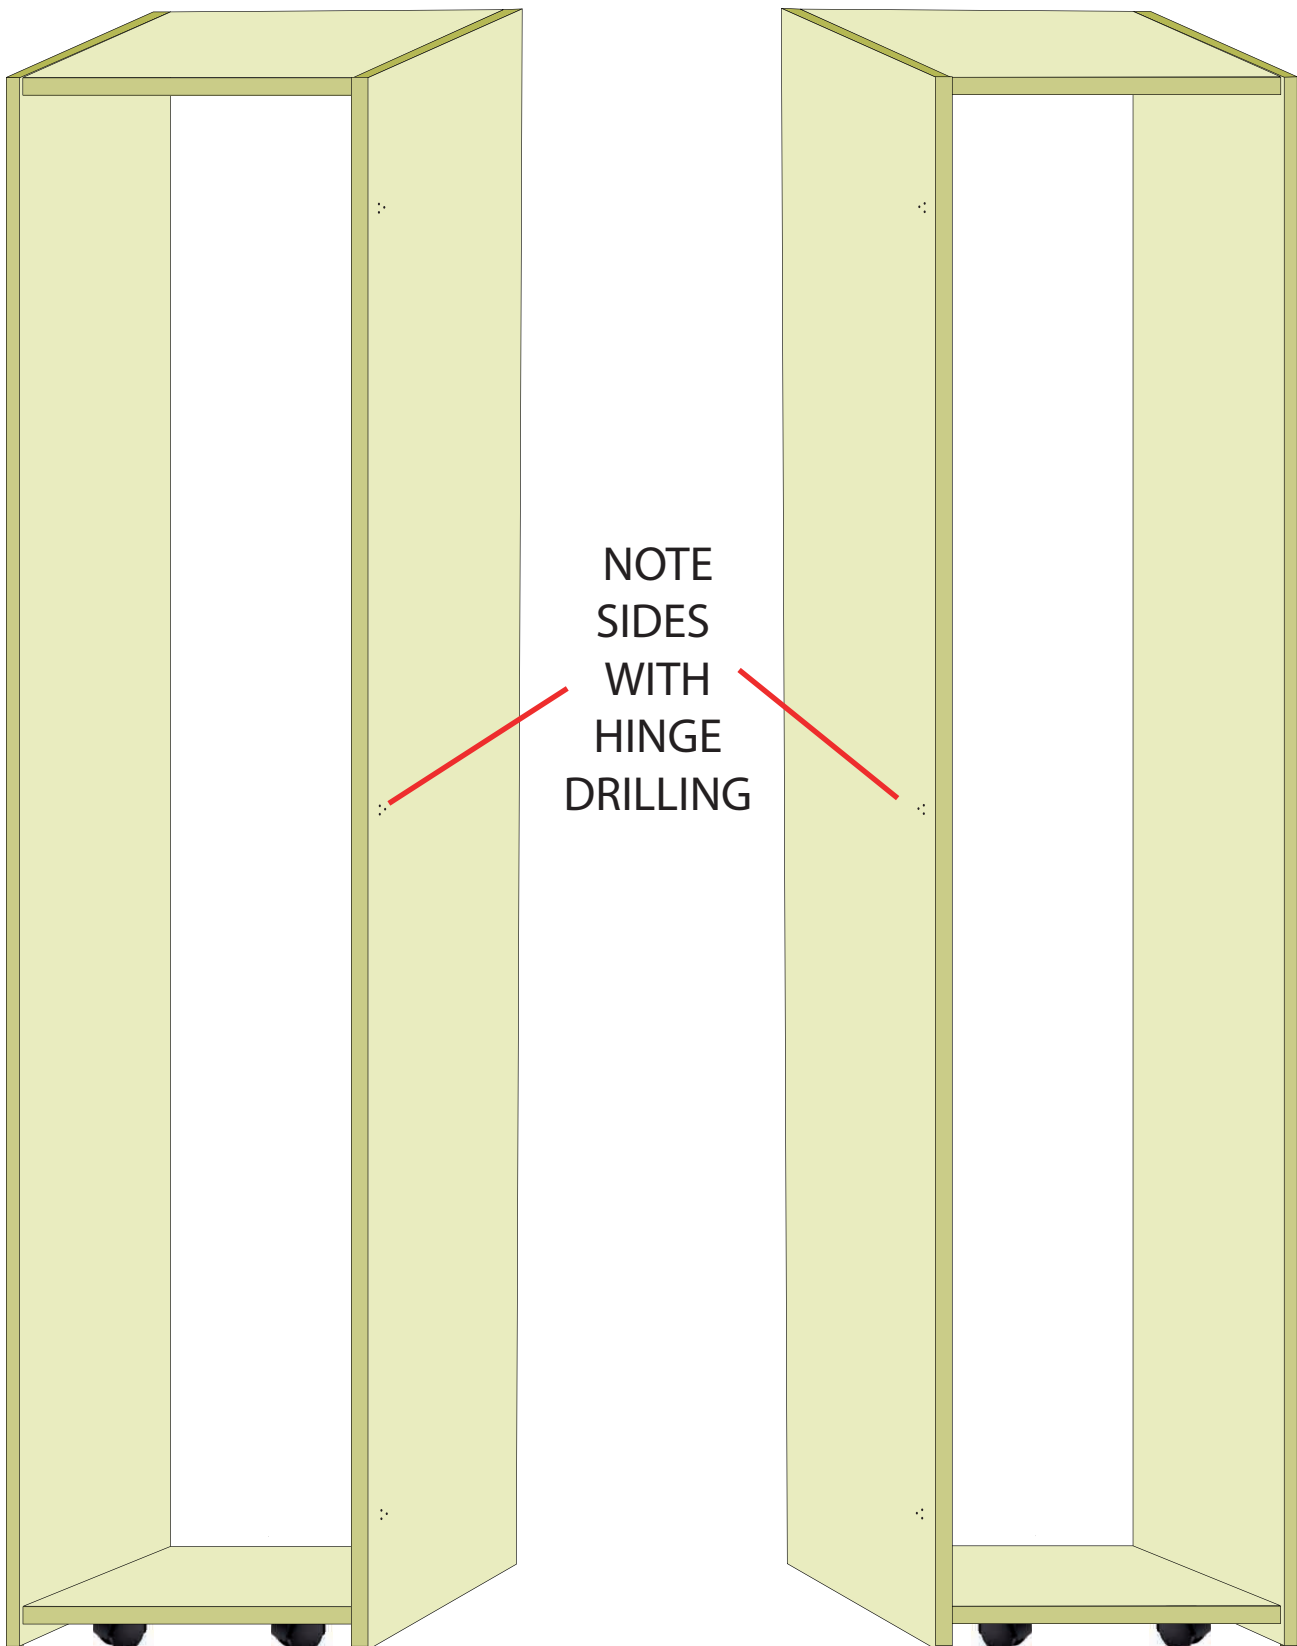


STEP 19

With the Door Fascia Panel LYD D FASCIA laying on the solid flat clean surface (we recommend the floor). Attach the section that you have already assembled and secure by tightening the locks which you have already inserted into the panels.



LEFT HAND SIDE DOOR SECTION

RIGHT HAND SIDE DOOR SECTION

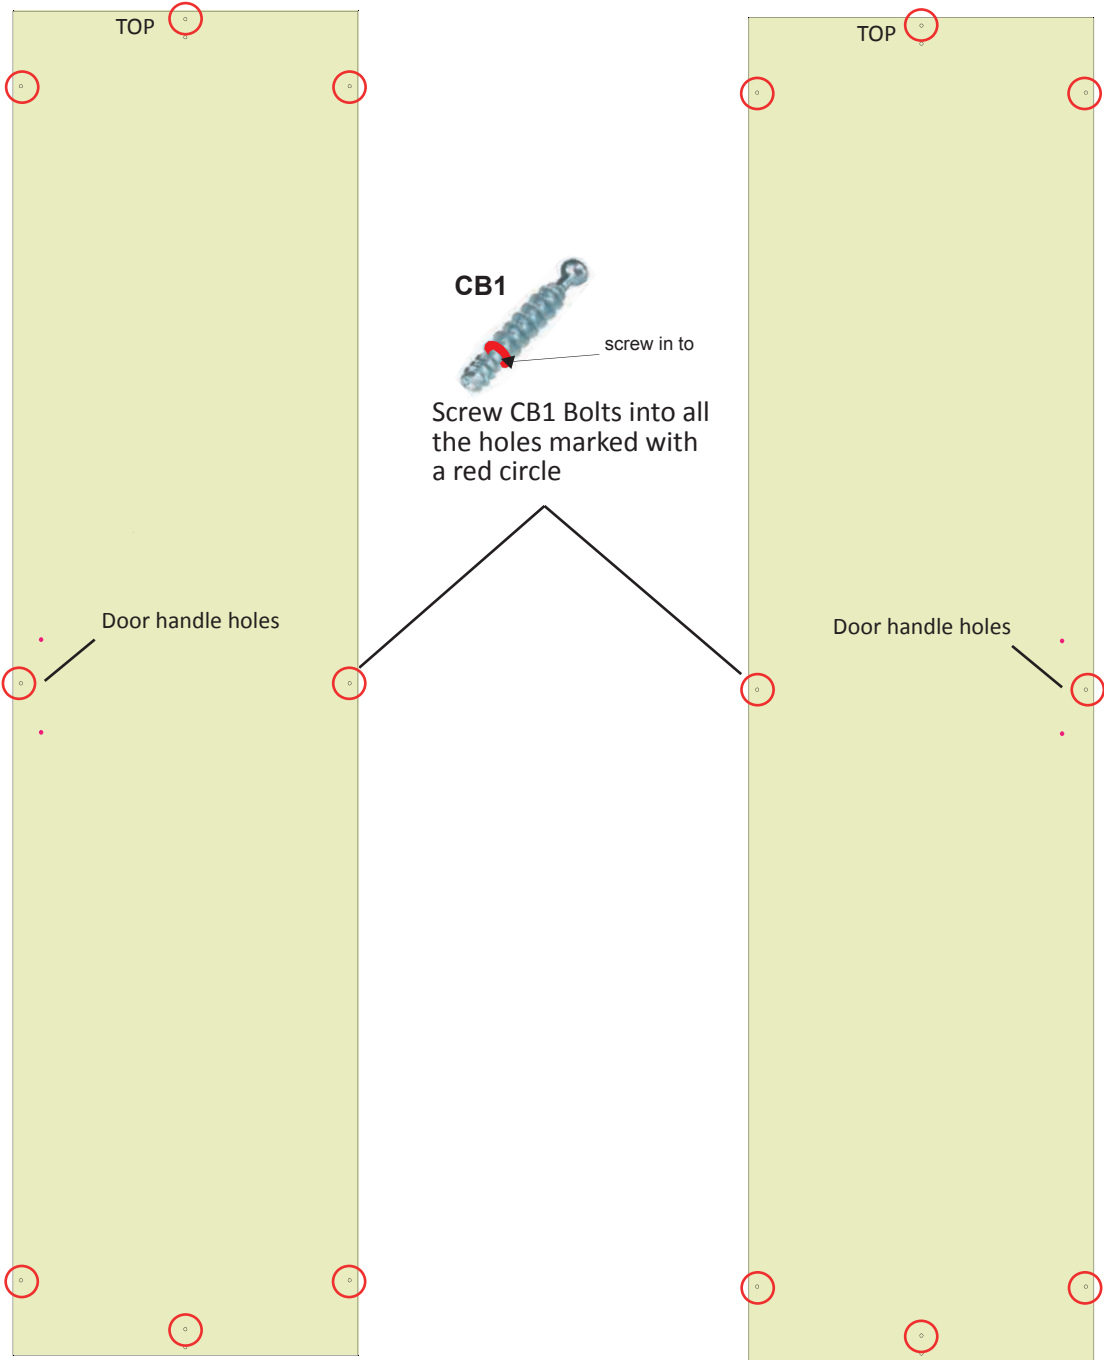


STEP 18




Using Hinge H2 and Screws 30-15S attach the completed door sections to the centre section you have already constructed.

Fix handles to the door sections using screws S30.

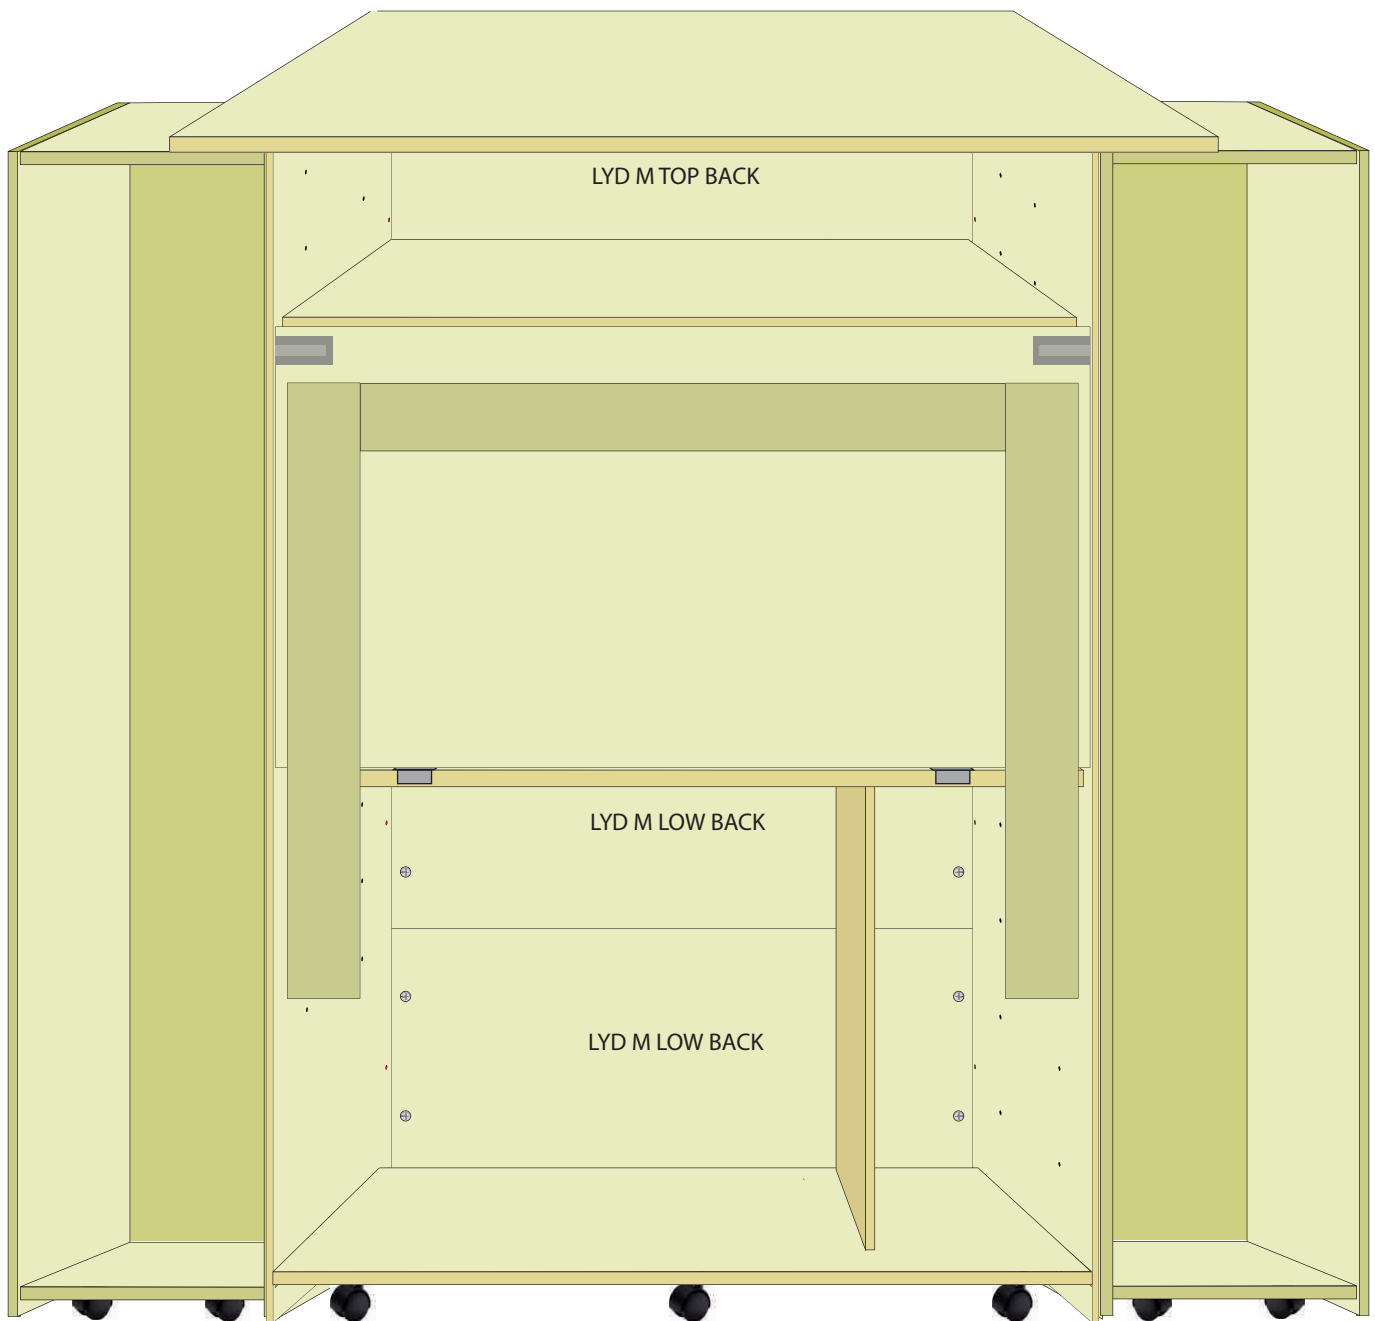

STEP 19

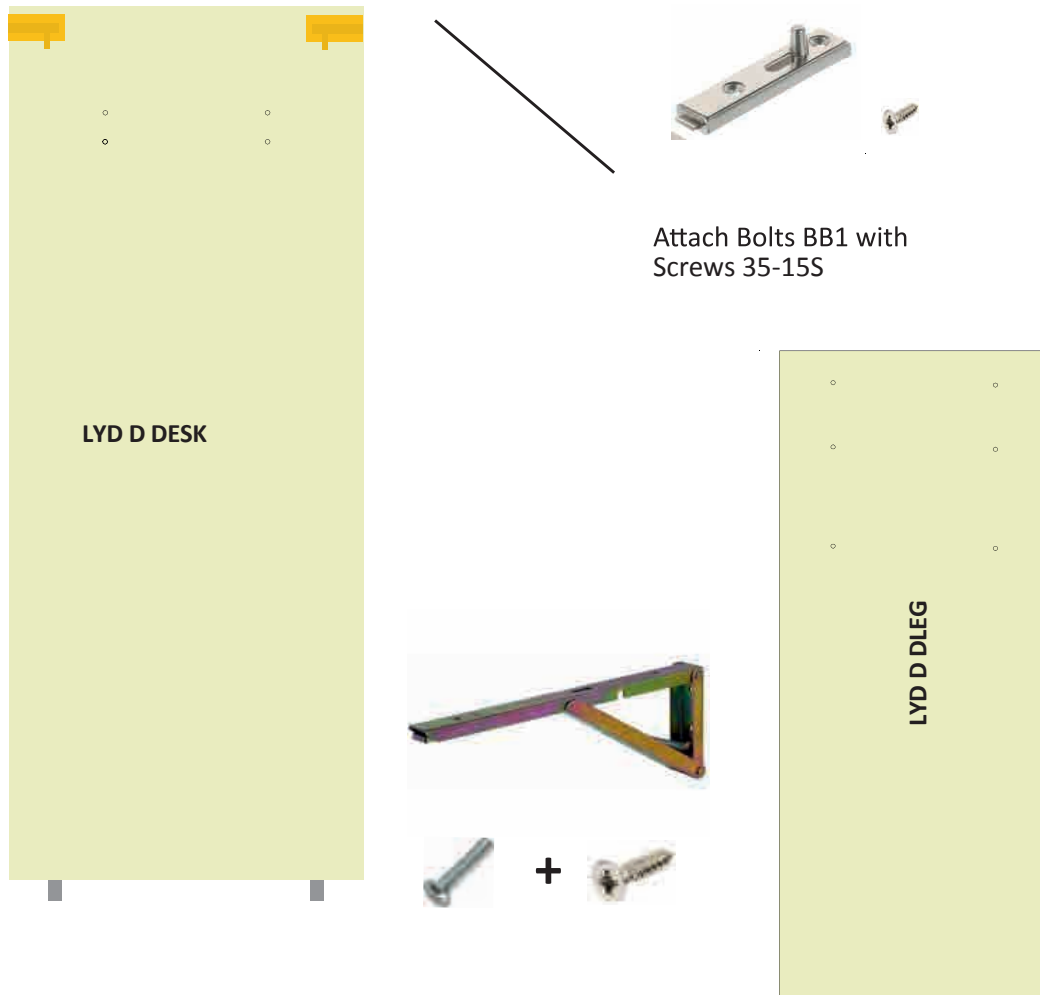


Attach the LYD D DLEG to the LYD D DESK using the Folding Leg Bracket (FLB1) and screws S10 (to fit into the brass inserts) and screw 35-15S (to fix into the pre-drilled holes)

Attach Hinges (H3) to the reverse of the desk panel using screws 35-15S

STEP 20


Fit the LYD D DSH into the Left hand or right hand door section according to preference. Insert onto the CB2 bolts you have fitted and tighten the connecting locks.

Fit the LYD D FIXSH into the door section that is not having a desk. This is designed to strengthen the door section and should be fitted close to the middle of the door section. Use CB2 Bolts and tighten the pre fitted locks to fix in place.

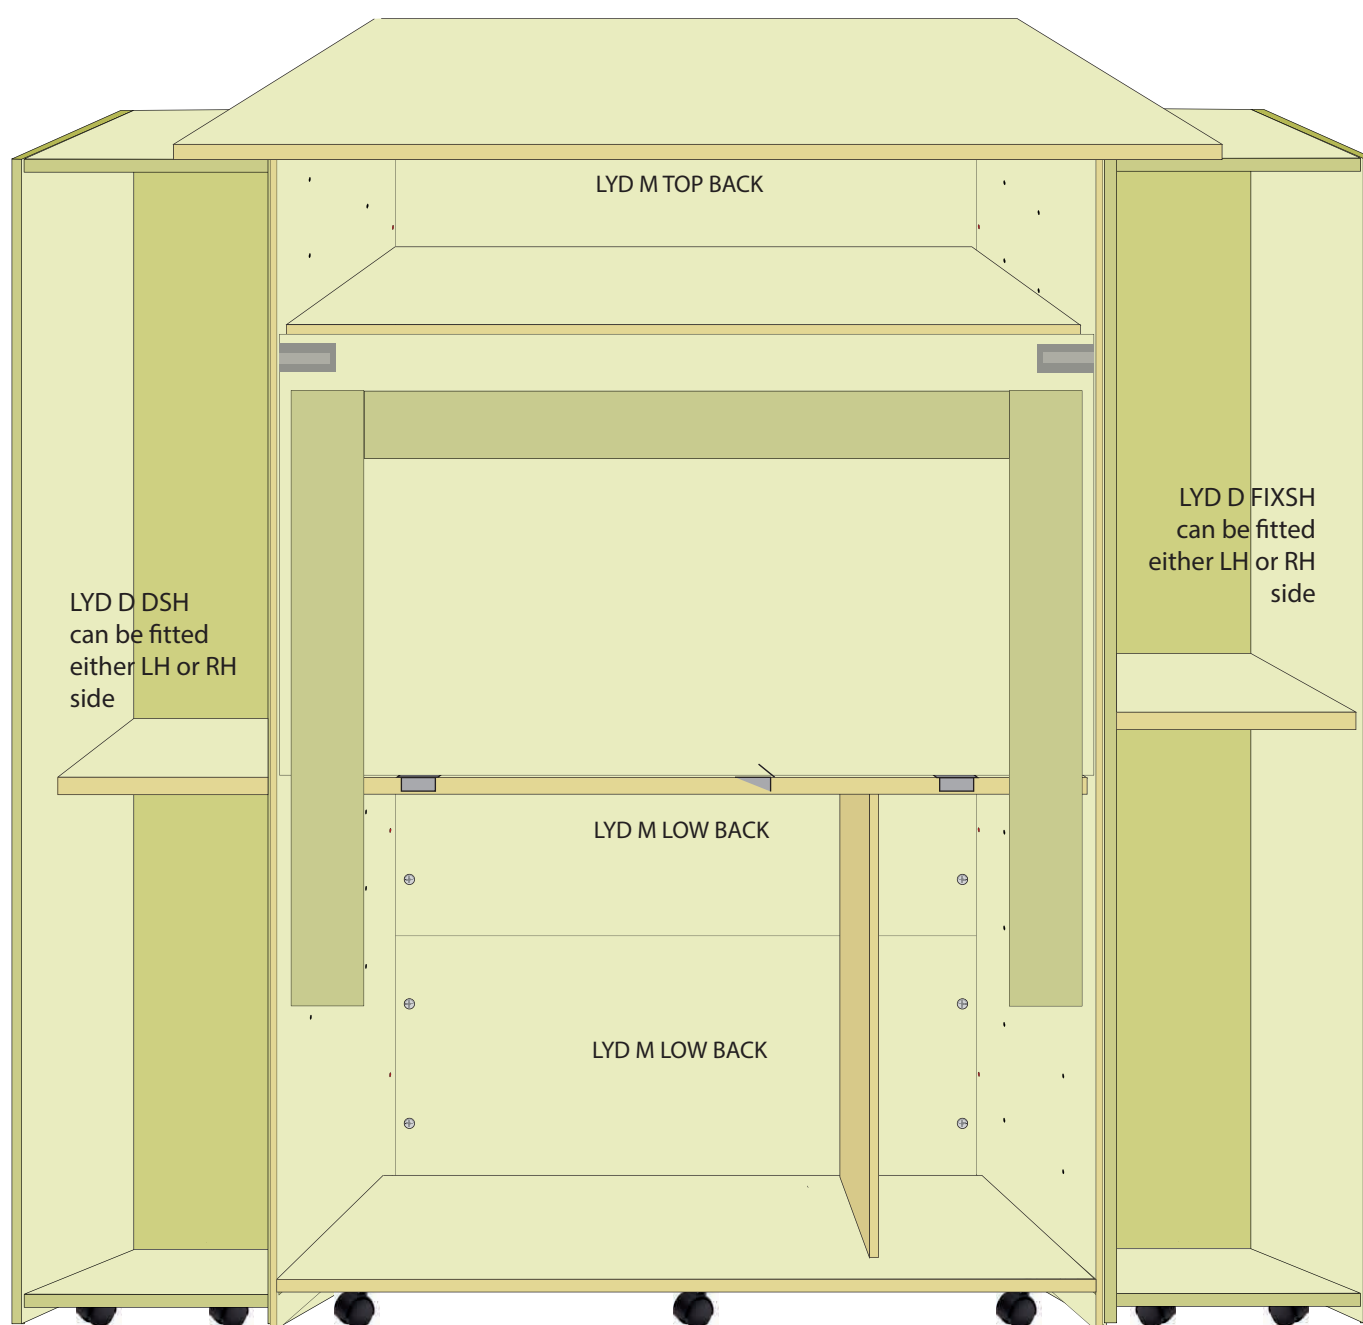

STEP 21

Attach the complete door desk to the door section using the table hinge that you have already attached to the desk use screws 35-15S. Once in place ensure it is secured with bolts supplied.

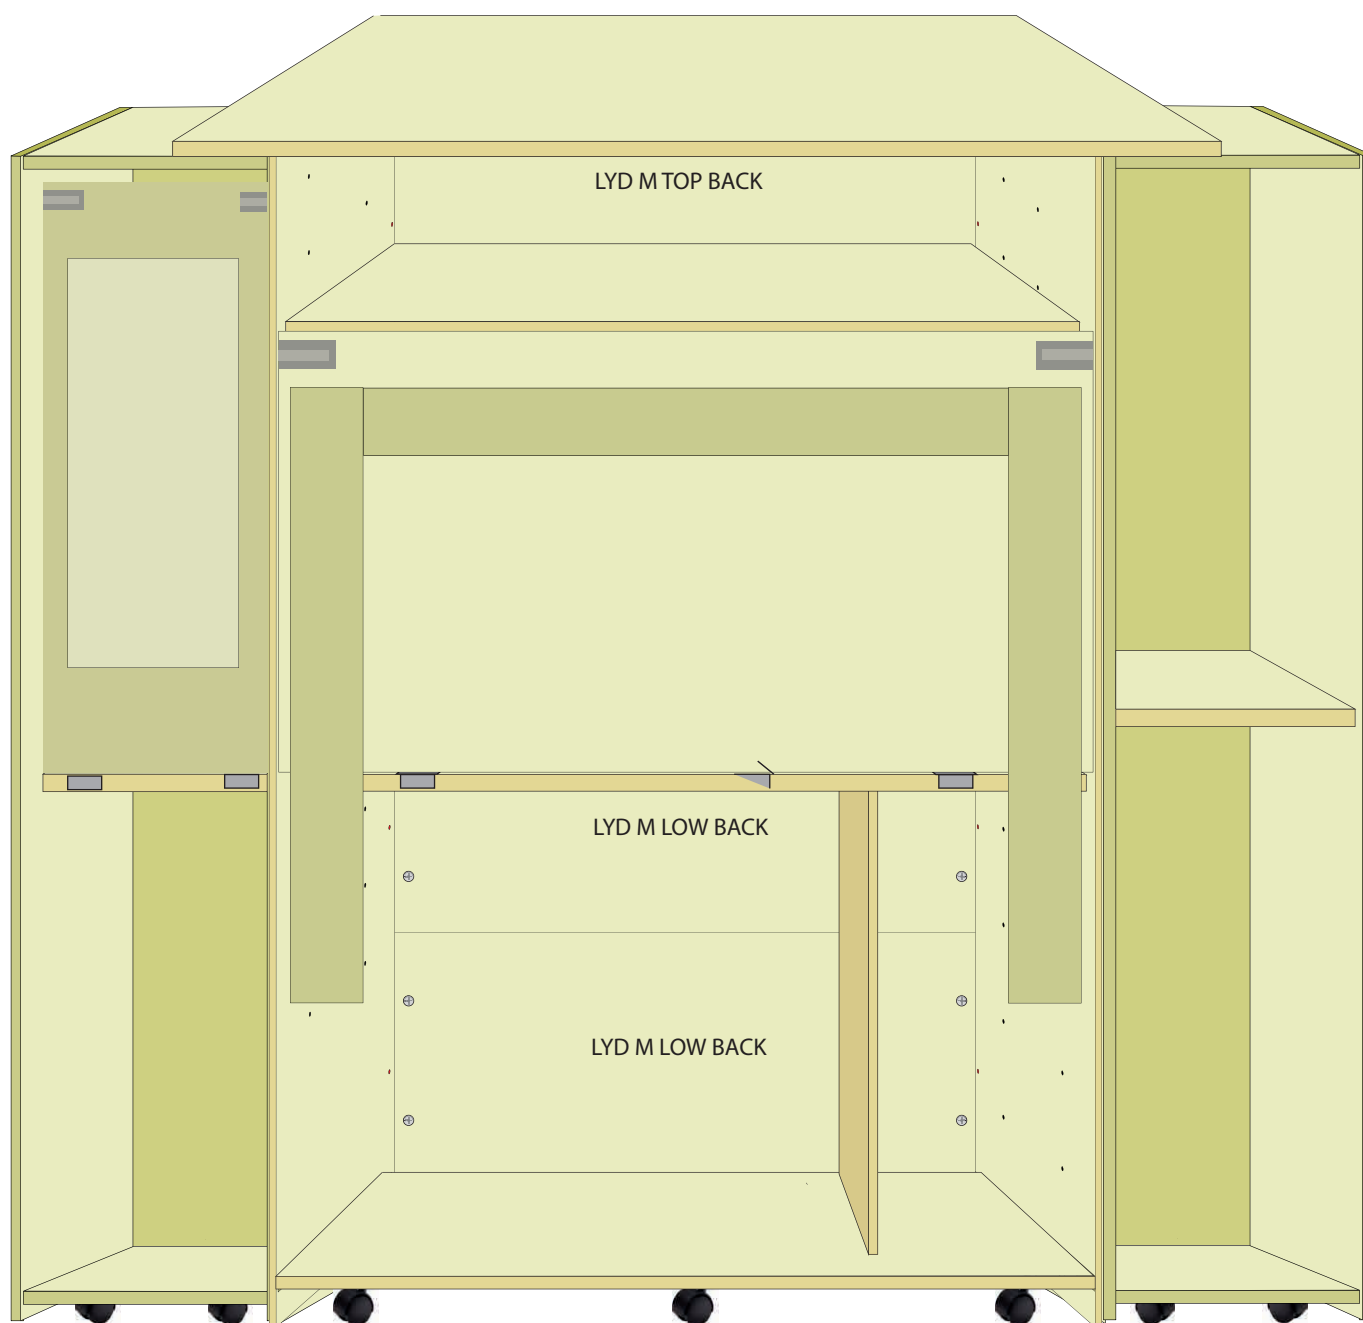

IMPORTANT

WHEN USING THE DESK
ALWAYS MAKE SURE TO
HAVE FOLDED OUT THE
LEG BEFORE UNDOING
THE BOLT AND FOLDING
THE DESK DOWN.
FAILURE TO DO THIS MAY
RESULT IN DAMAGE TO
THE HINGES AND THE UNIT

STEP 21

A standard layout of boxes is shown below. The best way to fit the boxes is to start at the bottom of each section, insert boxes or trays then add shelf pegs (SP3) and a shelf above then continue until the section is full. Use shelves as indicated below and SP3 shelf pegs as supplied.

The SP3 Shelf pegs should be fitted light tap and it will lock onto the



this way up. When you have placed the shelf on top give it a shelf peg to prevent sliding when removing boxes.

Box layout





The Storeaway Lydford Allstore unit is designed and manufactured in the UK by:

