








## Assembly Instructions



**It is strongly recommended to have two persons present when assembling this item. We advise that you unpack the boxes in the order shown in these instructions and follow the assembly instructions carefully.**

**Please be careful during construction as section of the cupboard may be unstable until construction is complete.**


**Your hardware pack should contain the following:**

 <p>CONNECTING BOLT (CB1) X 60</p>	 <p>FOLDING LEG BRACKET (FLB1) X 2</p>	 <p>TABLE HINGE X 2</p>
 <p>CONNECTING LOCK (CL1) X 60</p>	 <p>WHITE CASTOR (C1) X 4</p>	
 <p>MINI CONNECTING LOCK (CB2) X 12</p>	 <p>SCREW (CHSC-10) X 16</p>	 <p>CABLE OUTLET X 1</p>
 <p>SHELF PEG (SP1) X 92</p>	 <p>WASHER (W1) X 16</p>	 <p>BOLT (BB1) X 4</p>
 <p>BLACK CASTOR (C2) X 8</p>	 <p>ANGLE BRACKET (AB1) X 12</p>	
 <p>SCREW (S10) X 18</p>	 <p>HANDLE (HANDLE1) X 2</p>	
 <p>SCREW (35-17D) X 80</p>	 <p>SCREW (S30) X 4</p>	 <p>CONNECTING PLATE X 2</p>
 <p>SCREW (35-15S) X 14</p>	 <p>HINGE (H2) X 6</p>	 <p>SCREW (30-15S) X 44</p>

# STEP 1

You will need to open box -


SA-LYD-1S

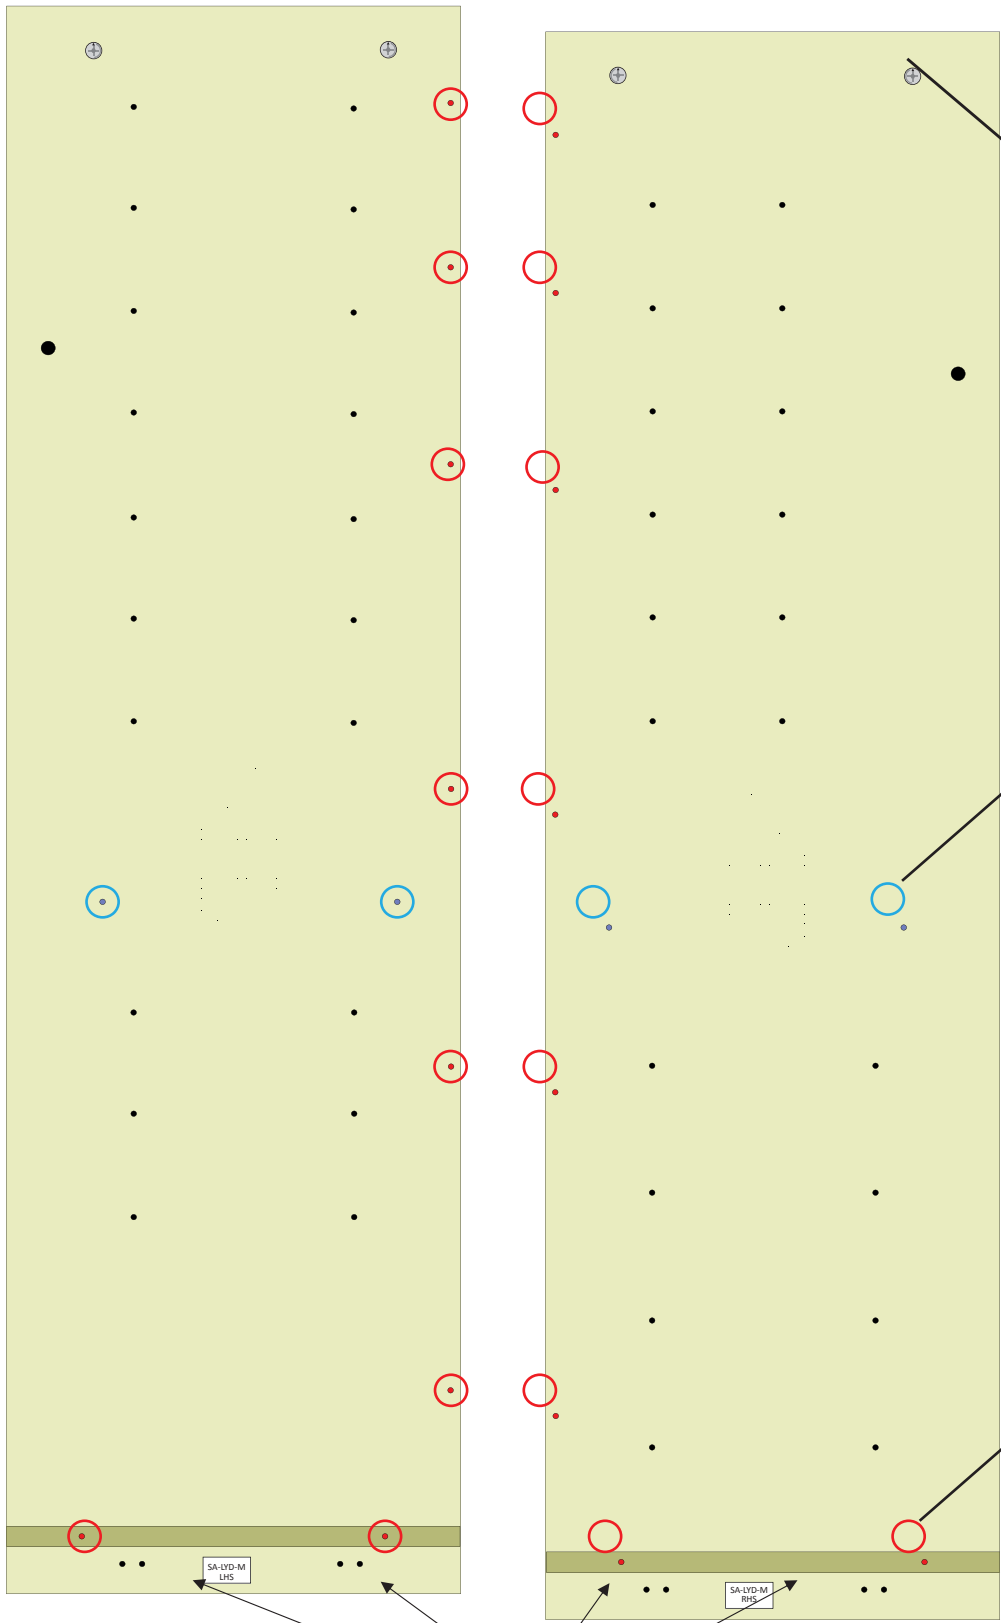



Insert CL1 Locks into the holes as indicated



Screw CB2 Bolts into all the holes marked with a red circle

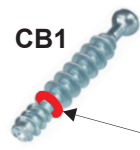

Screw CB1 Bolts into all the holes marked with a red circle

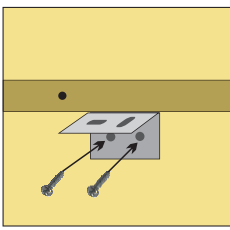


- Use:
- Angle Bracket AB1
  - Screw 35-17D

## STEP 2


### You will need to open box -

From this box you will require panel SA-LYD-MBOT

SA-LYD-  
DTB&BCD

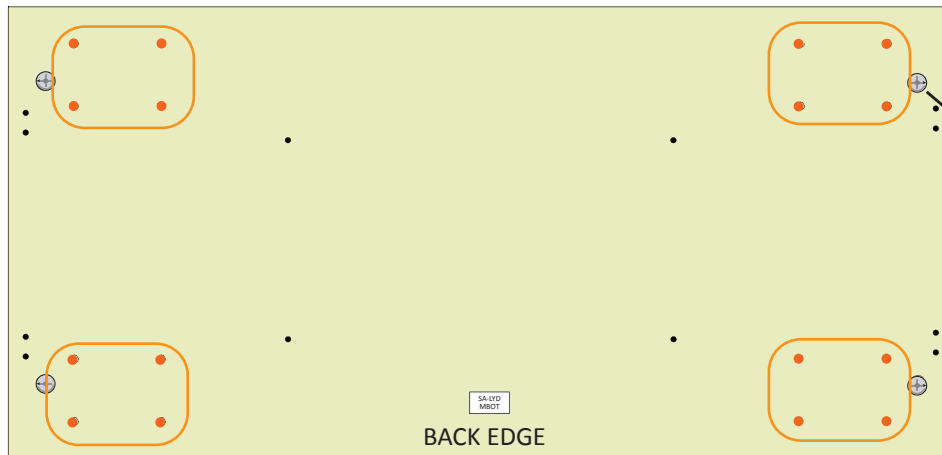

Insert CL1 Locks into the holes as indicated

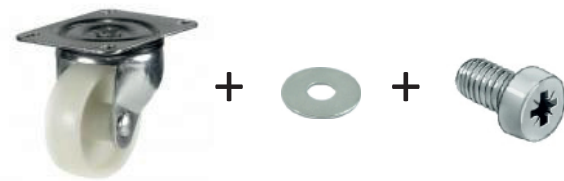

Attach the White Castors C1 to the base using washer W1 and Screw CHSC-10 - castor locations are marked in orange

## STEP 3

### You will need to open box -

Insert CL1 Locks into the holes in the 2 panels from this box.

SA-2B

## STEP 4

### You will need to open box -


From this box you will require panel SA-LYD-MBACK

Insert CL1 Locks into the holes in the SA-LYD-MBACK panel from this box.

SA-LYD-  
TCB&DSH


## STEP 5

With the SA-LYD-M-LHS laying on the solid flat clean surface (we recommend the floor) attach the three back panels and the base. Secure by turning all of the connecting locks in the backs and the base approx one half turn. Then screw the remaining 35-17D screws into the angle brackets to secure the side to the base.

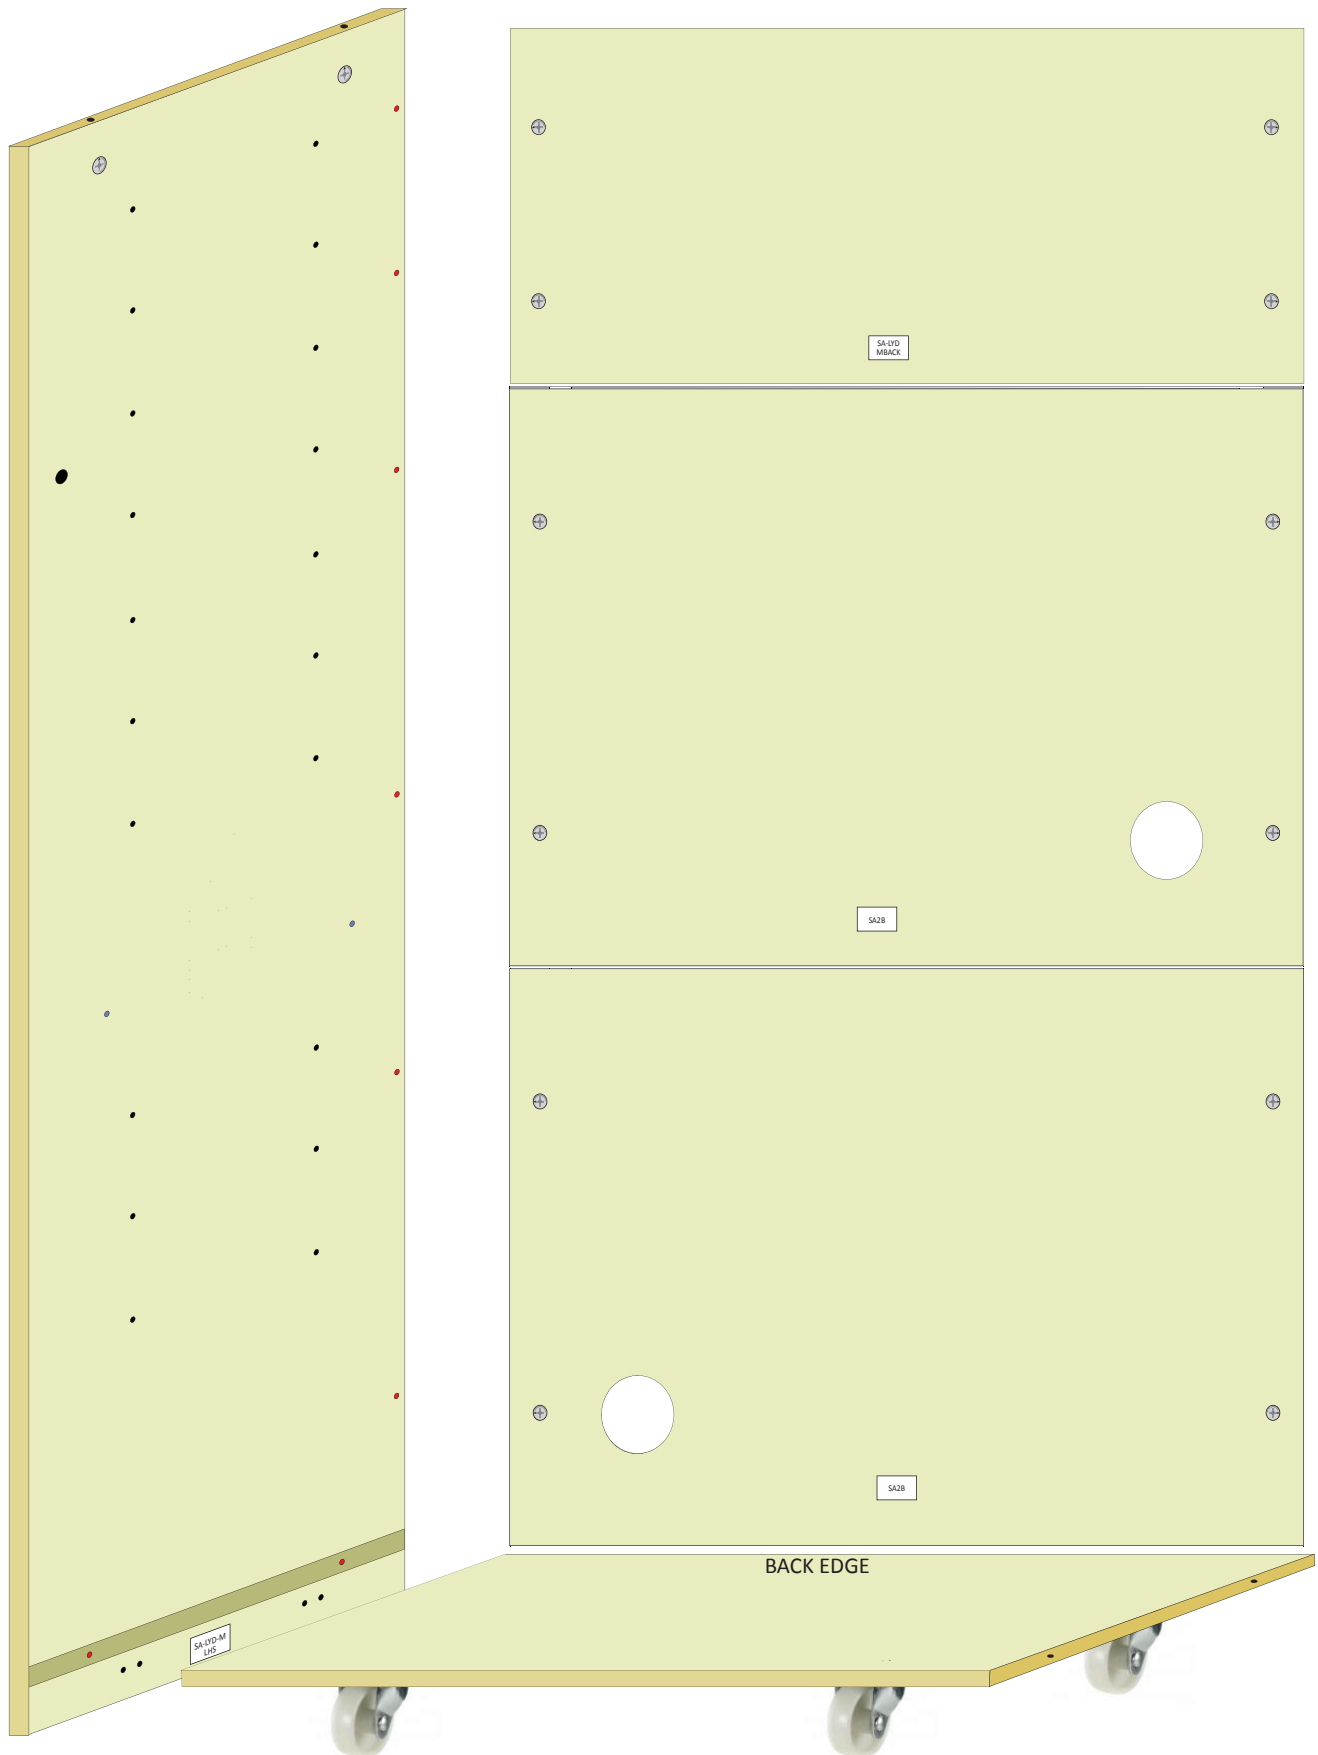

## STEP 6



With the unit still laying on the floor place the SA-LYD-M-RHS onto the top and secure all the connecting locks and angle brackets. Then carefully stand the unit onto its wheels. **IT IS HIGHLY RECOMMENDED TO HAVE TWO PEOPLE TO COMPLETE THIS STEP TO AVOID INJURY OR DAMAGE TO THE PRODUCT.**

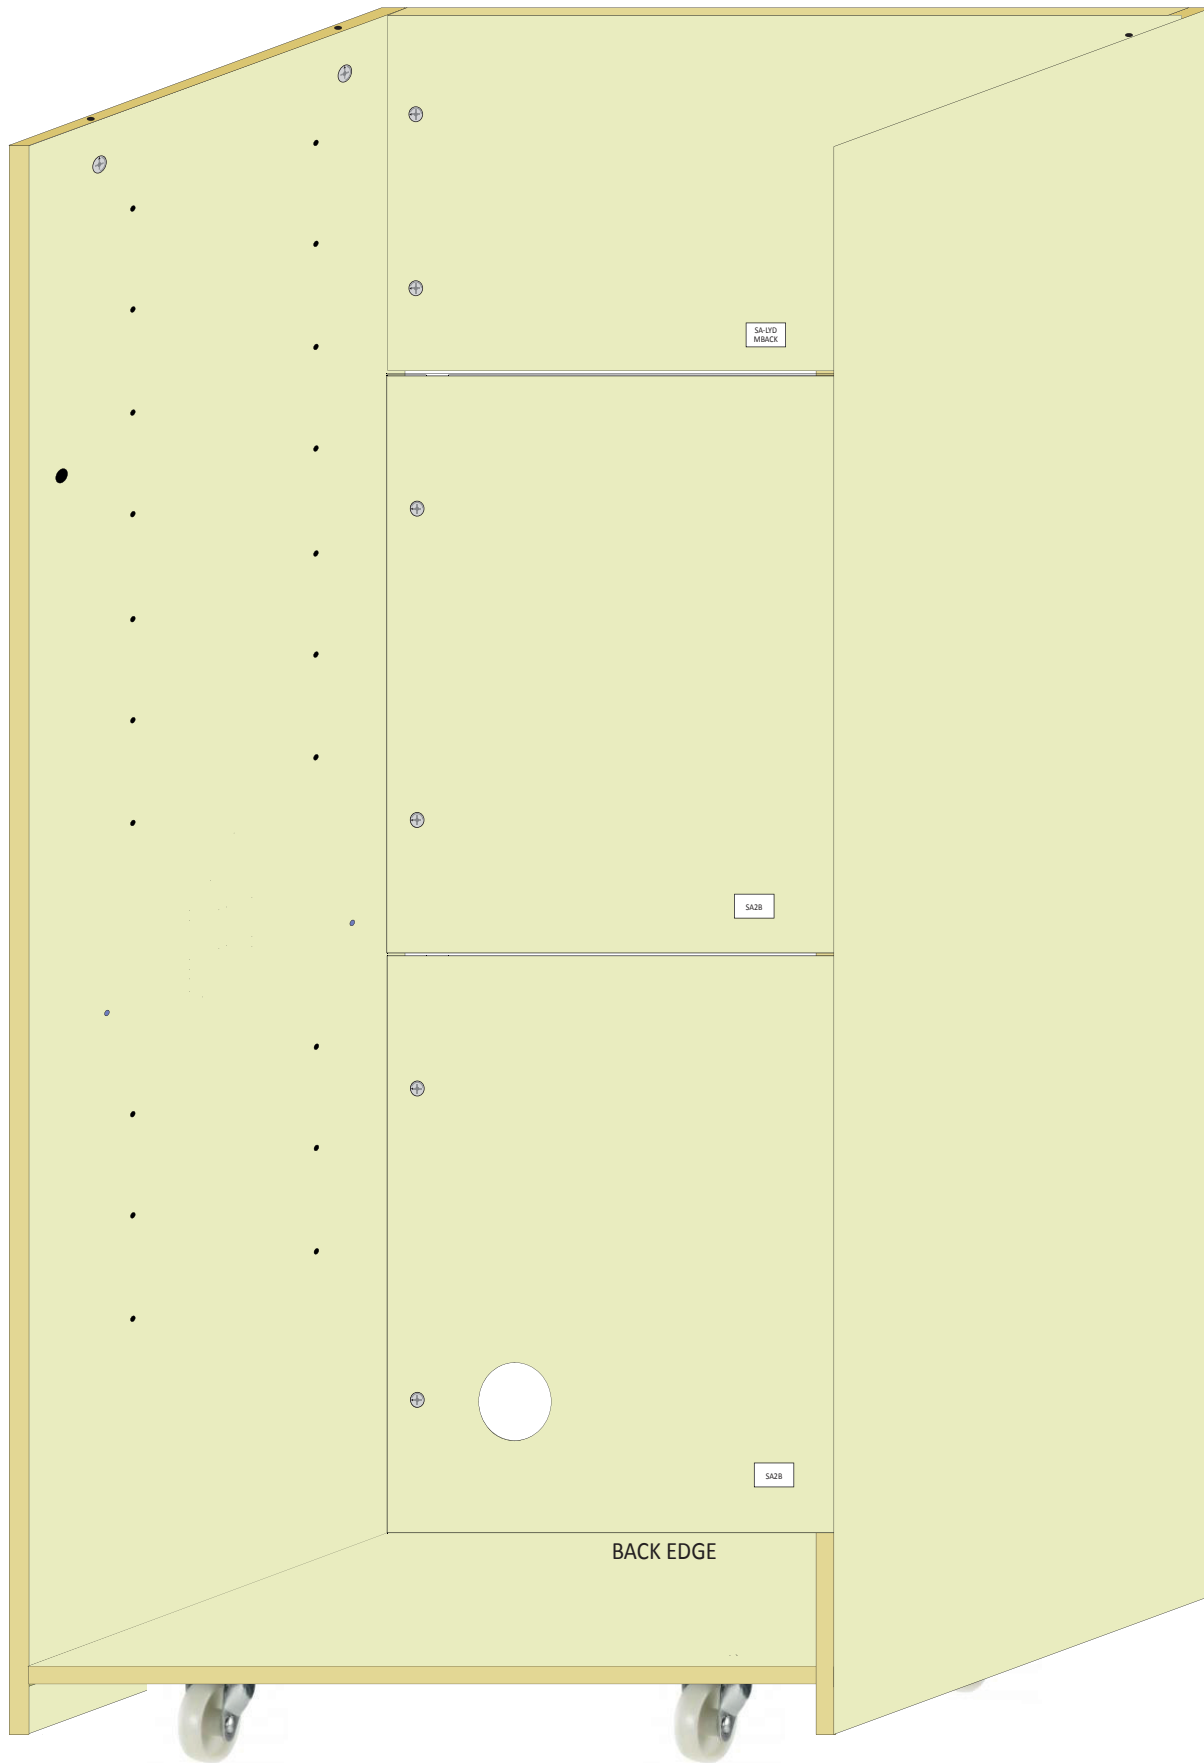

## STEP 7

You will need to open box -

SA-LYD  
TDSK

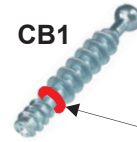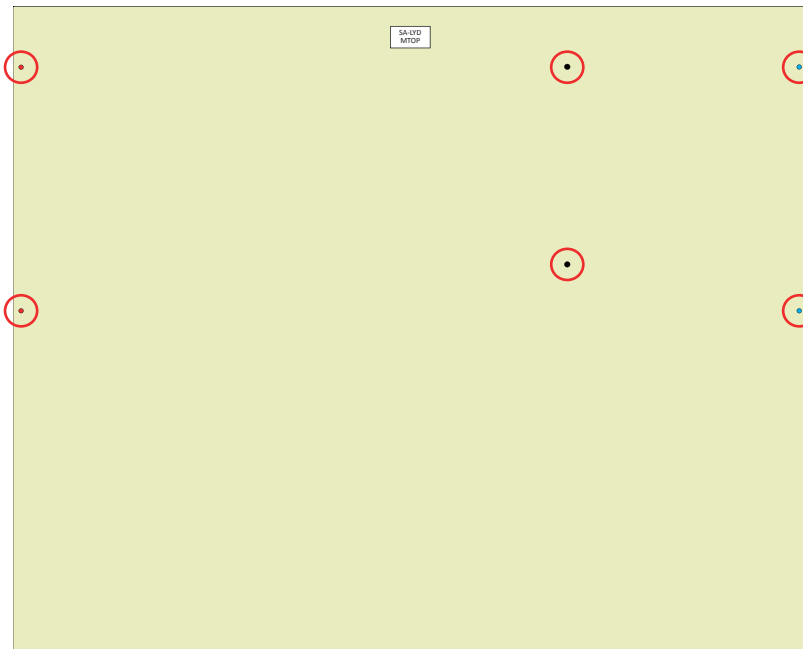

screw in to  
this point

Screw CB1 Bolts into all  
the holes marked with  
a red circle


Once you have screwed the bolts into the panel place it carefully to one side.







## STEP 9

You will require SA-LYD-BCD from box SA-LYD-DTB-BCD you have already opened. Fit the bottom centre divider as shown below using connecting locks and the bolts you have already fitted to the base.

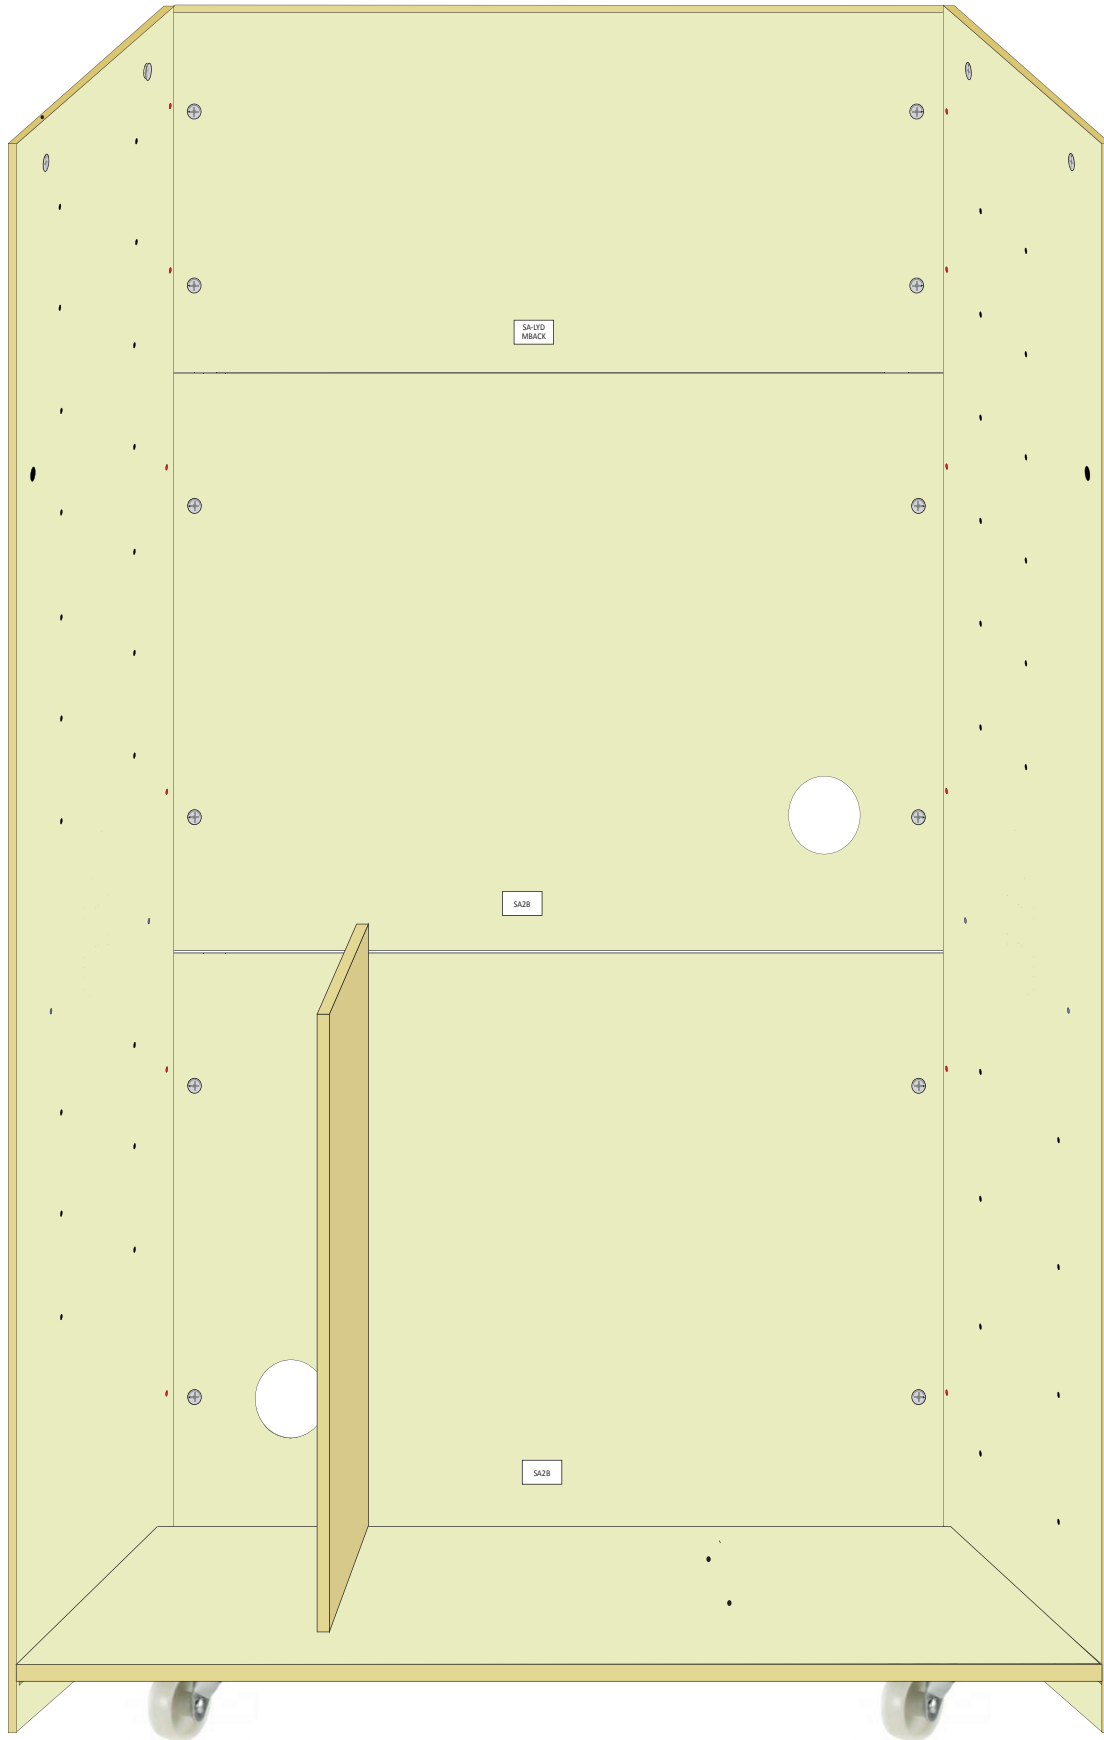


# STEP 10

You will require SA-LYD-DSH from box SA-LYD-TCB-DSH you have already opened. Fit the table hinges and connecting bolts as shown below.

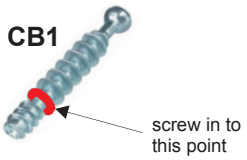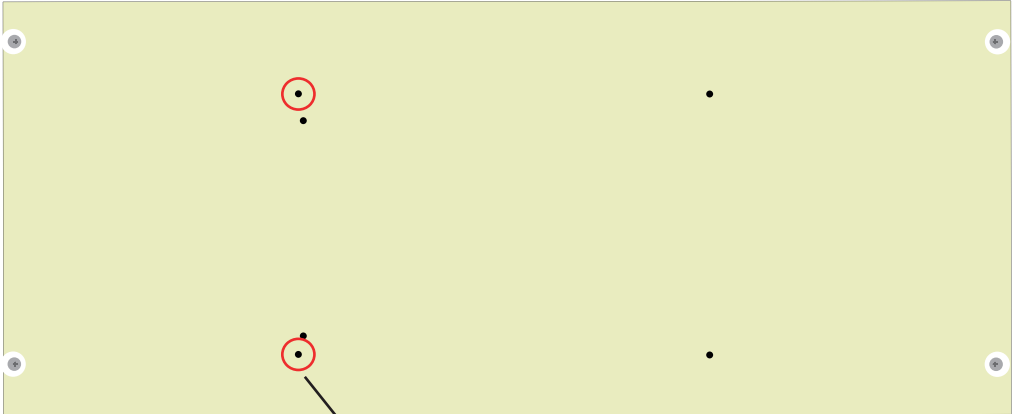

Screw CB1 Bolts into all the holes marked with a red circle

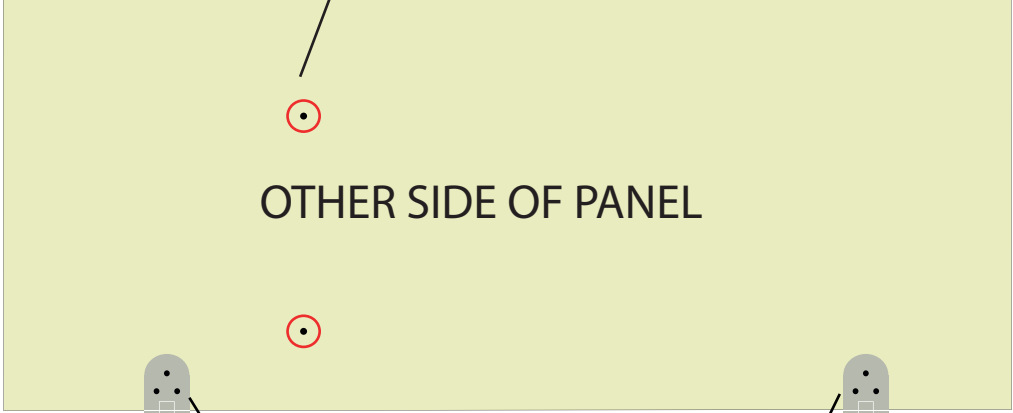


Use screws 35-15S to attach the table hinges




## STEP 11

Fit the desk shelf and tighten all of the connecting locks including those pre-fitted into the underside of the desk shelf.

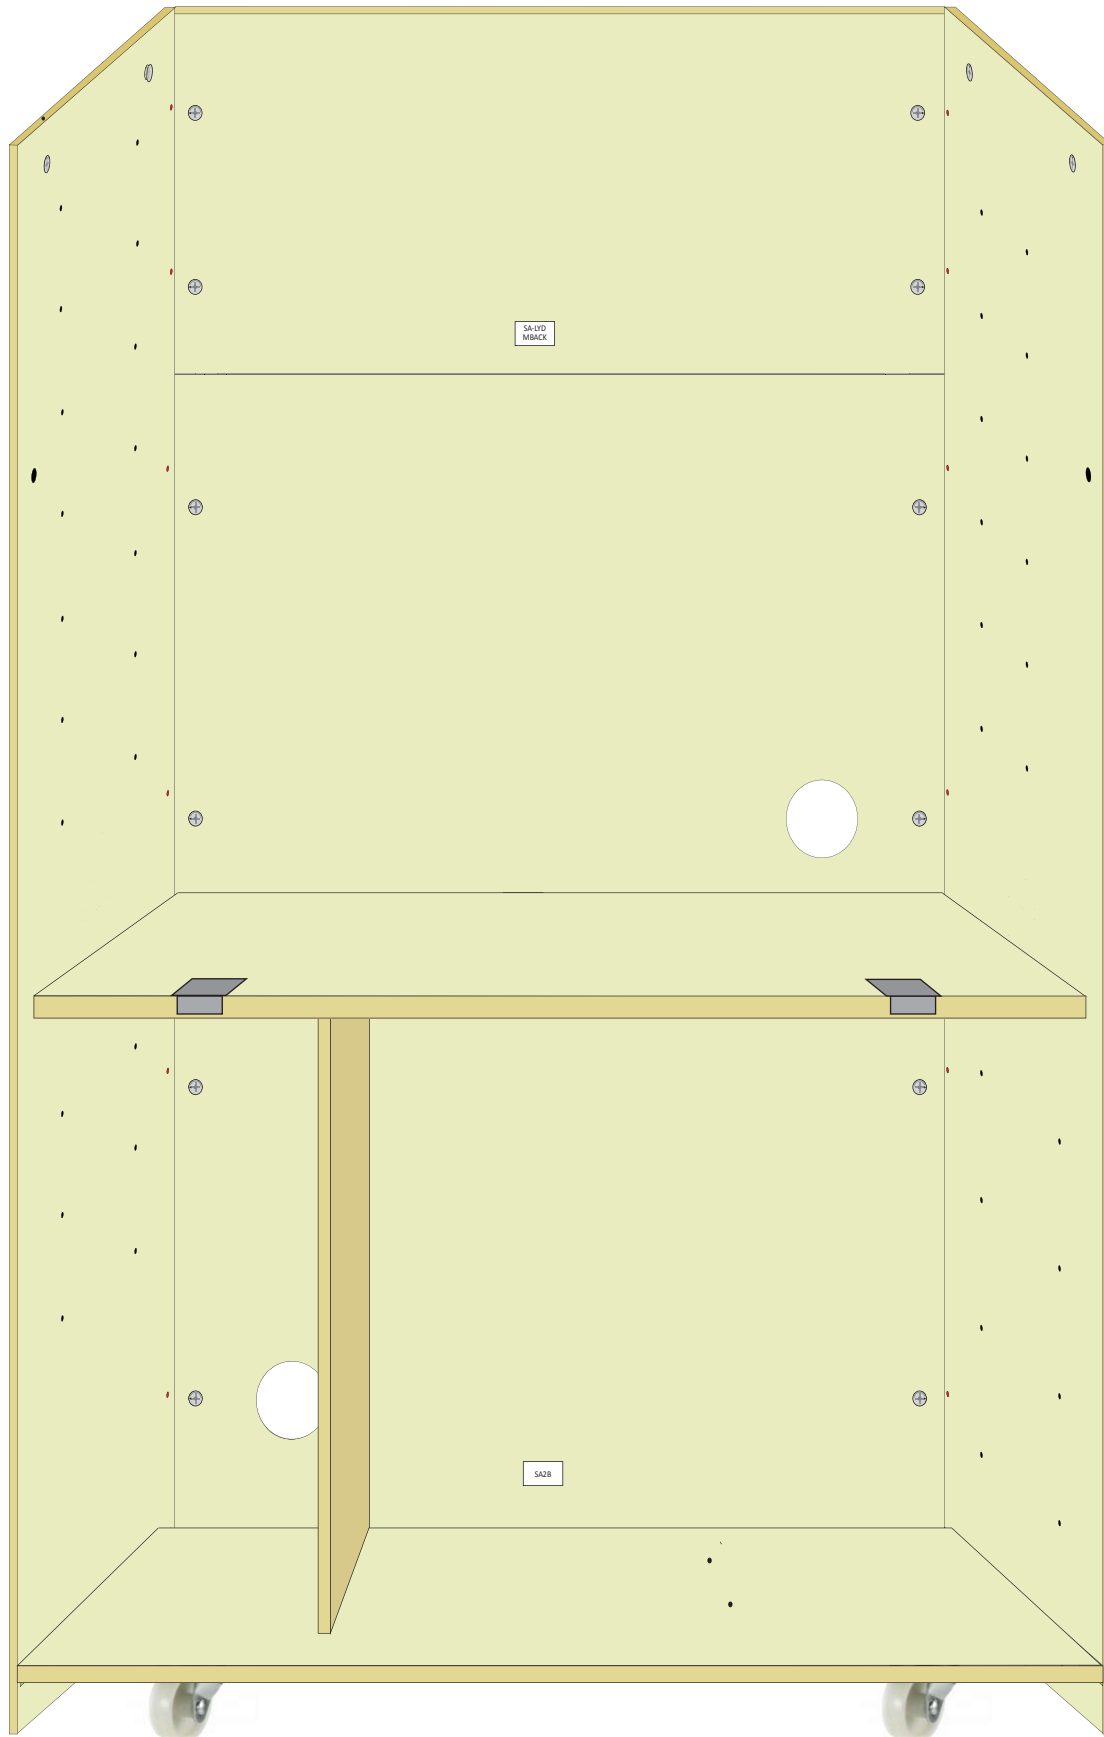


# STEP 12

You will require SA-LYD-TCD from box SA-LYD-TCB-DSH you have already opened. Fit the top centre divider as shown below using connecting locks and the bolts you have already fitted to the desk shelf.

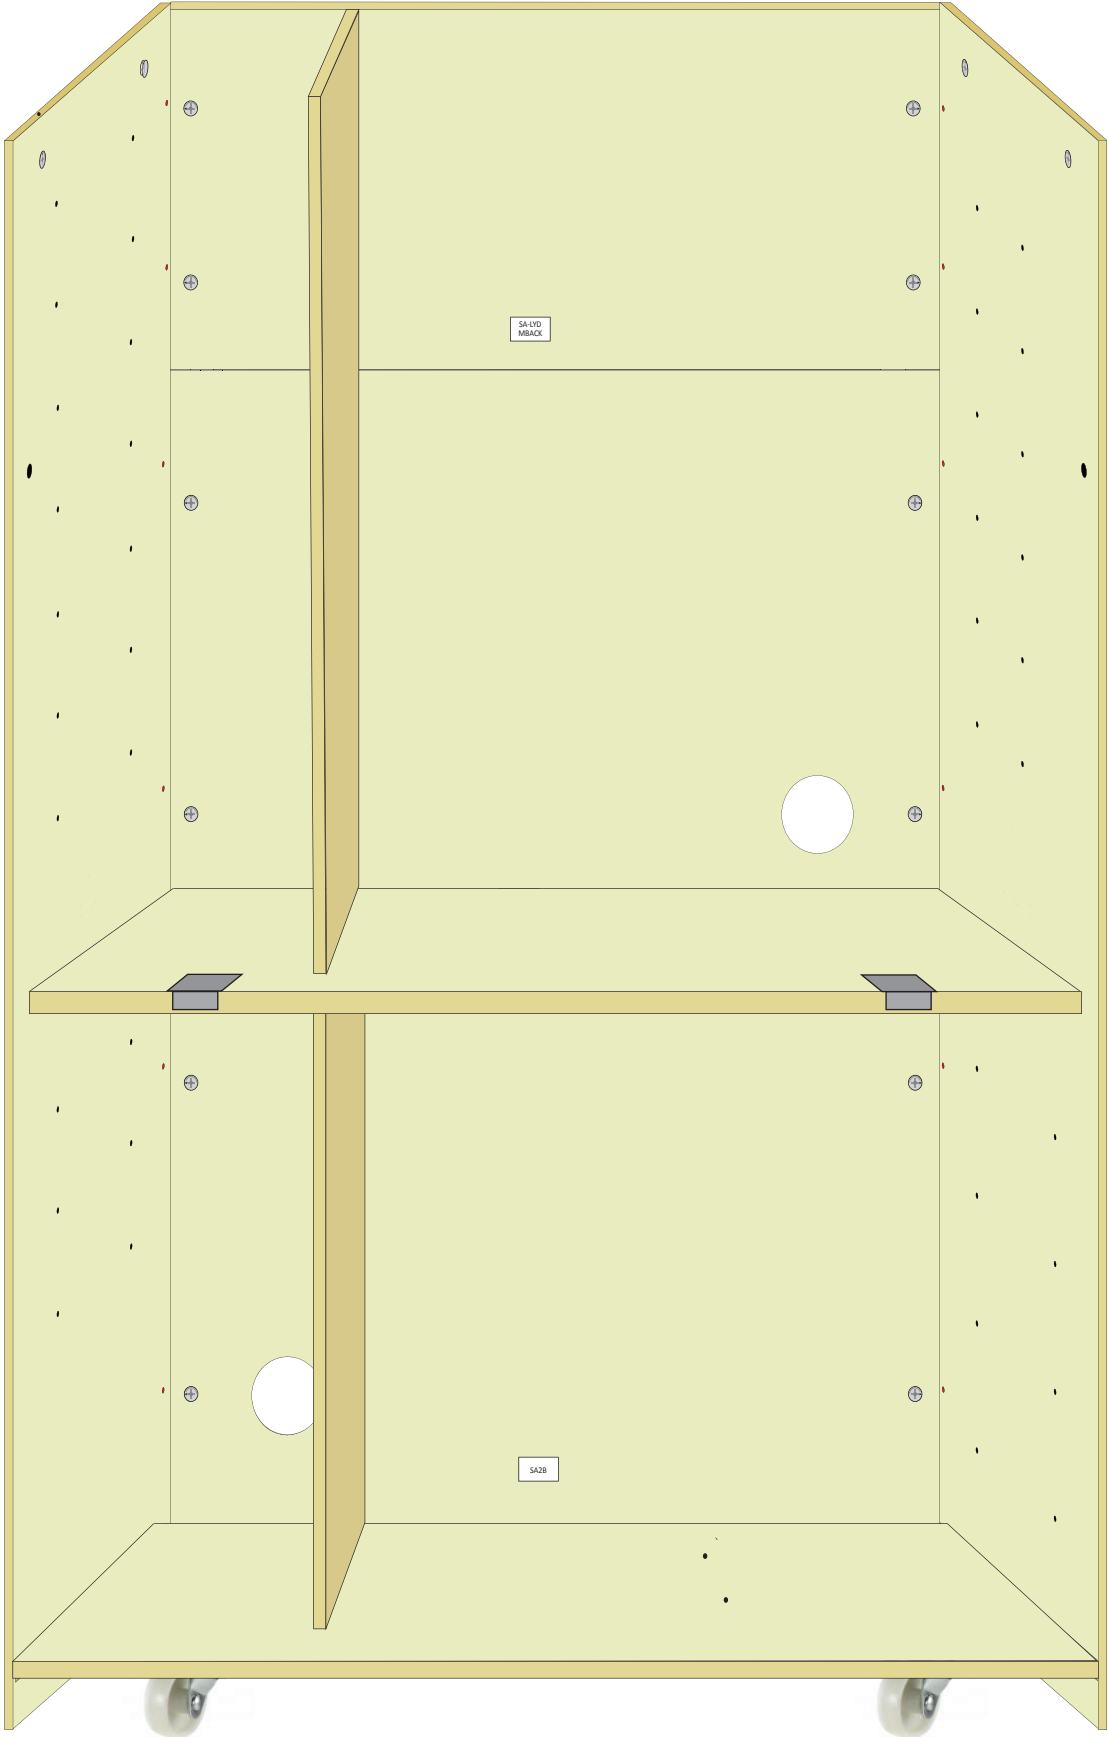

## STEP 13

Fit the SA-LYD-MTOP to the unit by tightening all of the connecting locks.

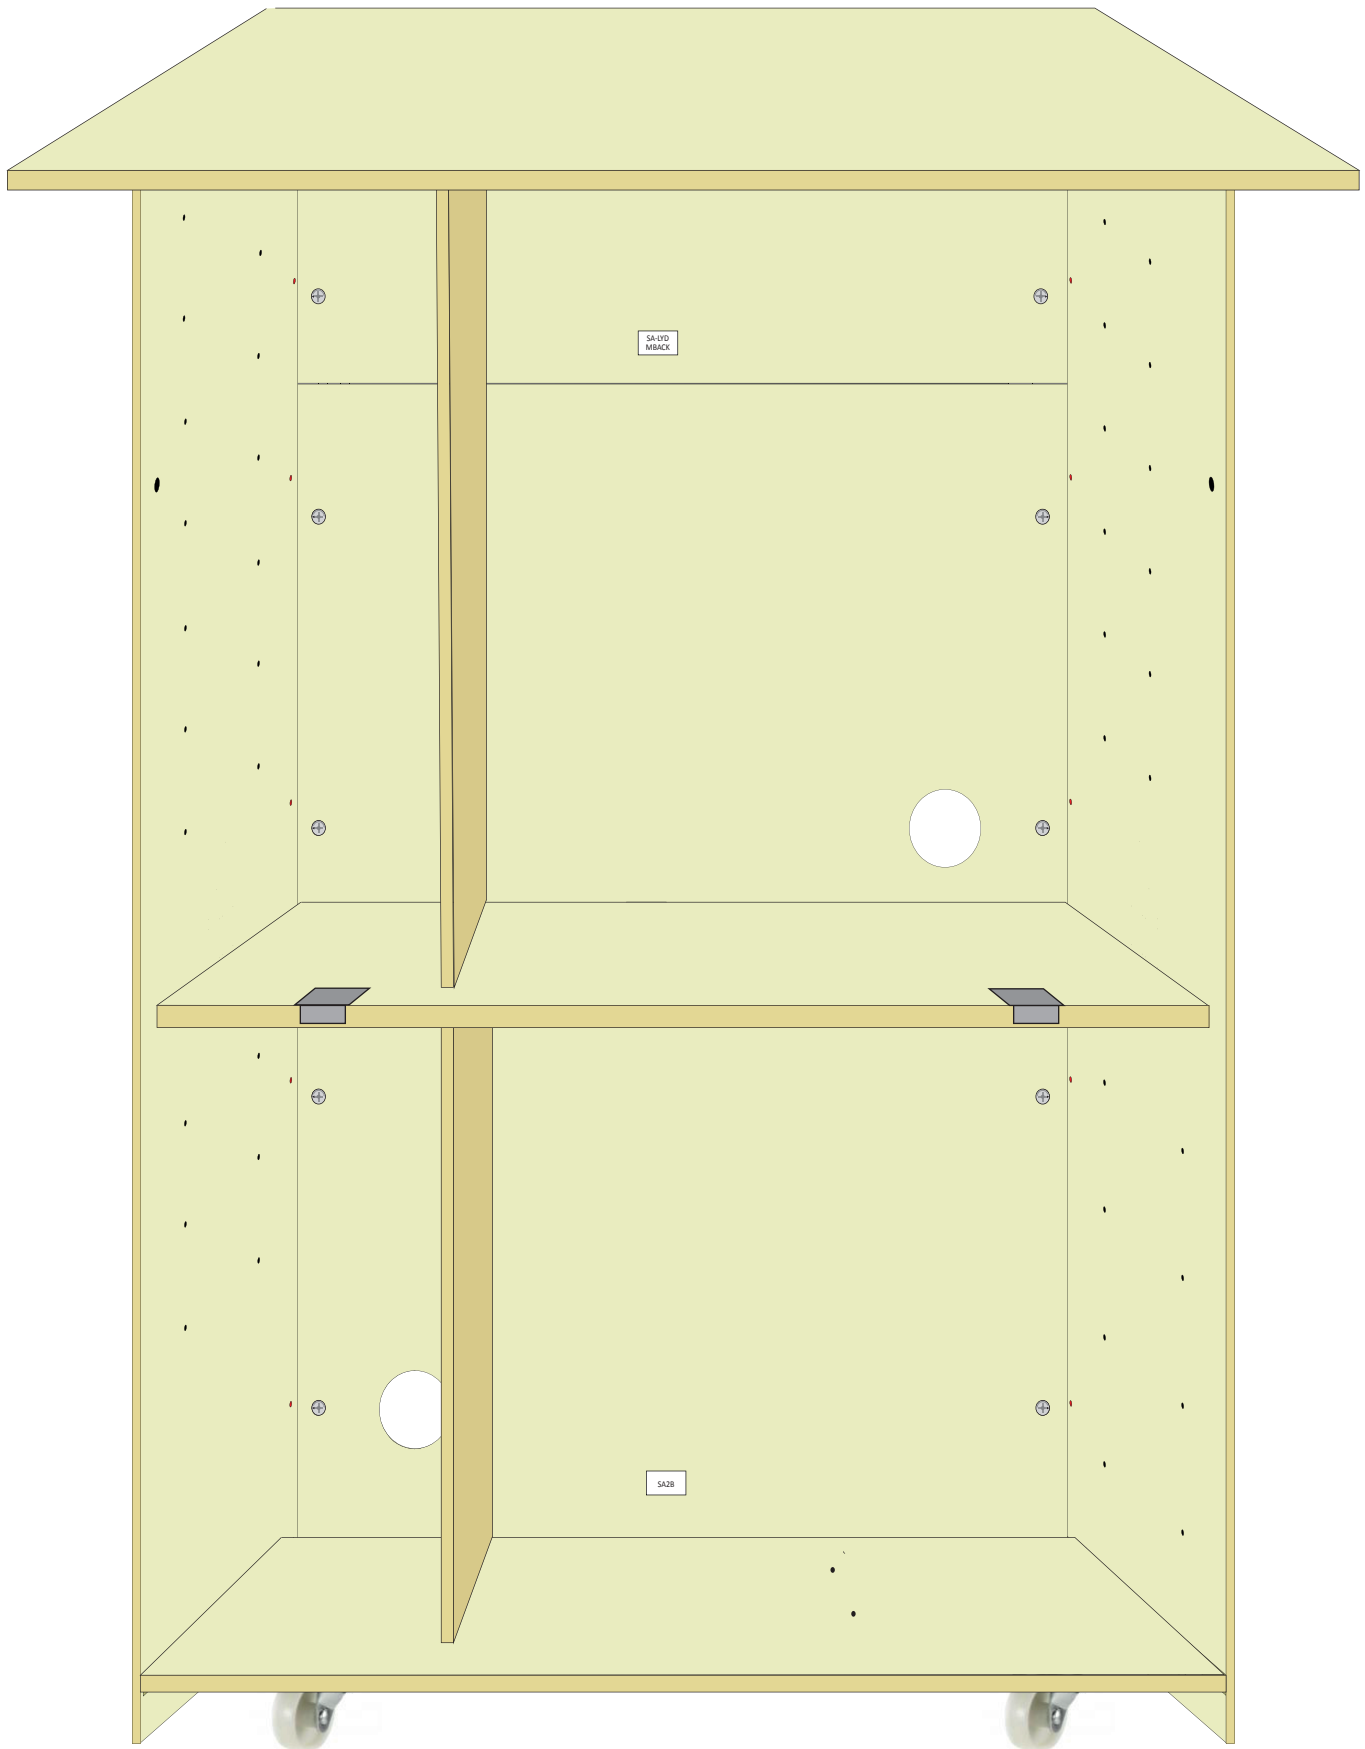

# STEP 14 - You will panels from box

You will require SA500-DESK, SA-LBAR and 2 x SA-TLEG from box SA-LYD-TDSK which you have already opened.

SA-LYD  
TDSK




Attach Bolts BB1 with  
Screws 30-15S




SA500-DESK



SA-TLEG




SA-LBAR

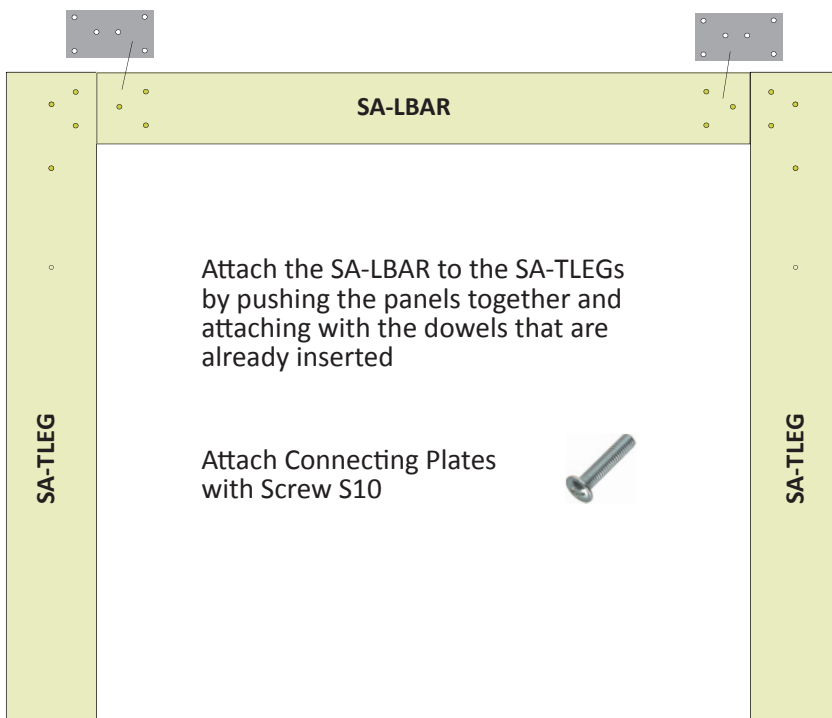

Attach the constructed leg section to the SA500-DESK using the Folding Leg Bracket (FLB1) and screws S10 (to fix into the brass inserts) and screws 35-15S (to fix into the pre-drilled holes)

## STEP 15

Attach the complete desk to the main section using the table hinge that you have already attached to the desk shelf use screws 35-15S. Once in place ensure it is secured with bolts supplied.

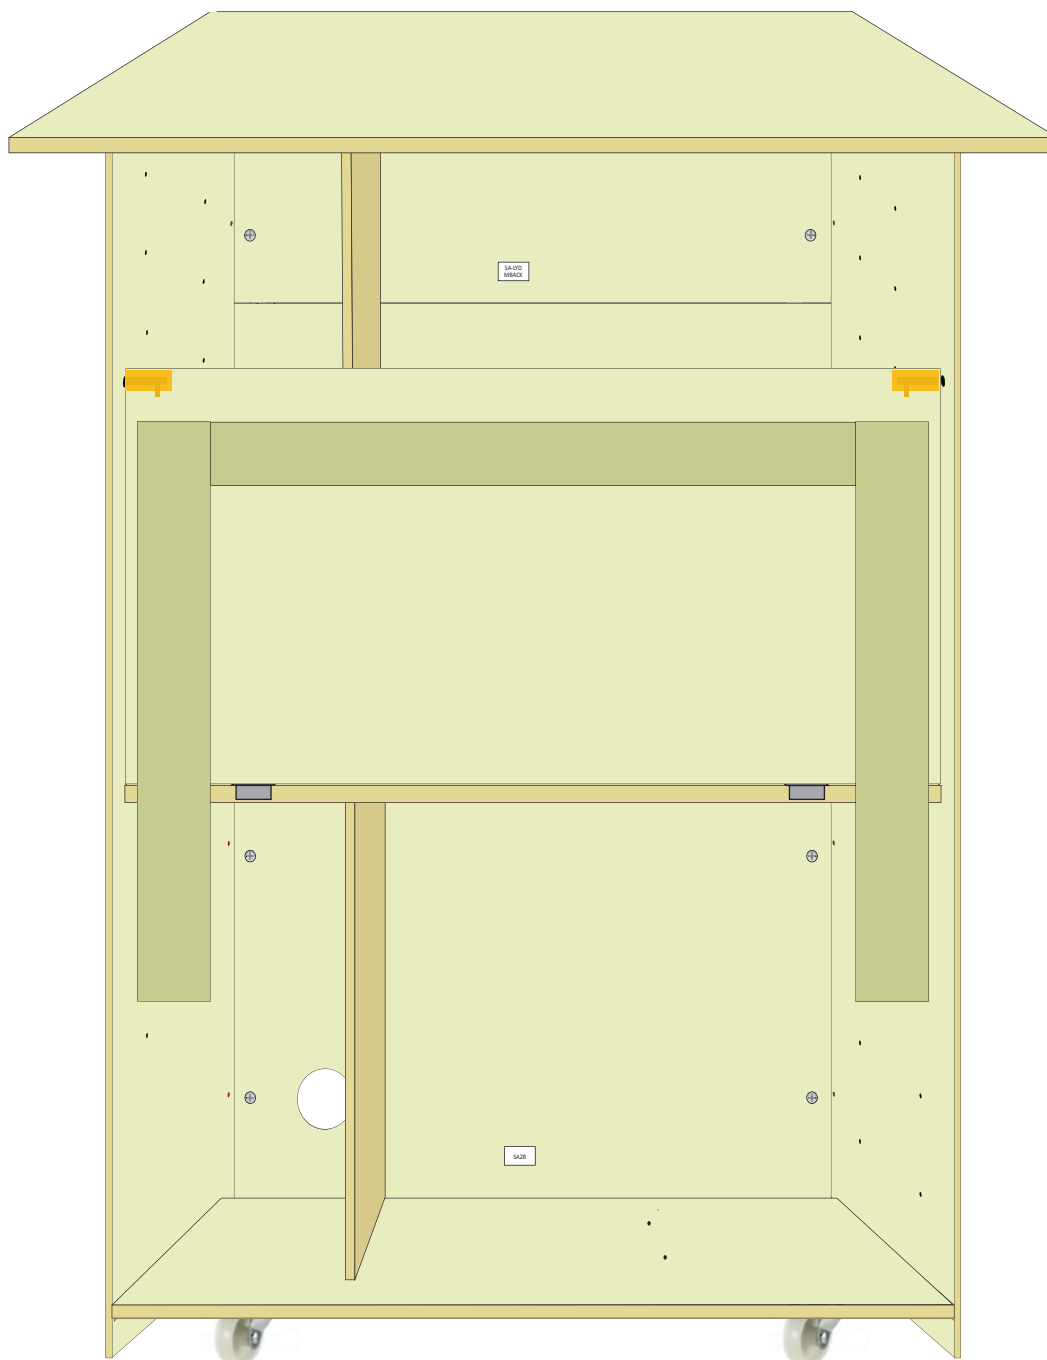

**IMPORTANT**  
WHEN USING THE DESK  
ALWAYS MAKE SURE TO  
HAVE FOLDED OUT THE  
LEG BEFORE UNDOING  
THE BOLT AND FOLDING  
THE DESK DOWN.  
FAILURE TO DO THIS MAY  
RESULT IN DAMAGE TO  
THE HINGES AND THE UNIT

THIS COMPLETES CONSTRUCTION OF THE  
CENTRE SECTION OF YOUR UNIT




# STEP 16

You will need to open both boxes -


SA-LYD-DR  
1SF

## LEFT HAND DOOR SECTION

## RIGHT HAND DOOR SECTION

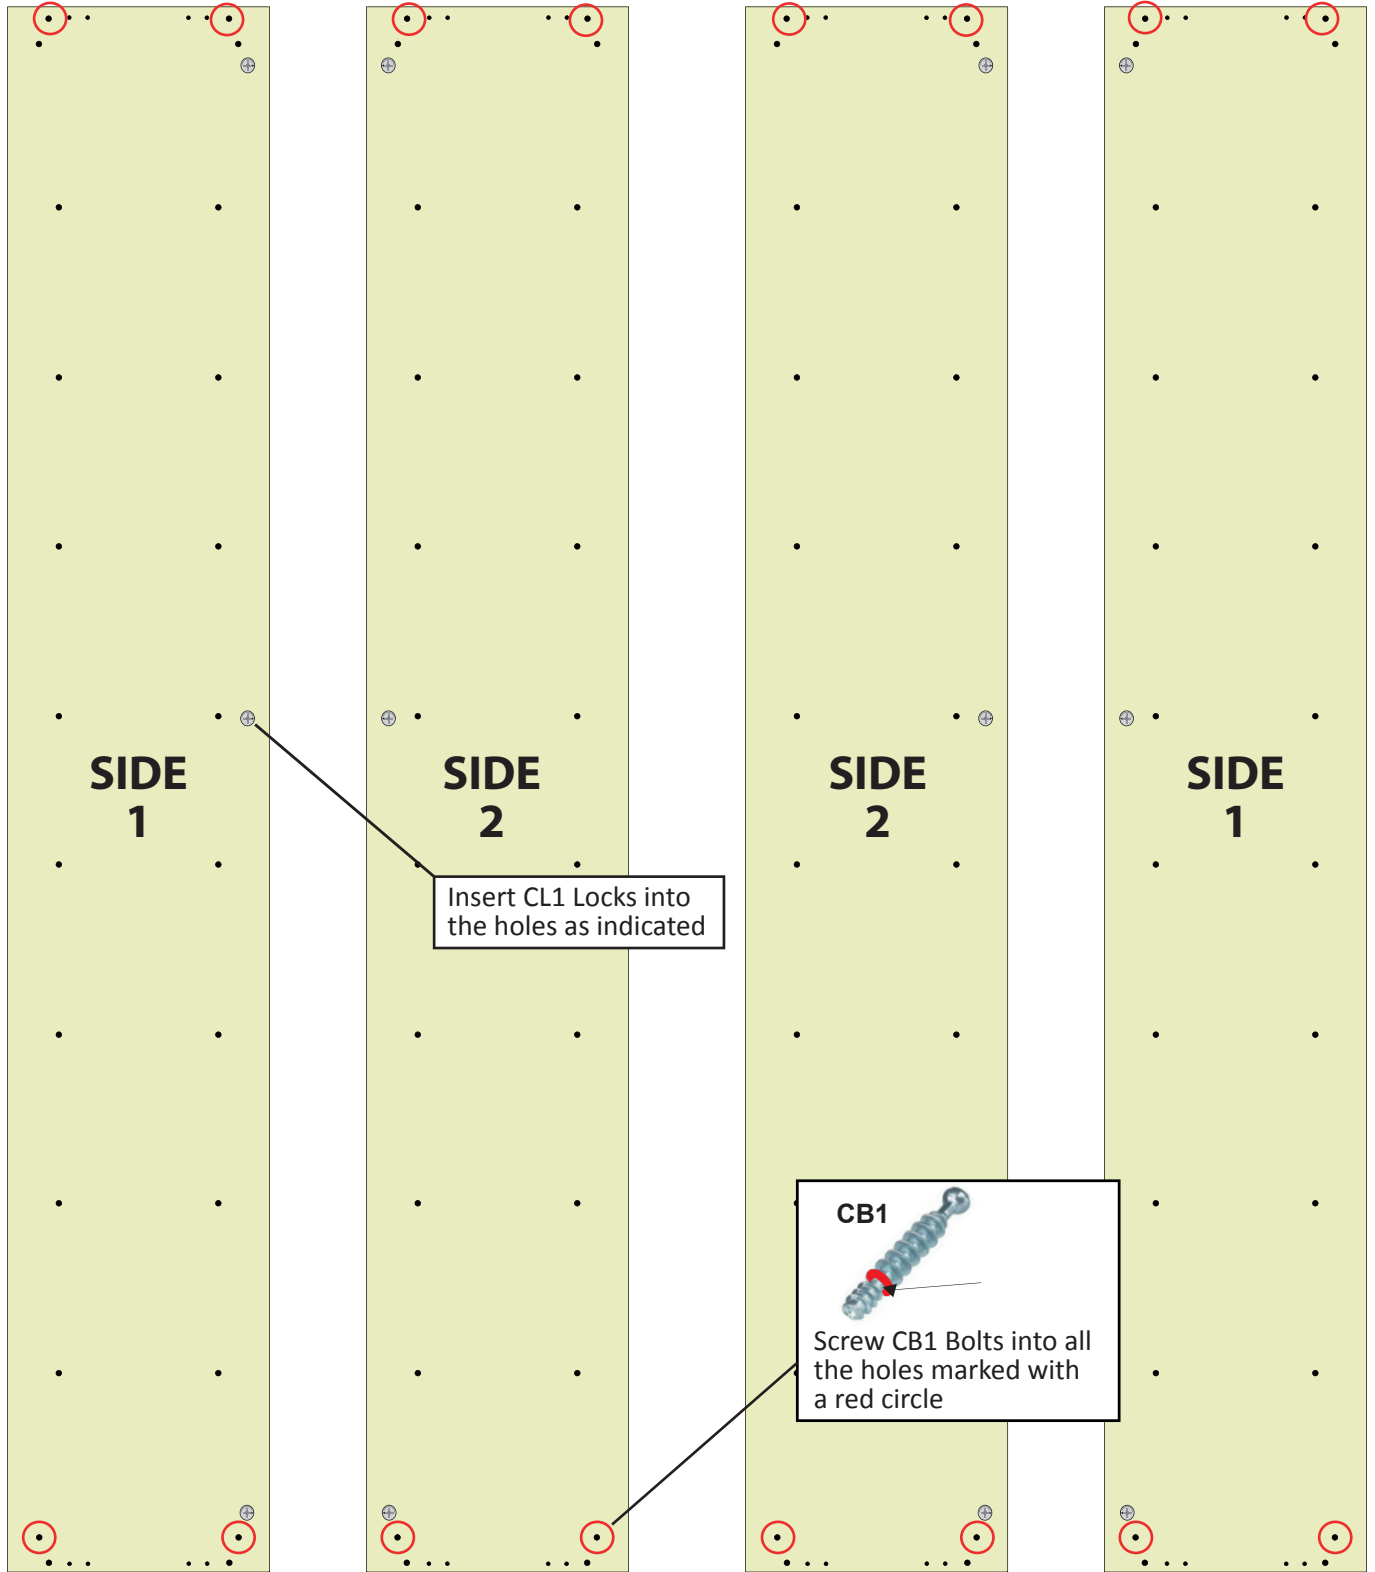

Insert CL1 Locks into the holes as indicated

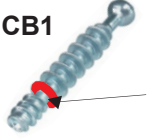
**CB1**  
  
Screw CB1 Bolts into all the holes marked with a red circle

Use:

- Angle Bracket AB1
- Screw 35-17D

# STEP 17


Insert CL1 connecting locks into the SA-LYD-DTOP and the SA-LYD-DBOT as shown below. Then attach the C2 casters to the SA-LYD-DBOT using screws 35-17D as shown below. Repeat this process for both top and base panels.

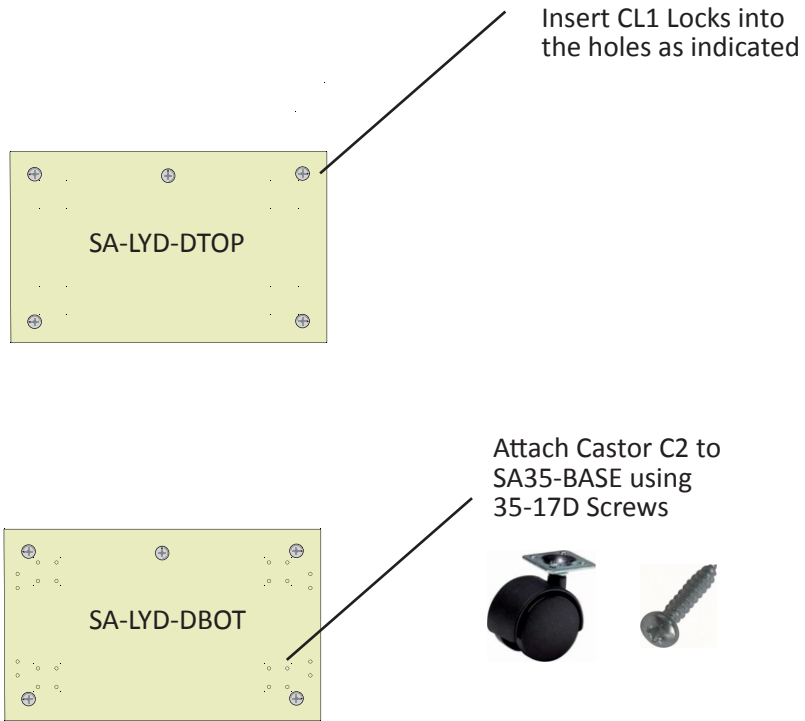


## STEP 18

With the Side 1 laying on the solid flat clean surface (we recommend the floor). Attach the Side 1 and Side 2 to the SA-LYD-DBOT and SA-LYD-DTOP and secure by tightening the locks you have already fitted. Then fix the angle brackets to the base using screw 35-17D.

**LEFT HAND SIDE DOOR SECTION**

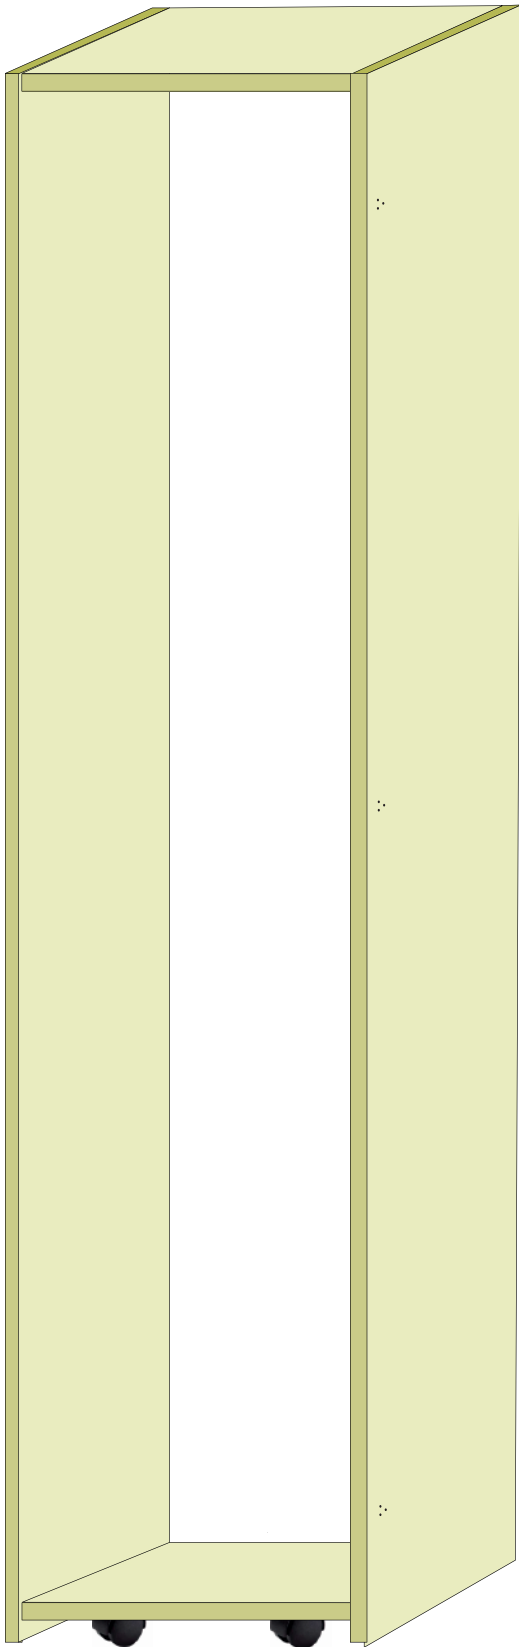

**RIGHT HAND SIDE DOOR SECTION**

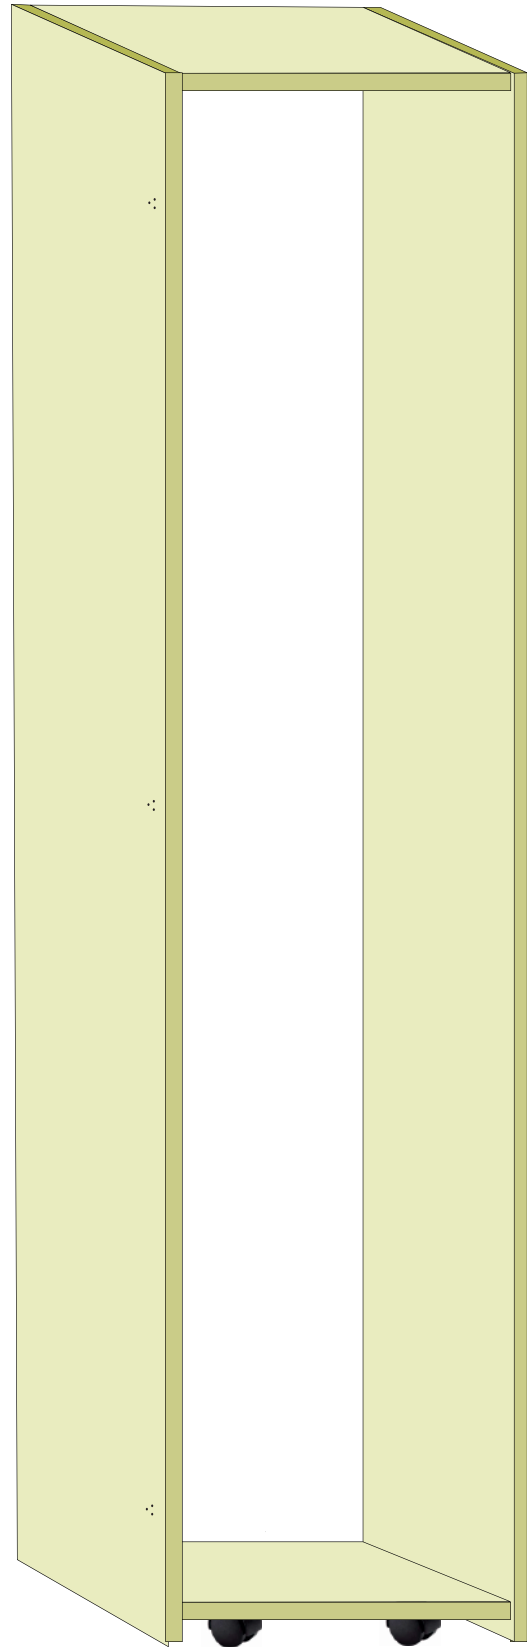


# STEP 19

With the Door Fascia Panel SA-LYD-FASCIA laying on the solid flat clean surface (we recommend the floor). Attach the section that you have already assembled and secure by tightening the locks which you have already inserted into the panels.

## LEFT HAND SIDE DOOR SECTION

## RIGHT HAND SIDE DOOR SECTION

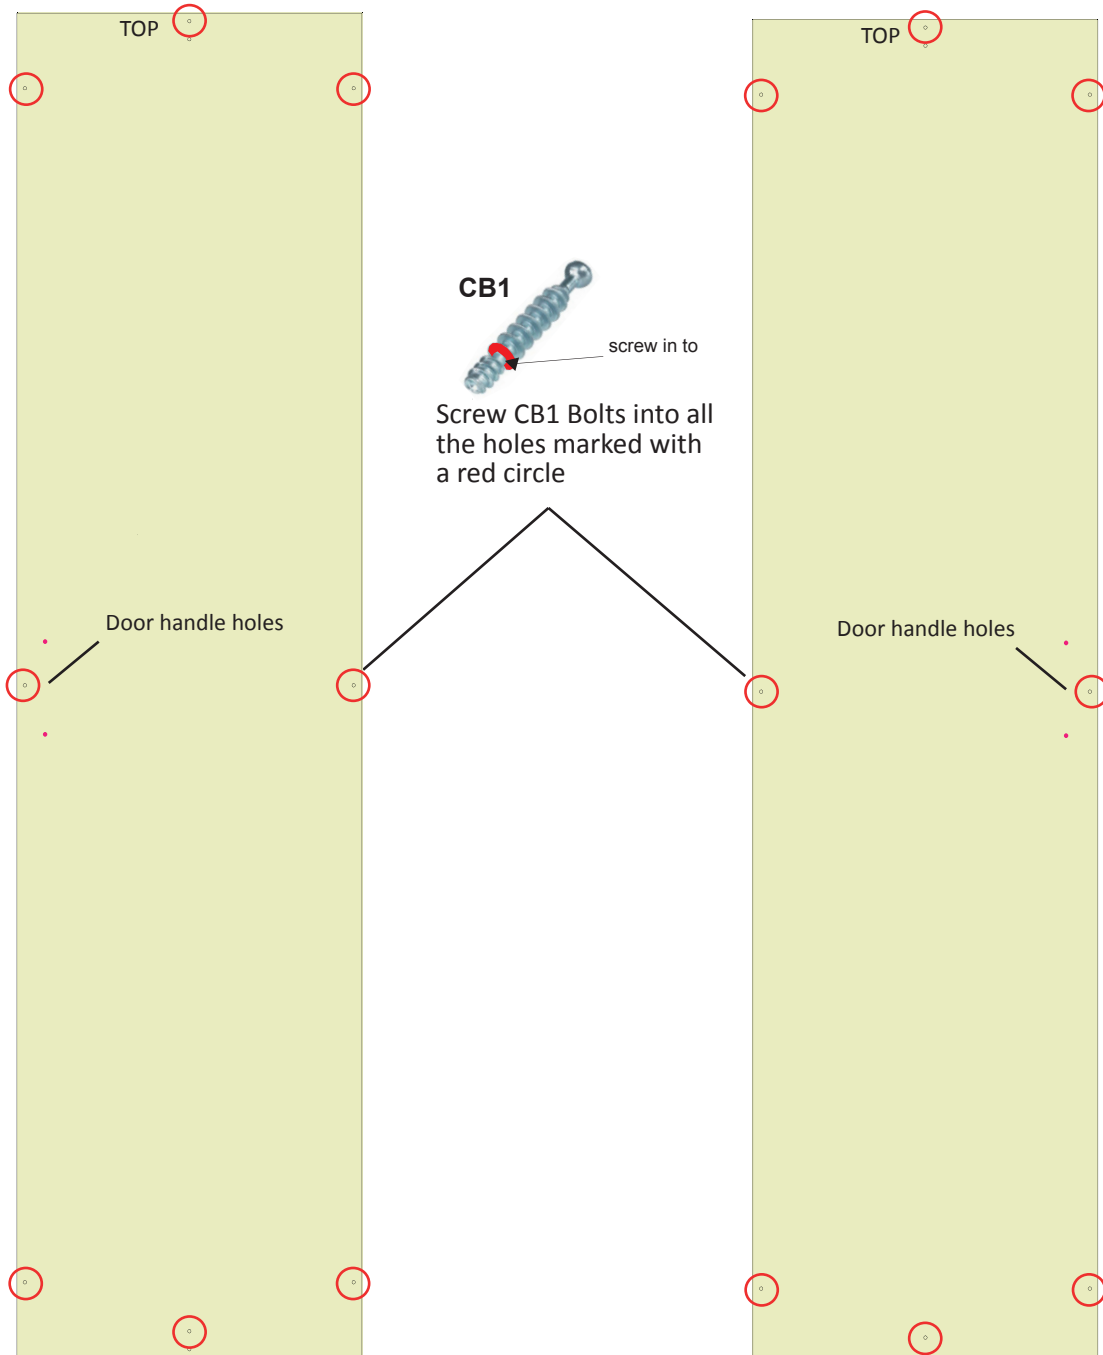


## STEP 20



Using Hinge H2 and Screws 30-15S attach the completed door sections to the centre section you have already constructed.

Fix handles to the door sections using screws S30.

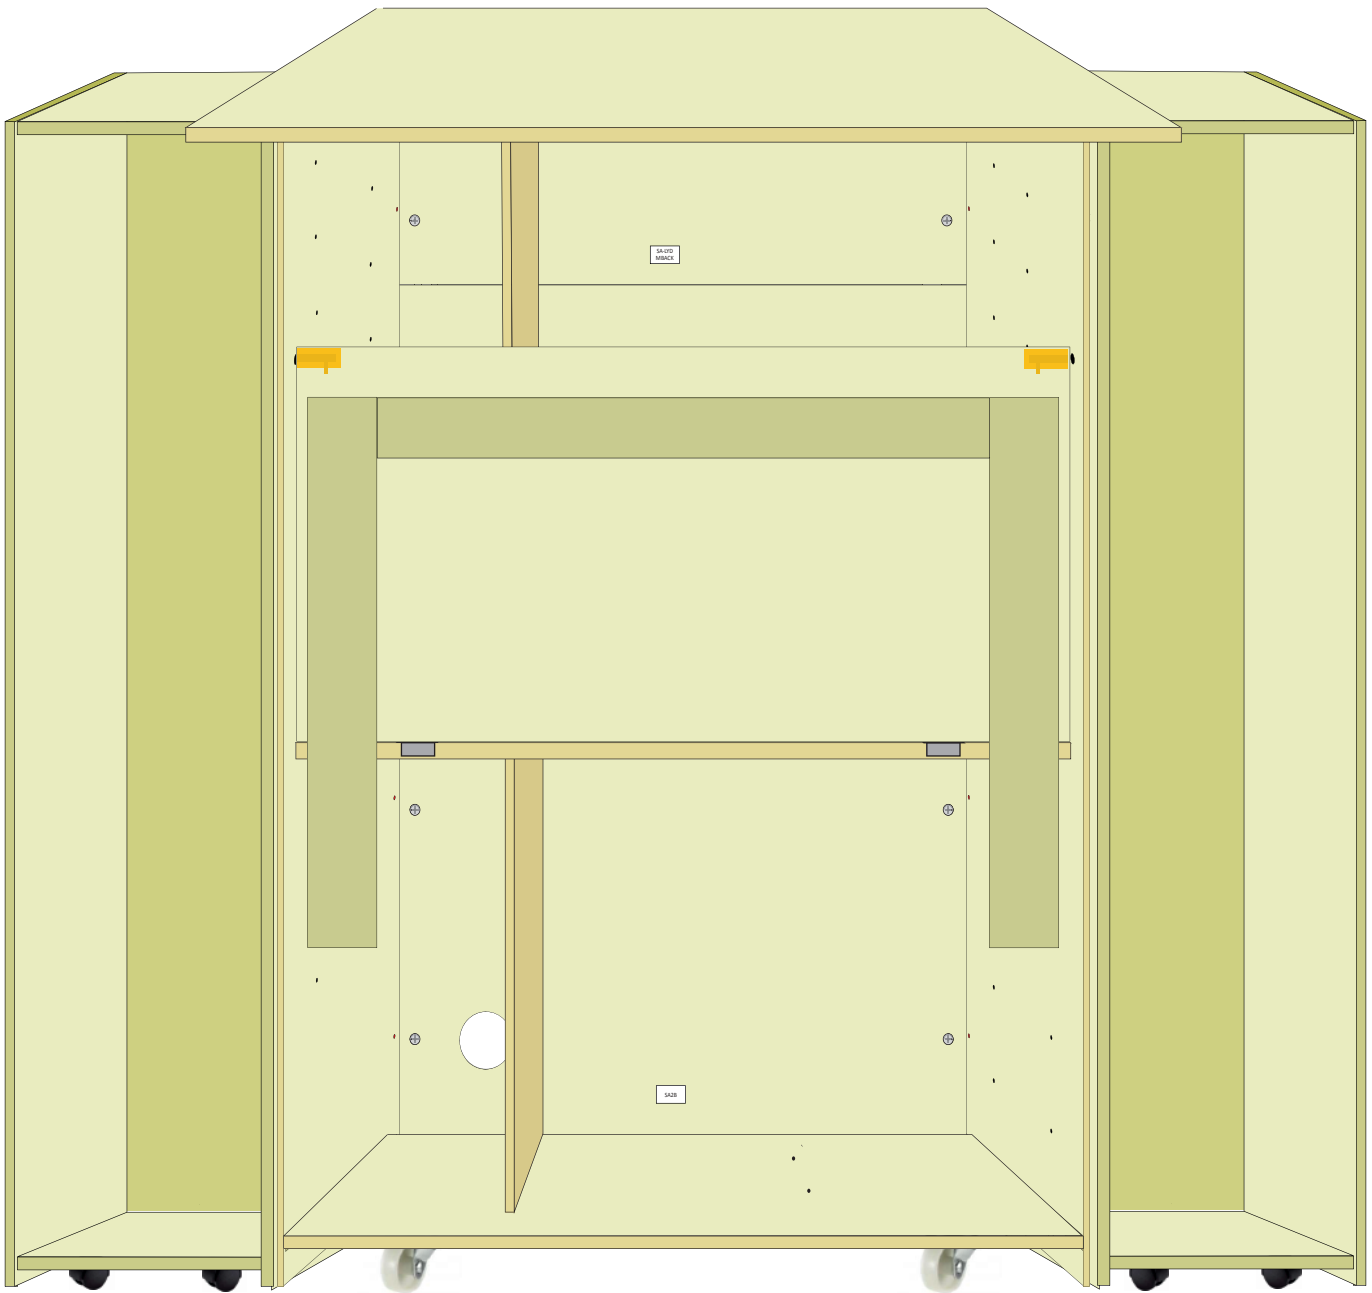

## STEP 21

A standard layout of boxes is shown below. The best way to fit the boxes is to start at the bottom of each section, insert a box then add shelf pegs (SP1) and a shelf above then continue until the section is full. Use shelves as indicated below and SP1 shelf pegs as supplied.

The setup of shelves and boxes shown here is only one option, the shelves are adjustable to suit a range of box configurations.

### Suggested box layout







The Storeaway Lydford Allstore unit is designed and manufactured in the UK by:

