



## Assembly Instructions



Thank you for purchasing the Salcombe Allstore. If you have any questions regarding assembly please contact us on 0800 048 8606.

	CASTER (C2) x 14		HINGE (H2) x 4		BRACKET (AB1) x 12
	CAM BOLT (CB1) x 58		SCREW (30-15C) x 24		SCREW (35-17D) x 104
	CAM LOCK (CL1) x 58		SCREW (S30) x 2		SHELF PEG (SP1) x 76
	MINI CAM BOLT (CB2) x 16		KNOB (K2) x 2		

**HARDWARE**

M-B1 x 2	D1-LHS	D2-LHS	
	D1-RHS	D2-RHS	
M-CD x 3		D2-CD	
M-LHS		D2-TOP	
M-RHS	D1-TOP	D2-BOT	
M-BOT	D1-BOT	D2-DOOR	
M-TOP	D1-DOOR		

3


**PANELS**

**SHELVES**

4\9L x 9  
5.8L x 6  
9L x 4

# STEP 1

Attach six of the casters (C2) to the M-BOT as indicated using screws 35-17D.

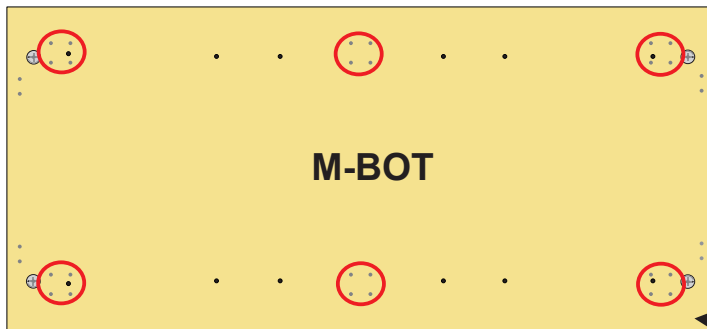


35-17D

The casters attach to this side of the panel (the side showing the part label)

---

# STEP 2




Screw a mini cam bolt into each of the six holes indicated. On the opposite side to the casters.

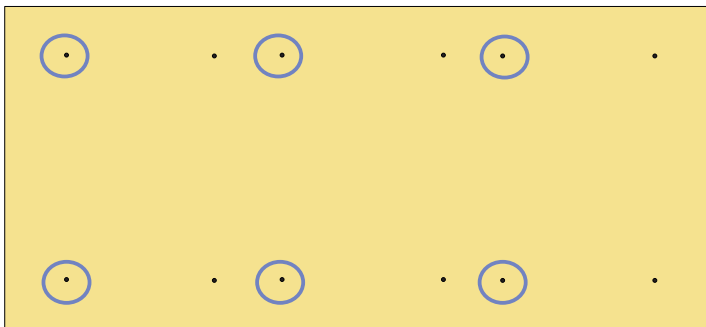

CB2


# STEP 3

Screw a Cam Bolt (CB1) into each of the holes indicated below

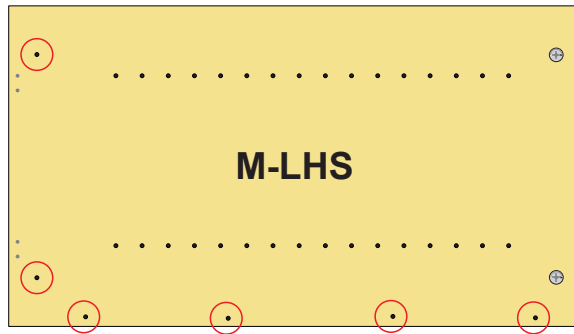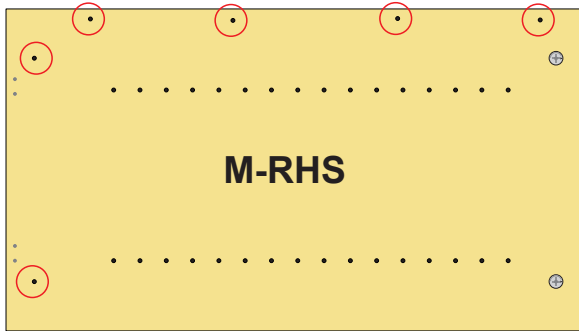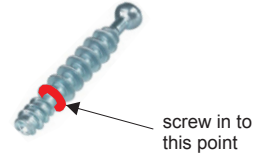


# STEP 4

Attach the brackets (AB1) to the left and right hand sides using screws (35-17D) as shown below.

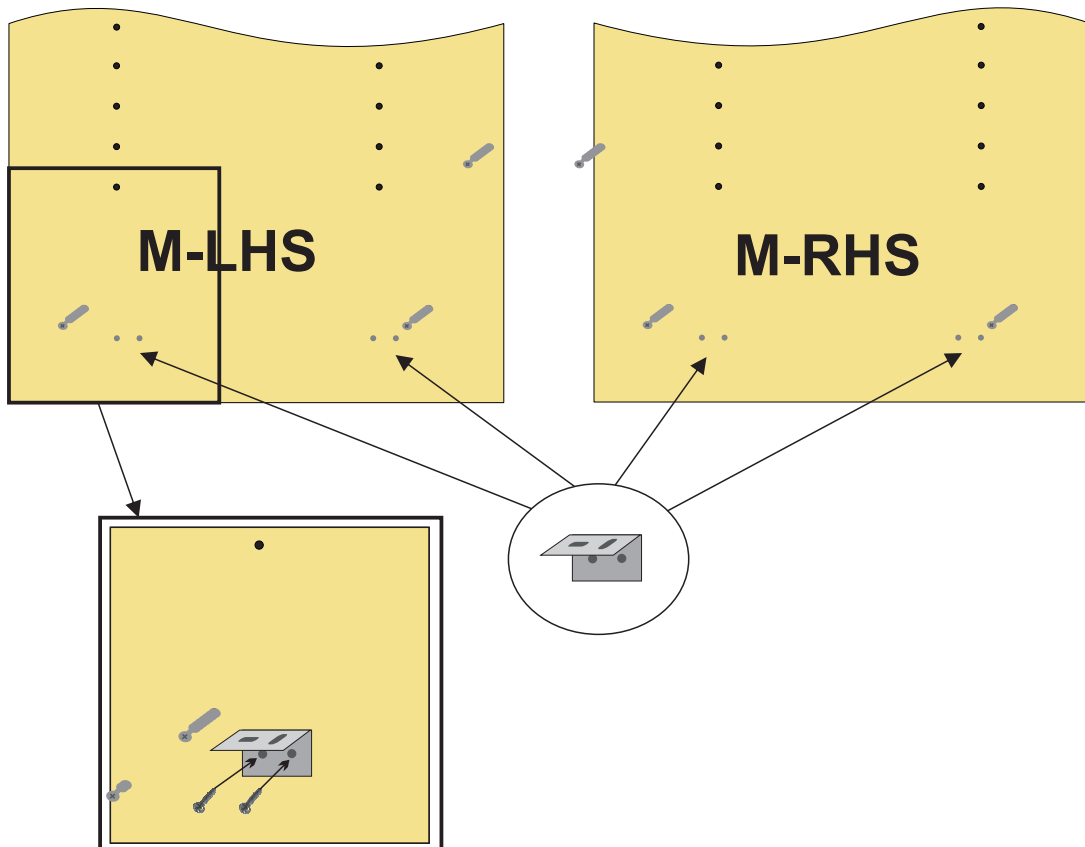


# STEP 5

Attach the M-LHS to both of the backs (M-B1) and the base (M-BOT). Secure by tightening the cam locks in both of the backs and the base. Then attach the M-RHS to the backs and the base in the same way.

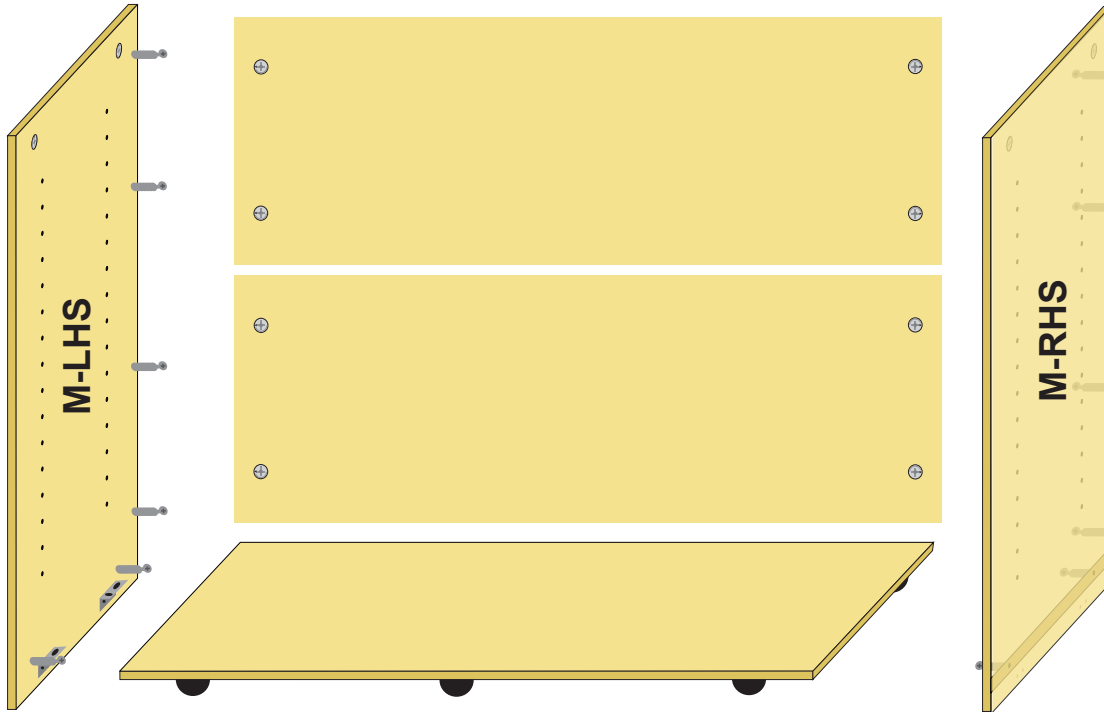



# STEP 6

Fix the brackets that you have already attached to the sides to the base using screws (35-17D) as shown below.

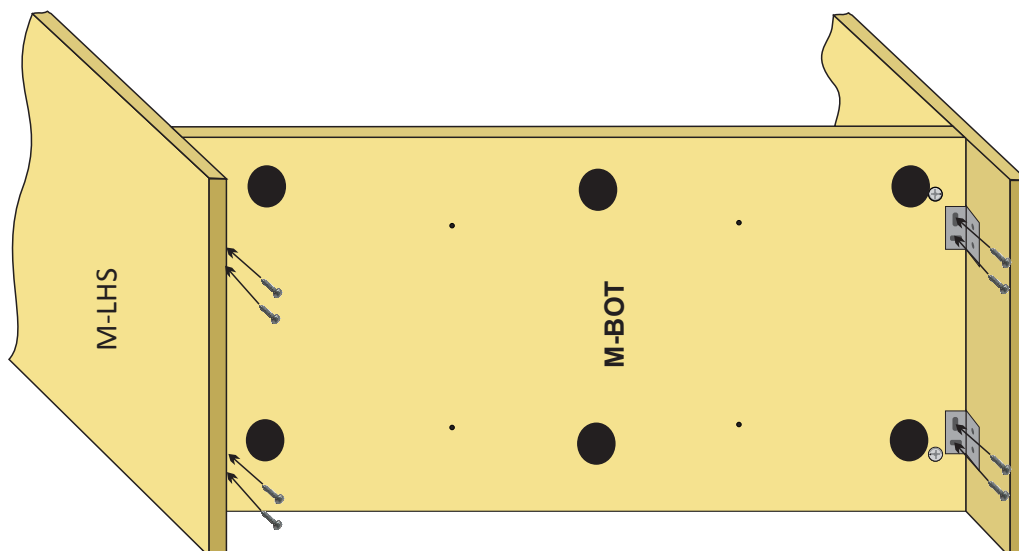


# STEP 7

Screw a Cam Bolt (CB1) into each of the holes indicated below by a red circle  
Screw a Mini Cam Bolt (CB2) into each of the holes indicated below by a blue circle

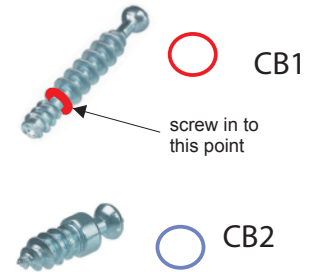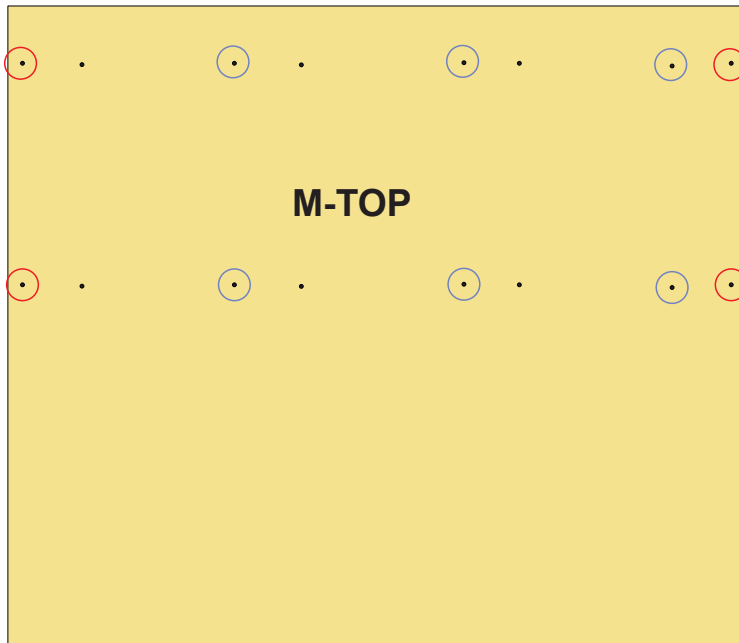


# STEP 8

Attach the M-TOP to the partially assembled main section. Secure by tightening the cam locks in the both the M-LHS and M-RHS

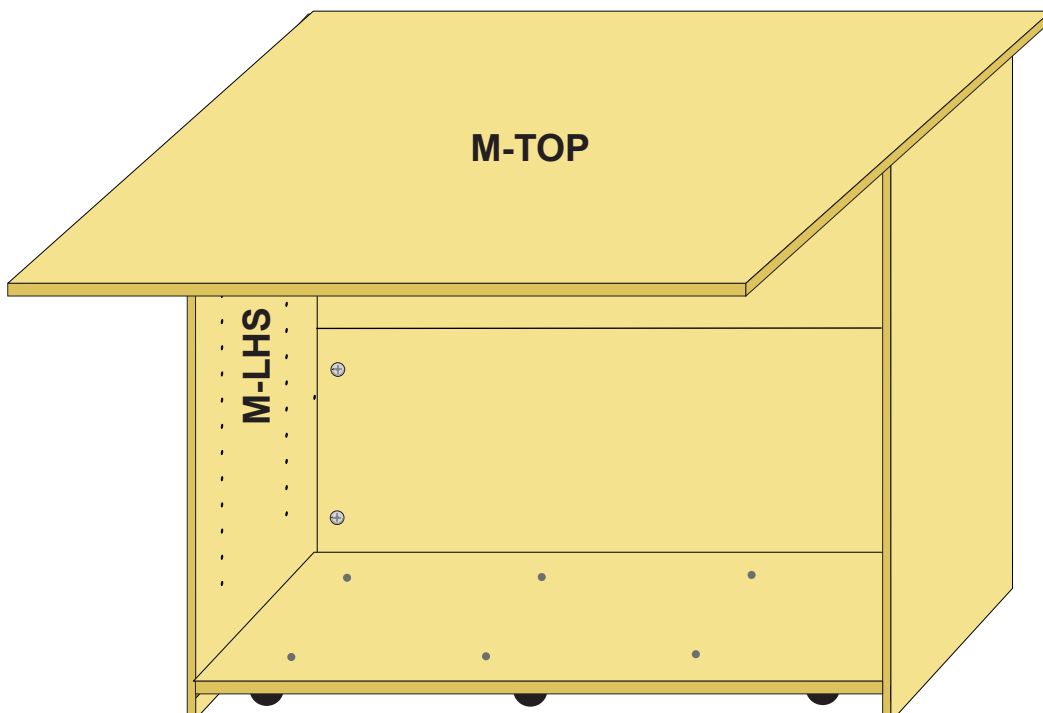


## STEP 9

Fit the three centre dividers (M-CD) to the section that you have built. You should insert them to the left of the mini cam bolt that you have fitted to the base and the top and push each centre divider across onto the bolts and then secure by turning the fittings that are pre-inserted into the centre dividers.

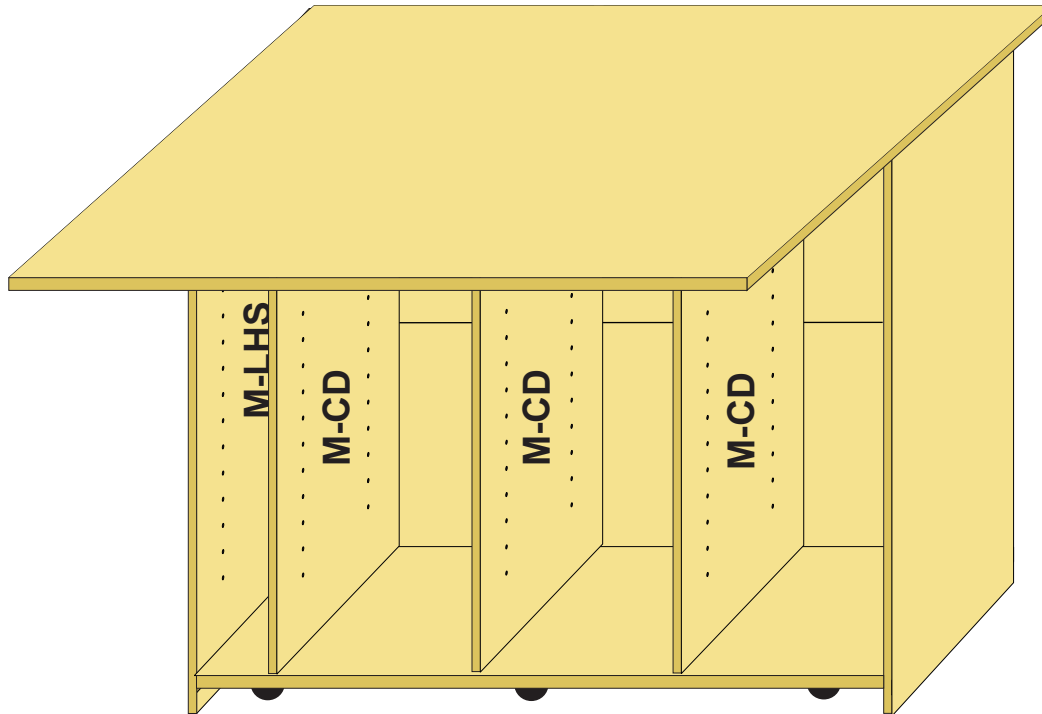

## STEP 10



Insert shelf pegs and shelves to fit the storage boxes as shown below. Start from each section from the bottom and work upwards when fitting the shelves and boxes to ensure the correct shelf spacing.

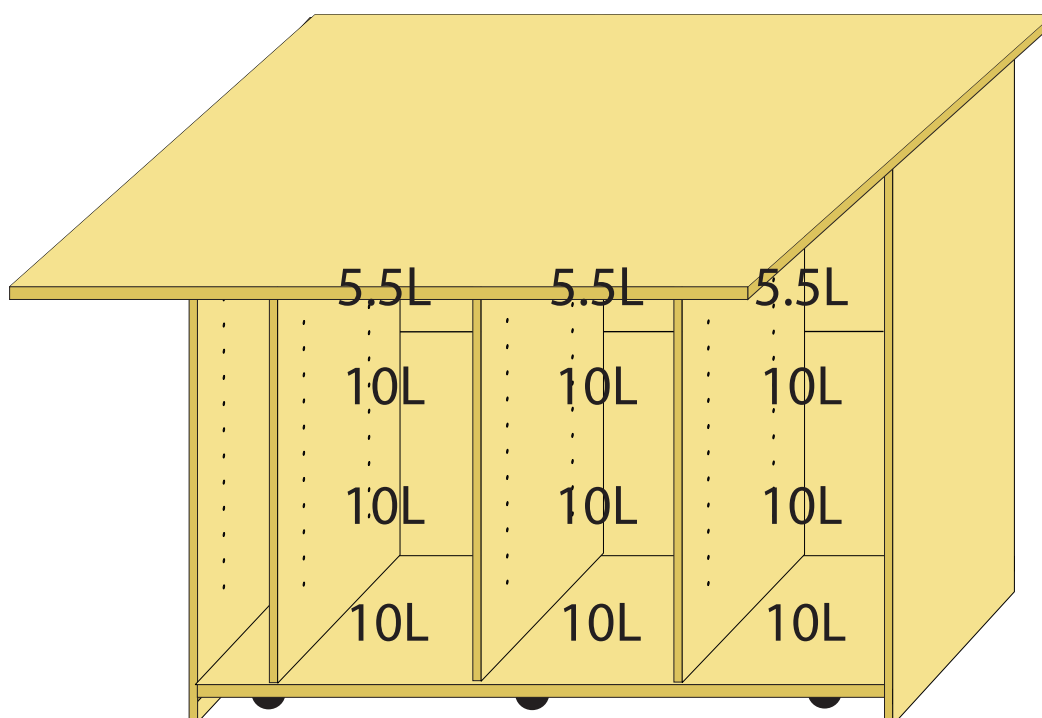




# STEP 11

Attach the remaining eight casters (C2) to the D1-BOT and the D2-BOT using screws 35-17D as shown below.

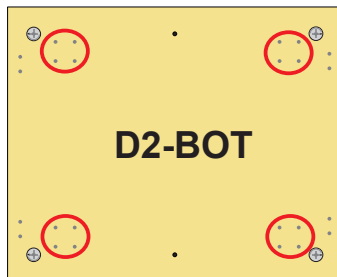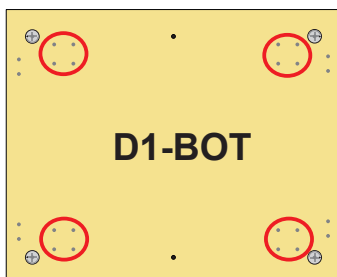


# STEP 12

Screw a mini cam bolt (CB2) into each of the two holes indicated with a blue circle. These need to be screwed into the opposite side to the casters.

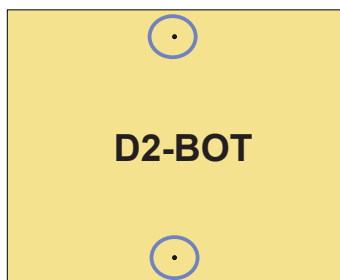


# STEP 13

Screw a Mini Cam Bolt (CB2) into each of the holes indicated below with a red circle. Screw a Cam Bolt (CB1) into each of the holes indicated below with a blue circle.

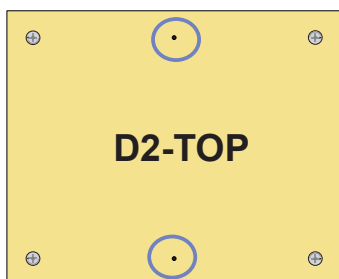

# STEP 14

Screw a Cam Bolt (CB1) into each of the holes indicated below

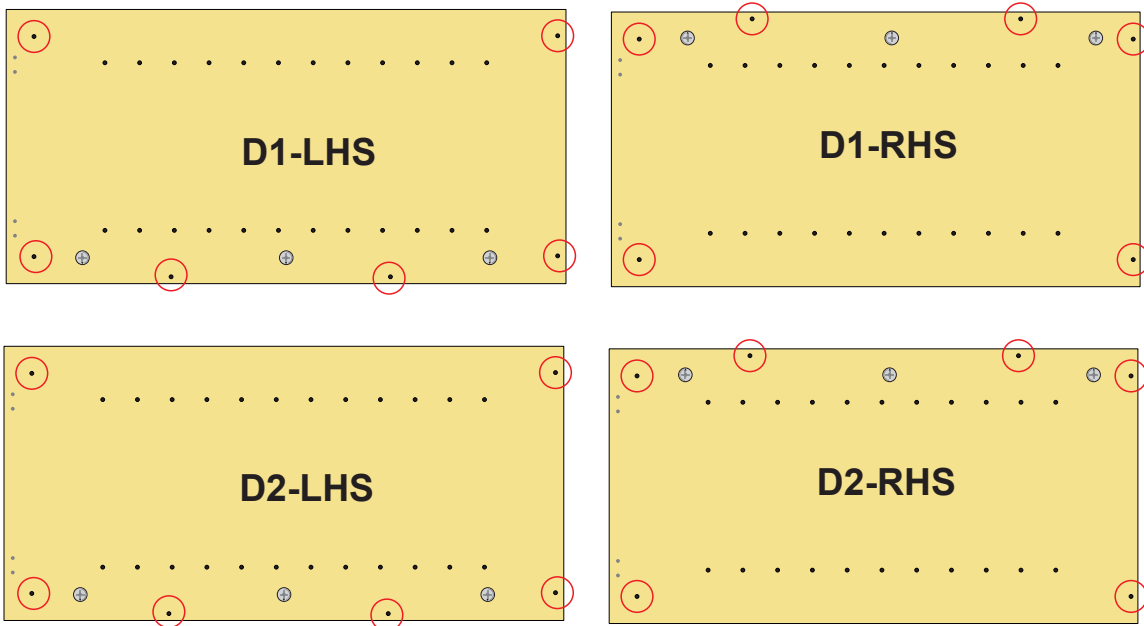

---

# STEP 15


Attach the brackets (AB1) to the D1-LHS, D1-RHS and D2-RHS shown above using screws (35-17D). Refer to step 4 for detailed instructions of this step.

## STEP 16

Assembly the left hand door section (Door 1).

Attach the D1-LHS to the top (D1-TOP) and the base (D1-BOT). Secure by tightening the cam locks in both of the backs and the base. Then attach the D1-RHS to the backs and the base in the same way.

Then repeat this process for the right hand door section (Door 2)

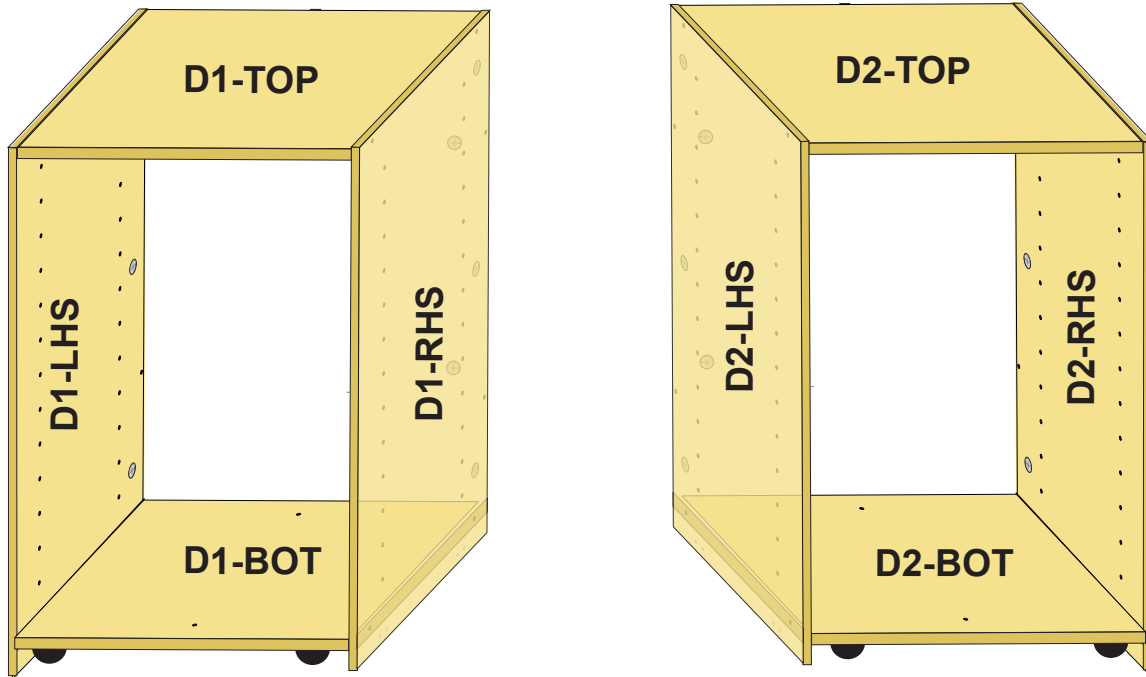


---

## STEP 17

Fix the brackets that you have already attached to the sides to the bases of both door sections using screws (35-17D) as shown in detail in step 6

# STEP 18


Fit the centre divider (D-CD) to the door 2 section that you have built. You should insert them to the left of the mini cam bolts that you have fitted to the base and the top and push each centre divider across onto the bolts and then secure by turning the fittings that are pre-inserted into the centre divider.

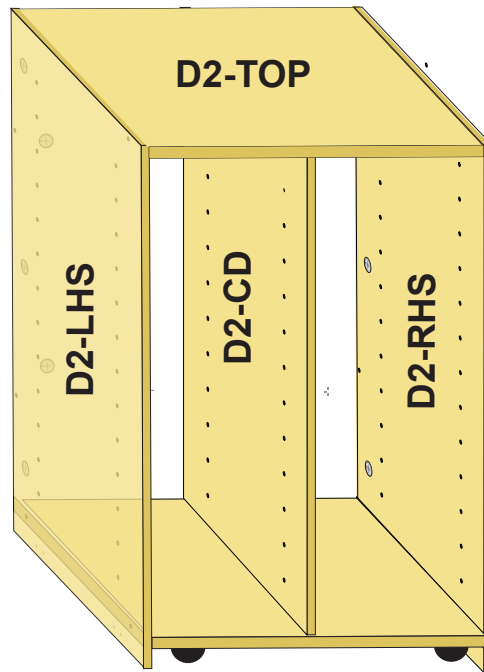

---



# STEP 19

Screw a Cam Bolt (CB1) into each of the holes indicated below. Attach the door knobs. Fit the front door panels to the assembled sections and tighten the cam locks to secure.

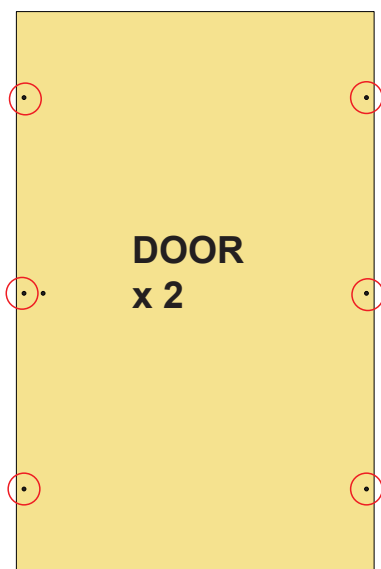




# STEP 20

Insert shelf pegs and shelves to fit the storage boxes as shown below from the bottom and work upwards when fitting the shelves and boxes to ensure the correct shelf spacing.

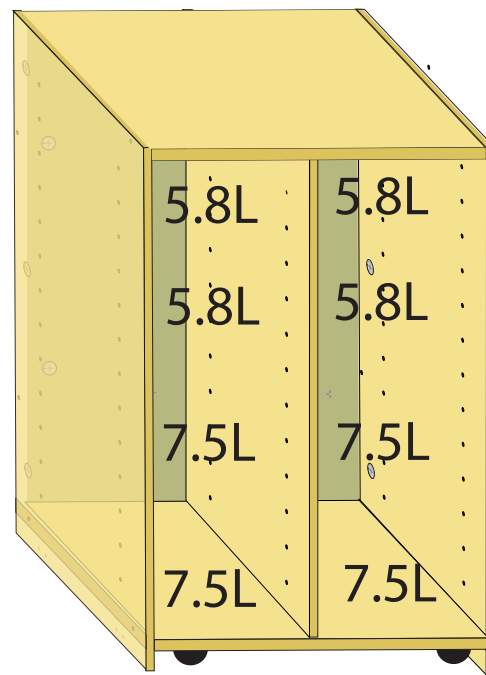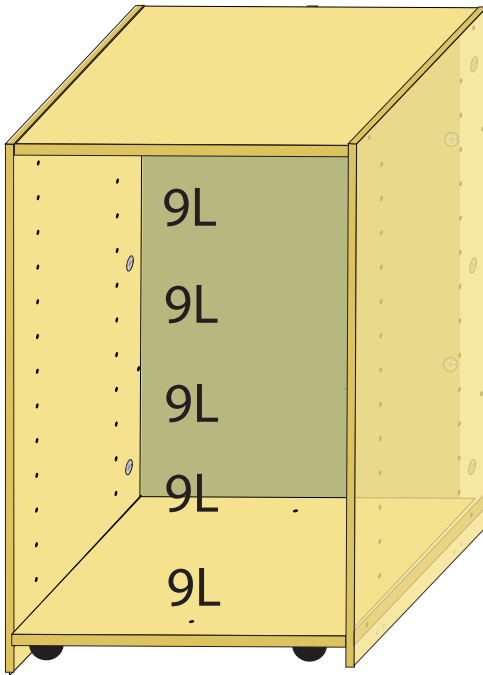

# STEP 21

Fit the door sections to the main section that is already assembled. Use the hinges (H2) and screws (30-15C) provided.

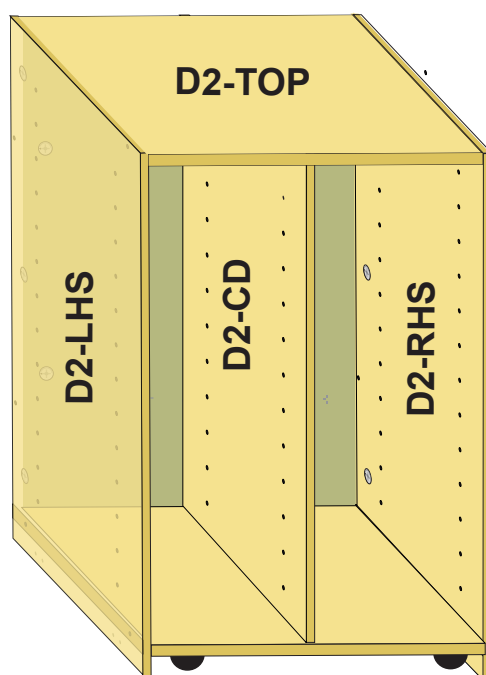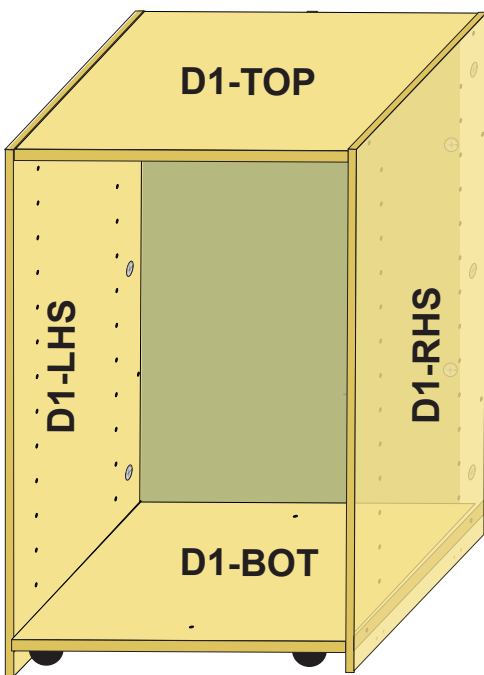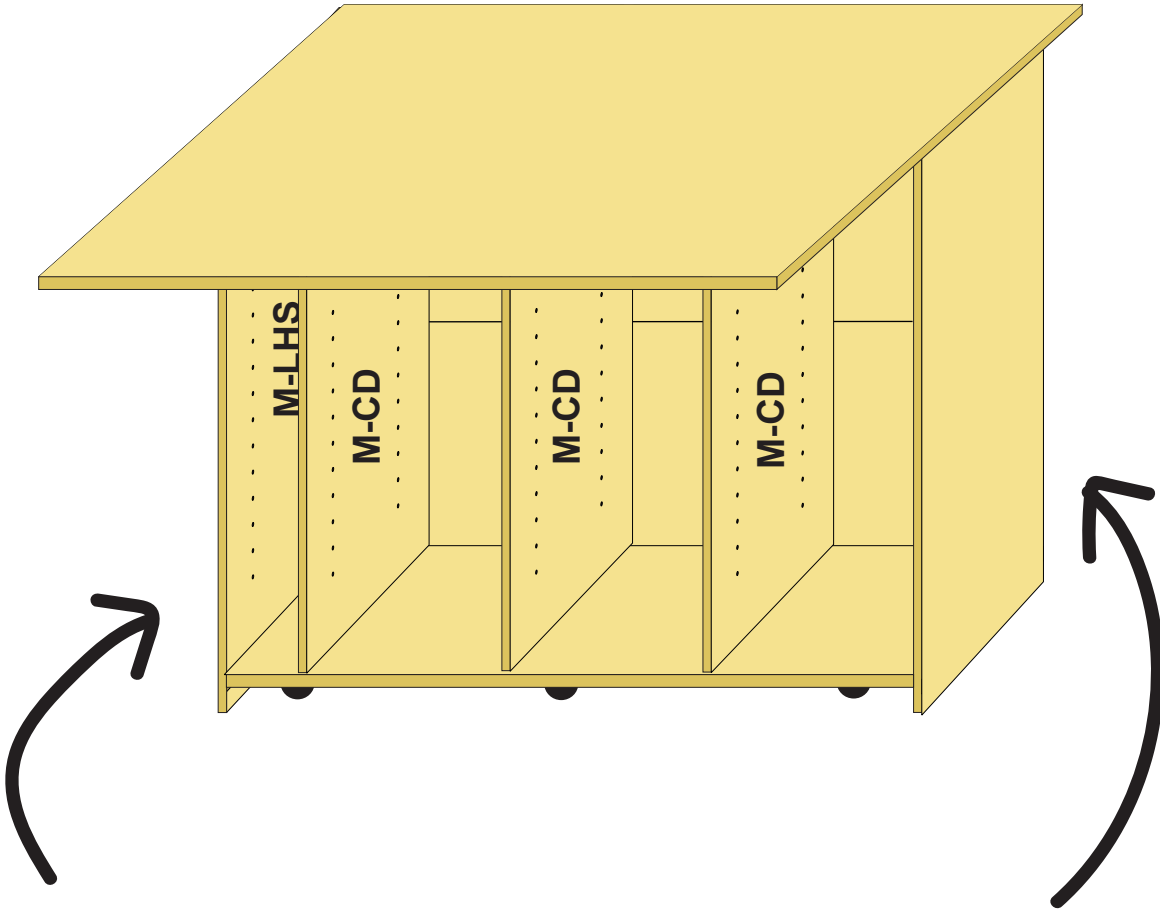



store  
away **Salcombe  
Allstore**

The Storeaway Salcombe Allstore unit is designed and manufactured in the UK by:

**storage** 4  
CRAFTS  
[www.storage4crafts.co.uk](http://www.storage4crafts.co.uk)