

store
away

salcombe



Assembly Instructions



Thank you for purchasing a Fold Away Petite cabinet. If you have any questions regarding assembly please contact us on 0800 048 8606.

	CASTER (C2) x 14		HINGE (H2) x 4		BRACKET (AB1) x 12
	CAM BOLT (CB1) x 68		SCREW (30-15C) x 24		SCREW (35-17D) x 104
	CAM LOCK (CL1) x 68		SCREW (S30) x 2		SHELF PEG (SP1) x 128
	MINI CAM BOLT (CB2) x 10		KNOB (K2) x 2		SHELF PEG (SP2) x 8


HARDWARE

M-B1 x 2	D1-LHS	D2-LHS	PANELS
M-B2	D1-RHS	D2-RHS	
M-CD x 2	D1-CD	D2-CD	
M-LHS	D-B1 x 3	D2-TOP	
M-RHS	D1-TOP	D2-BOT	
M-BOT	D1-BOT	D2-DOOR	
M-TOP	D1-DOOR	D2-RACK-SIDE	
		D2-RACK-SH x 2	
	ACRYLIC x 3	12x12 x 6	
		49L x 8	
		2.55L x 12	
		1.5L x 6	

SHELVES


STEP 1

Attach six of the casters (C2) to the M-BOT as indicated using screws 35-17D.

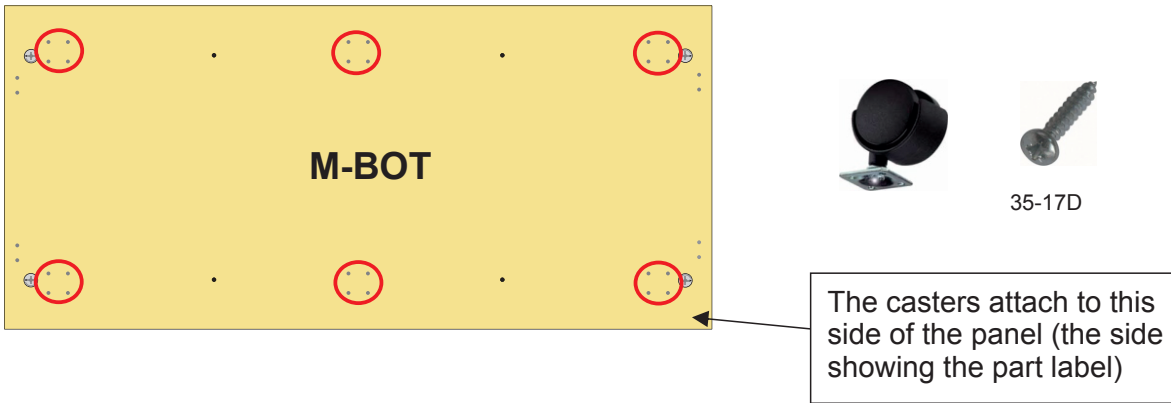


STEP 2

Screw a cam bolt into each of the four holes indicated. These need to be screwed into the opposite side to the casters.

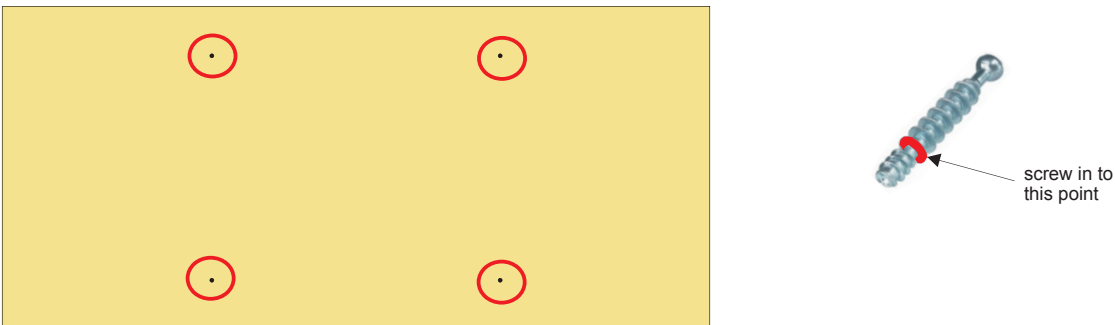


STEP 3

Screw a cam bolt into each of the four holes indicated on both of the M-CD Panels. Two need into one side of the panel and two into the opposite side.

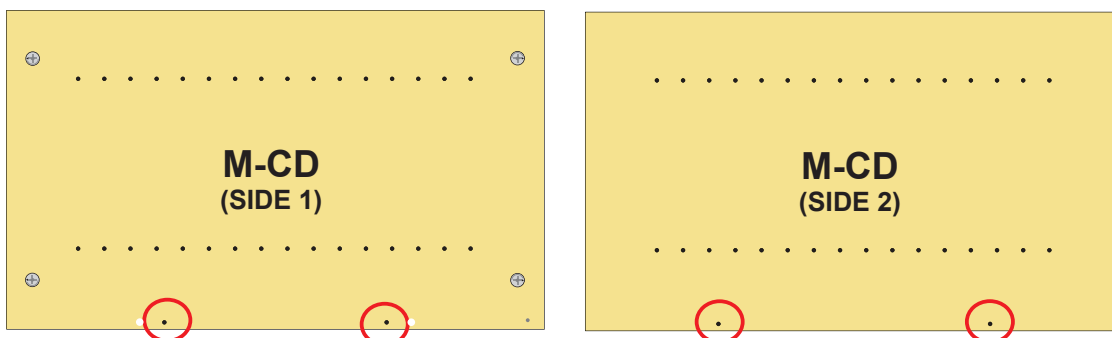


STEP 4

Attach the both of the M-B1 panels, M-B2 and both of the M-CD together as indicated. Once slotted together ensure you tighten the cam locks.

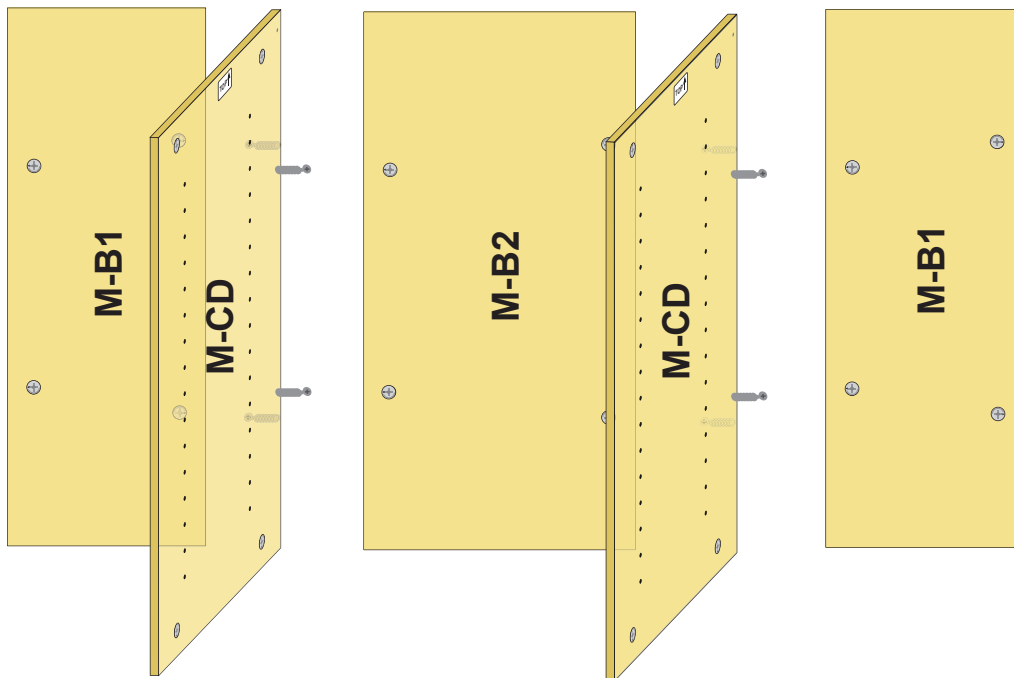




STEP 5

Attach the section you have already assembled to the M-BOT as shown below and tighten the cam locks.

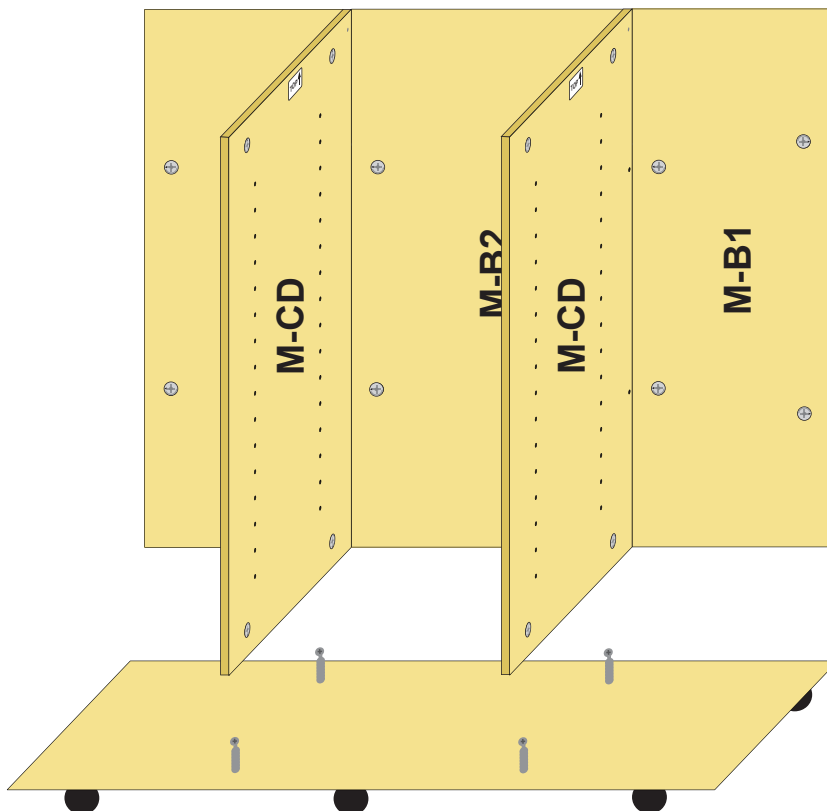


STEP 6

Screw a Cam Bolt (CB1) into each of the holes indicated below

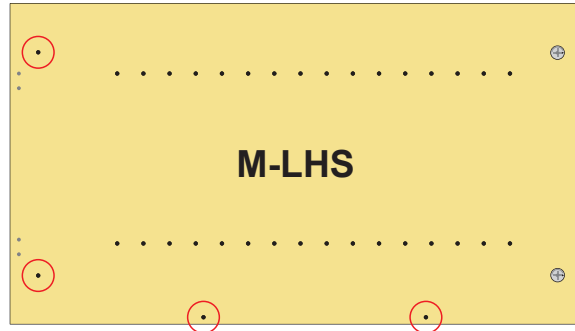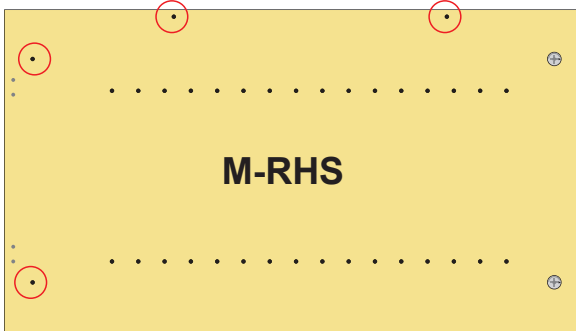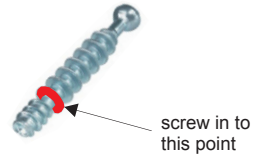


STEP 7

Attach the brackets (AB1) to the left and right hand sides using screws (35-17D) as shown below.

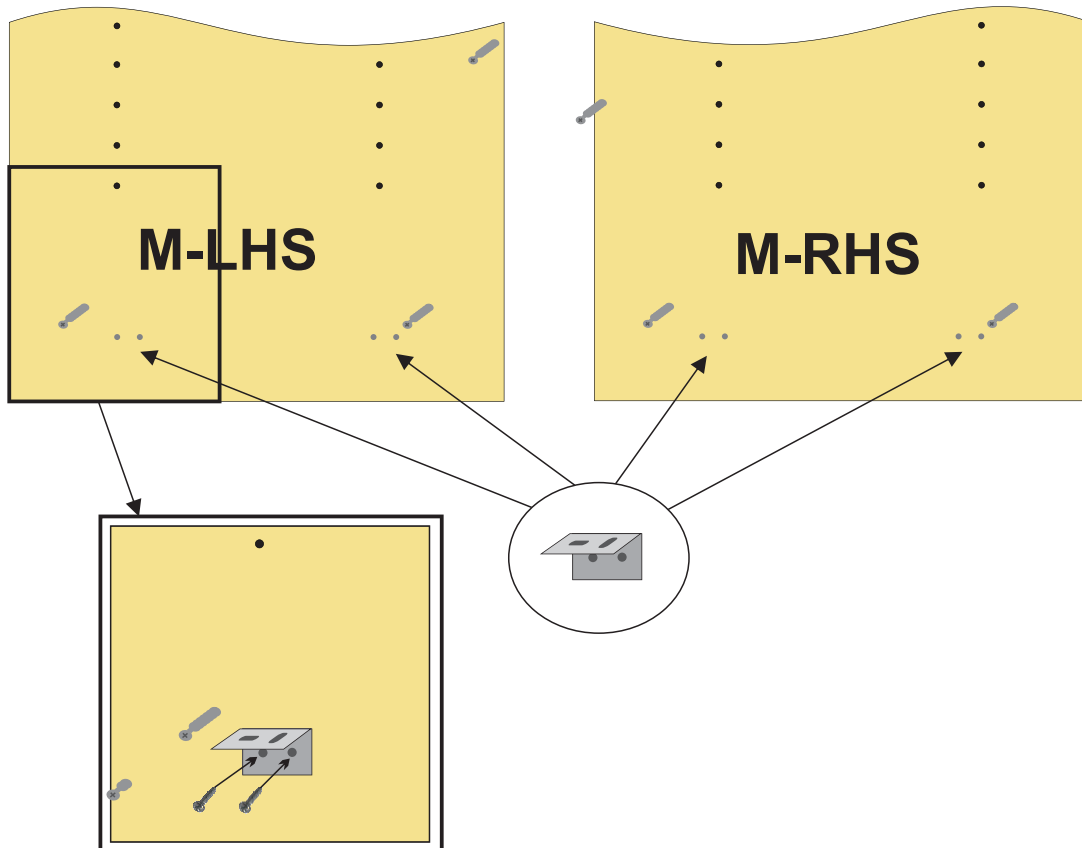


STEP 8

Attach the M-LHS and the M-RHS to the assembled sections. Secure by tightening the cam locks in the both of the backs (M-B1) and the base (M-BOT).

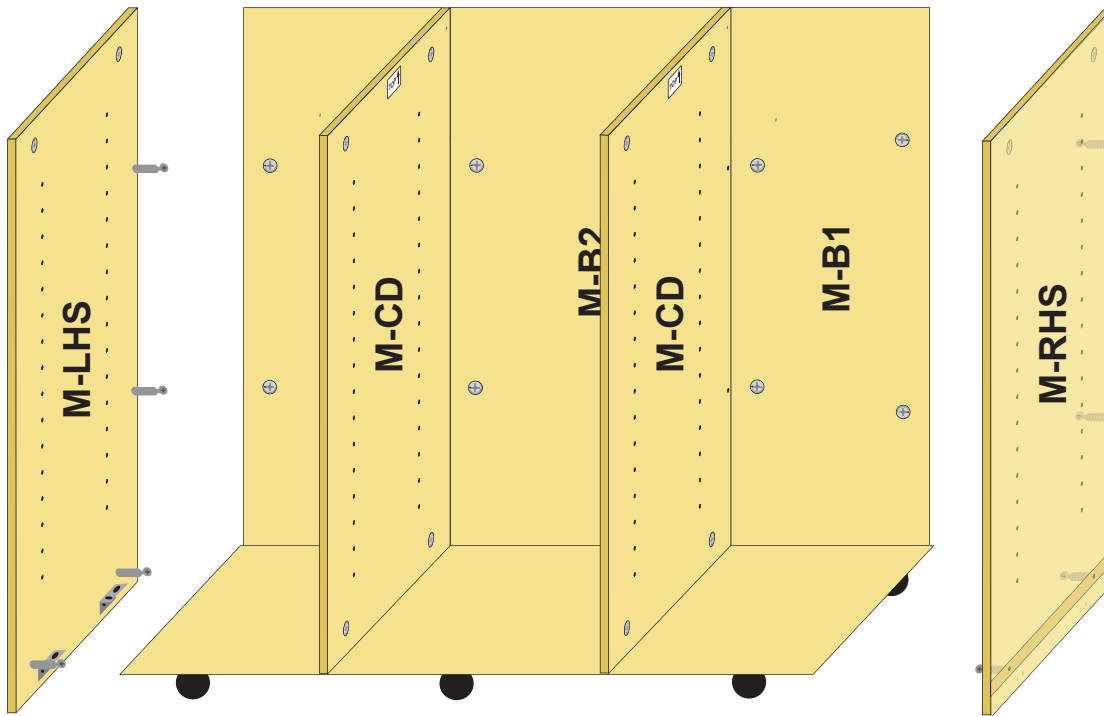


STEP 9

Fix the brackets that you have already attached to the sides to the base using screws (35-17D) as shown below.

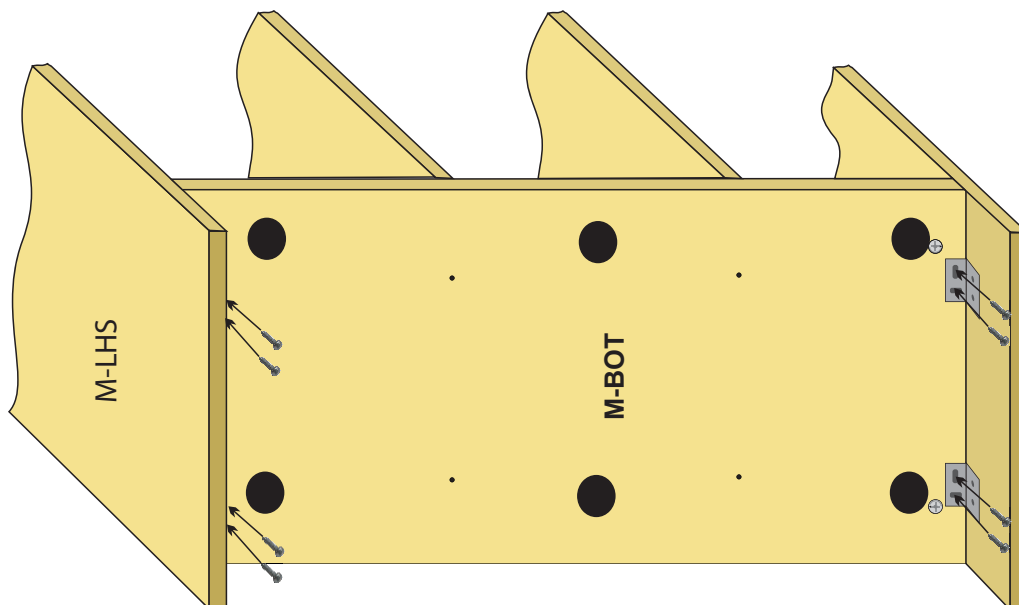


STEP 10

Screw a Cam Bolt (CB1) into each of the holes indicated below

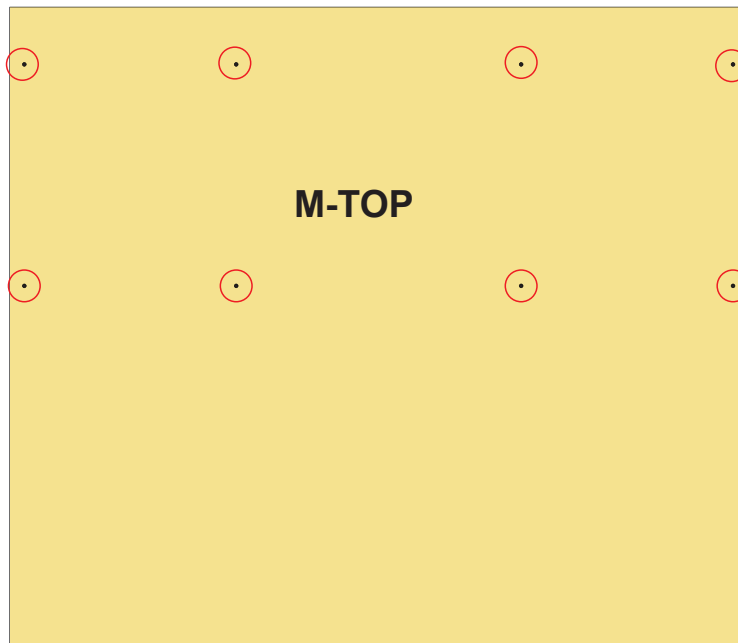

STEP 11

Attach the M-TOP to the assemble main section. Secure by tightening the cam locks in the both the M-CD's and the M-LHS and the M-RHS.

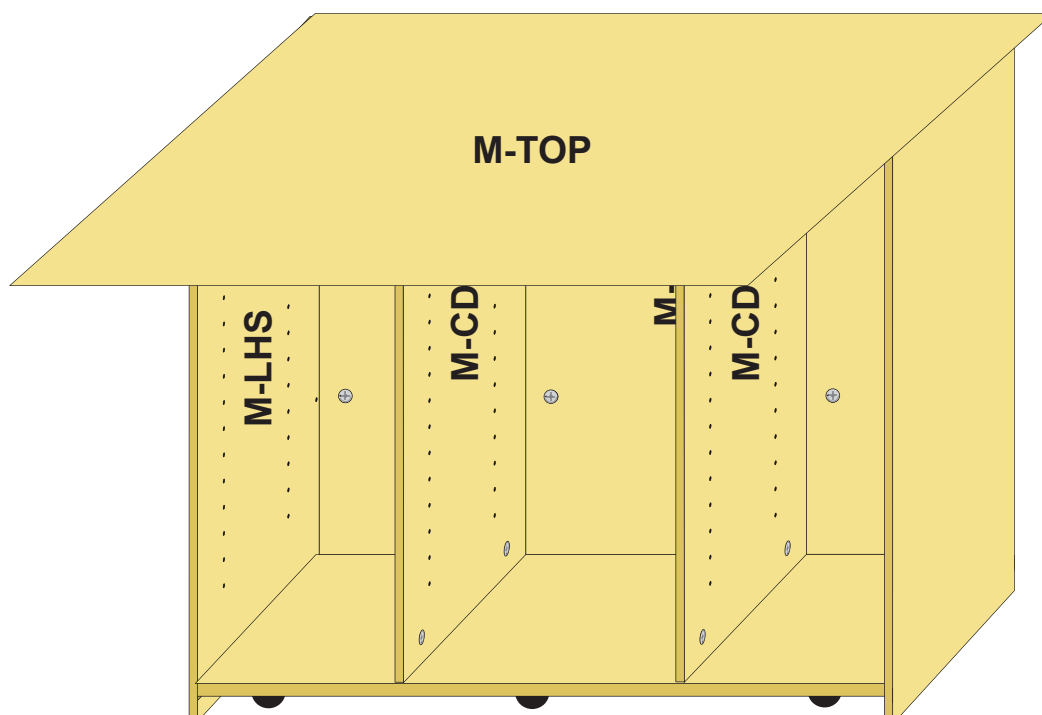


STEP 10

Insert shelf pegs and shelves to fit the storage boxes as shown below. Start from each section from the bottom and work upwards when fitting the shelves and boxes to ensure the correct shelf spacing.





STEP 11

Attach the remaining eight casters (C2) to the D1-BOT and the D2-BOT using screws 35-17D as shown below.

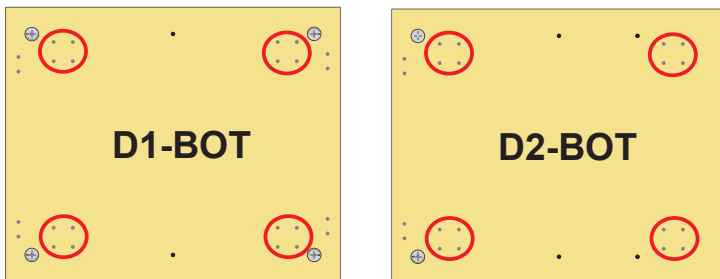


STEP 12

Screw a mini cam bolt (CB2) into each of the four holes indicated with a red circle and a CB1 bolt into each hole indicated with a blue circle. These need to be screwed into the opposite side to the casters.

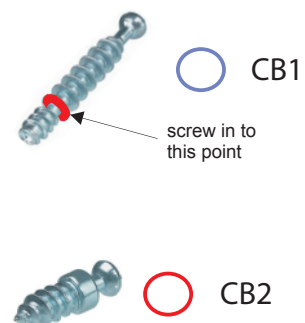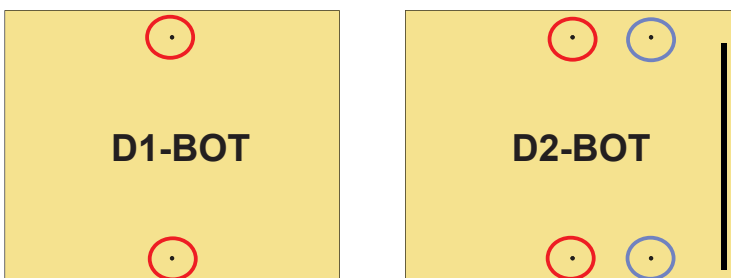


STEP 13

Screw a cam bolt into each of the four holes indicated on the D1-CD Panel. Two need into one side of the panel and two into the opposite side.

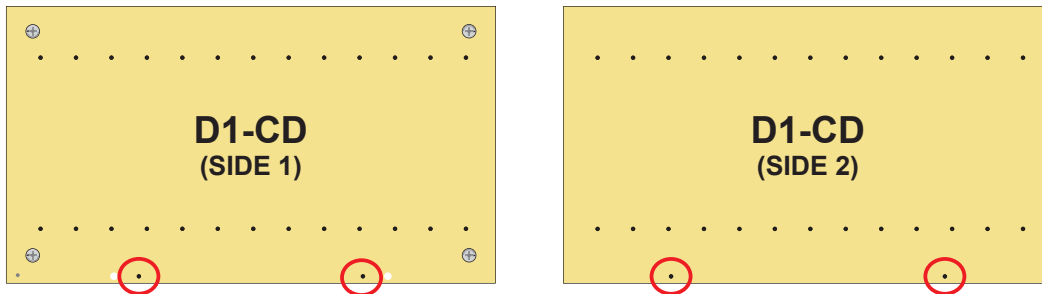


STEP 14

Screw a cam bolt into each of the two holes indicated on the D2-CD Panel. Some holes on the panel will be covered DO NOT use the covered holes.

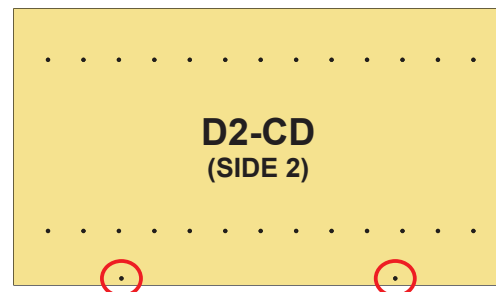


STEP 15

Attach two of the D-B1 panels to the D1-CD as indicated. Once slotted together ensure you tighten the cam locks.

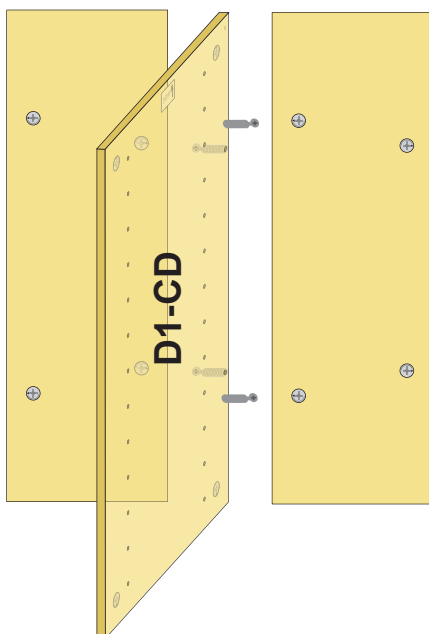




STEP 16

Screw a Mini Cam Bolt (CB2) into each of the holes indicated below with a red circle.
Screw a Cam Bolt (CB1) into each of the holes indicated below with a blue circle

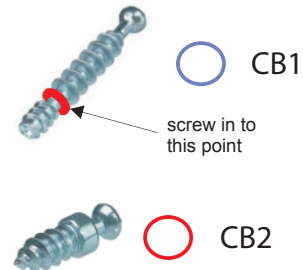

STEP 17

Screw a Cam Bolt (CB1) into each of the holes indicated below

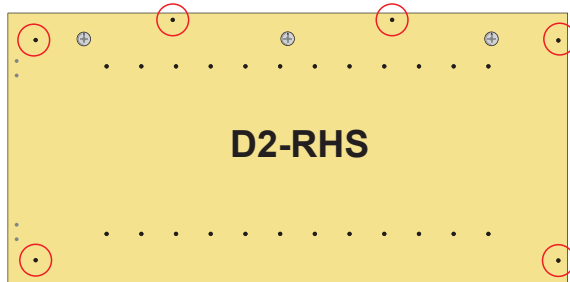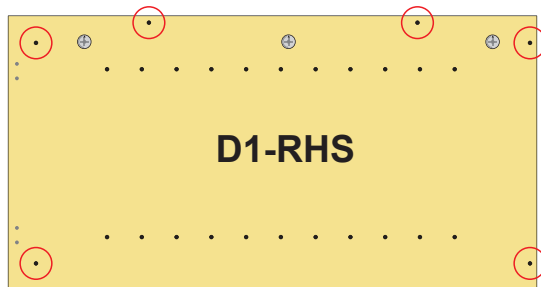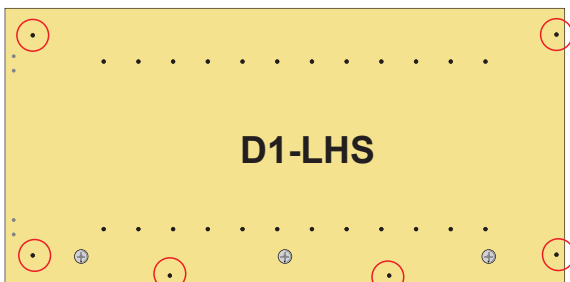


STEP 18

Attach the brackets (AB1) to the D1-LHS, D1-RHS and D2-RHS shown above using screws (35-17D).
Refer to step 7 for detailed instructions of this step.


STEP 19

Attach the section that you have already assembled (D1-CD & 2 x D-B1 panels) to the D1-TOP and D1-BOT as shown below. Attach by tightening the locks that will have been pre-installed into the panels.

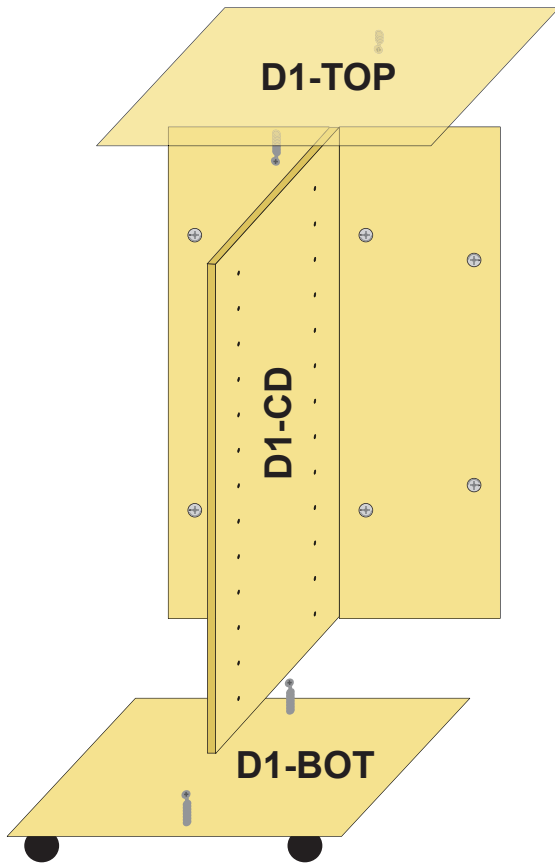

STEP 20


Attach the D1-LHS and D1-RHS to the assembled section. Secure by tightening the cam locks in both of the backs, top and base.

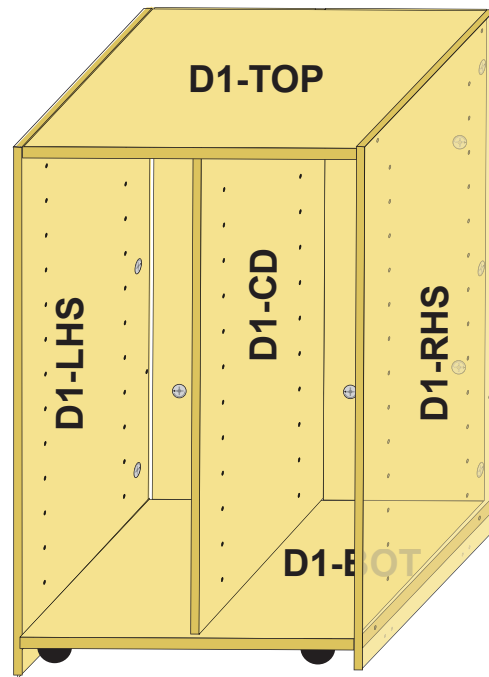

STEP 21

Attach the D2-LHS a to the D2-TOP and the D2-BOT as shown. Secure by tightening the cam locks in the D2-LHS.

Then attach the D2-RHS to this section. Secure by tightening the cam locks in top and base.

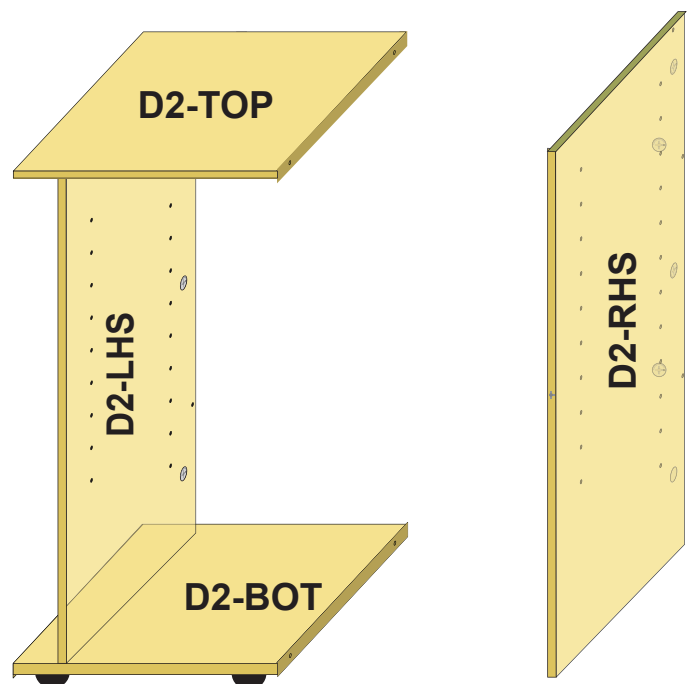


STEP 22

Fix the brackets that you have already attached to the sides to the bases of both the door sections using screws (35-17D). For detailed instructions refer to step 9.

STEP 23


Screw a Cam Bolt (CB1) into each of the holes indicated below. Attach the door knobs. Fit the front door panels to the assembled sections and tighten the cam locks to secure.

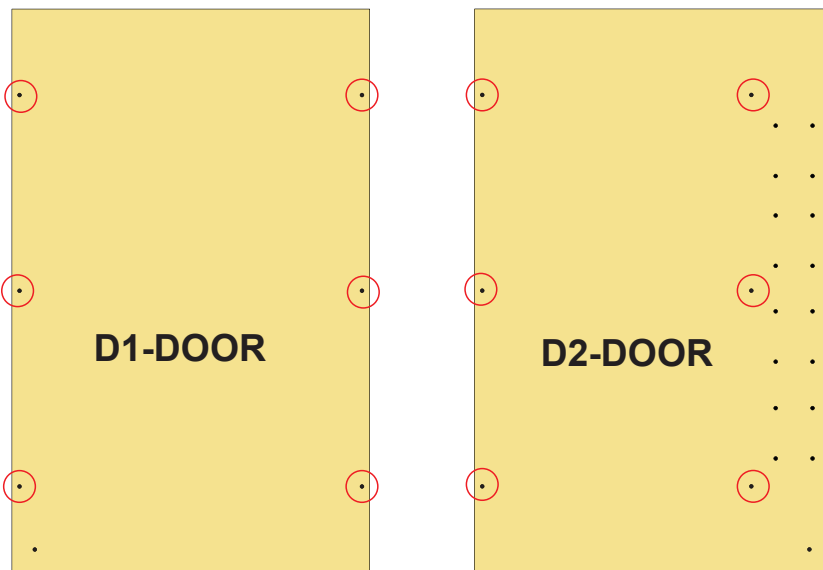

STEP 24


Slide the remaining door back in the Door 2 section that you have constructed and fix it the D2-RHS by tightening the two cam locks in the back

NOTE: There is only one back panel in the door 2 the fascia forms the back of the other section as the 1.5L boxes stored in this are longer and do not require a back

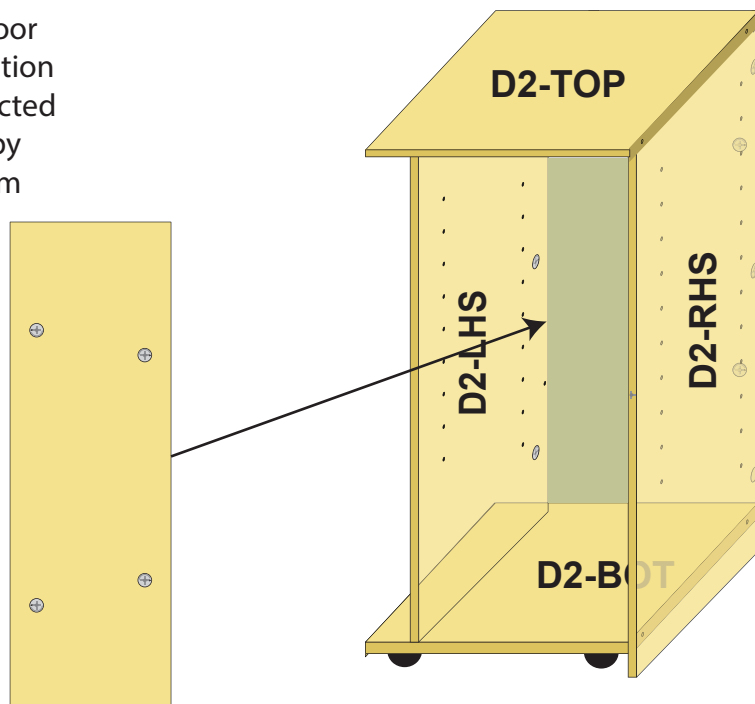


STEP 25

Slide the D2-CD into the door section and tighten the cam locks in the back and also the locks in the D2-CD to secure in place. you

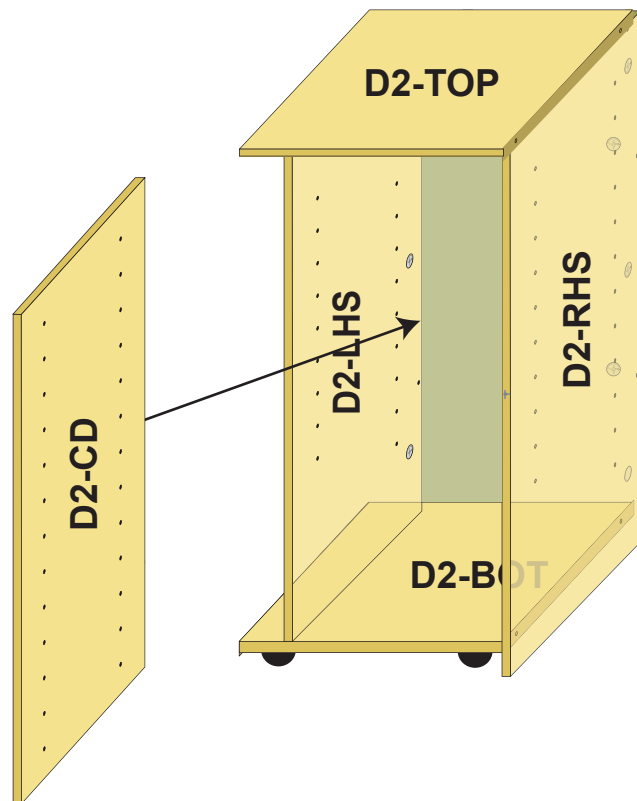

STEP 26

Screw a Mini Cam Bolt (CB2) into the two holes on the outer surface of the D2-LHS as indicated. Then attach the D2-Rack Side to this section.

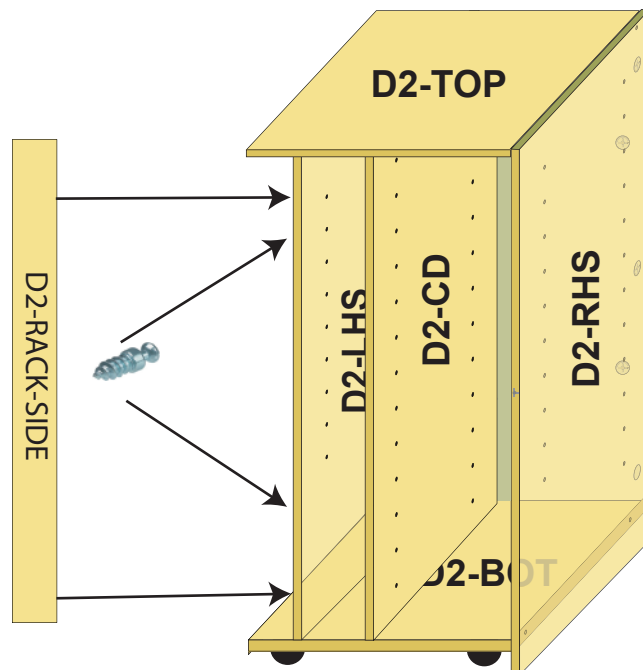

STEP 27

Fit the door sections to the main section that is already assembled. Use the hinges (H2) and screws (30-15C) provided.

STEP 28

Insert shelf pegs and shelves to fit the storage boxes as shown below bottom and work upwards when fitting the shelves and boxes to ensure the correct shelf spacing. Start each section from the

Insert the acrylic into the slots in the Rack Shelves and D2-BOT panels and then use SP2 shelf pegs to secure the Rack Shelves into the unit.





www.storage4crafts.co.uk

Freephone: 0800 048 8606