





# 2019 + BMW X6

**PART NUMBER:** A0420

**TRIM LINE INSTRUCTIONS:** Floor Mat trim patterns vary per vehicle make and model.

## STEP 2

Hook the floor mat to the attached velcro hook.

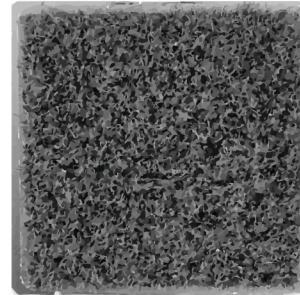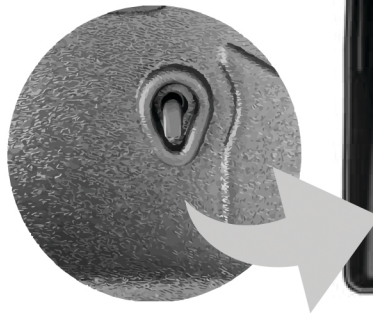

## STEP 1

Attach the velcro to your factory retention.

