





2019 + BMW X7

PART NUMBER: A0420

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

STEP 2

Hook the floor mat to the attached velcro hook.

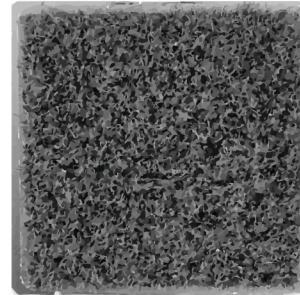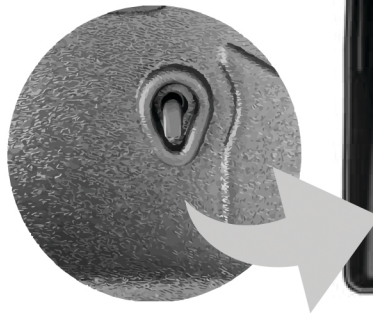

STEP 1

Attach the velcro to your factory retention.

