

2007 - 2014 Chevrolet Silverado GMC Sierra 1500 / 2500 HD Crew Cab / 3500 HD


(Floor mat designed to fit crew cabs only)

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

* Please ensure you are 100% satisfied with your purchase before *
trimming, as this will void your return and warranty

STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

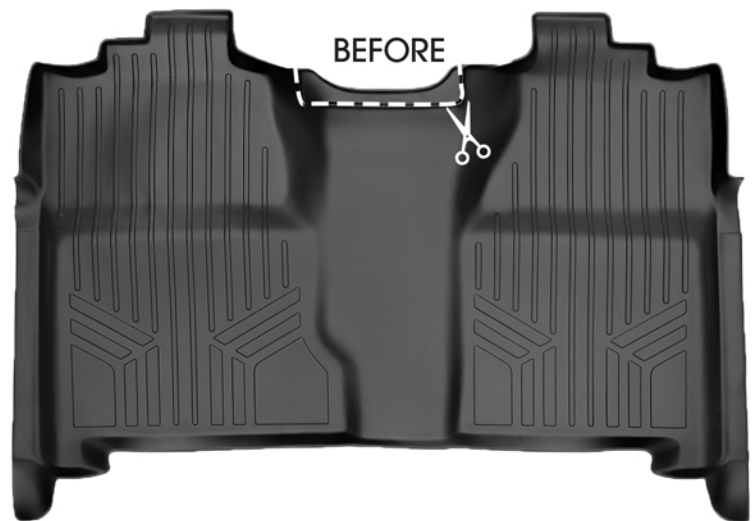

STEP 2:

Untrimmed area can slide under vehicles with center console or can be trimmed by using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area at top for a custom fit.