

2009 - 2014 Ford F150 Super Cab


TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

* Please ensure you are 100% satisfied with your purchase before *
trimming, as this will void your return and warranty

This floor mat is designed to fit
vehicles with flow through console

STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

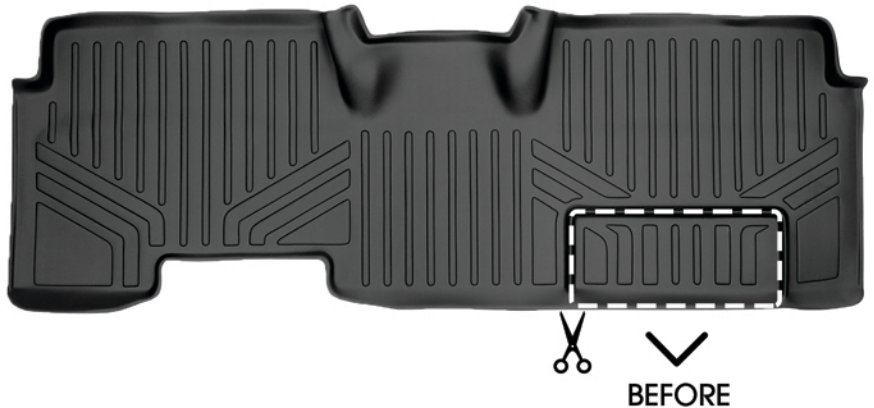

STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area for vehicles equipped with optional under seat subwoofer

