


2009 - 2014 Ford F-150 Super Crew Cab

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

* Please ensure you are 100% satisfied with your purchase before *
trimming, as this will void your return and warranty

STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

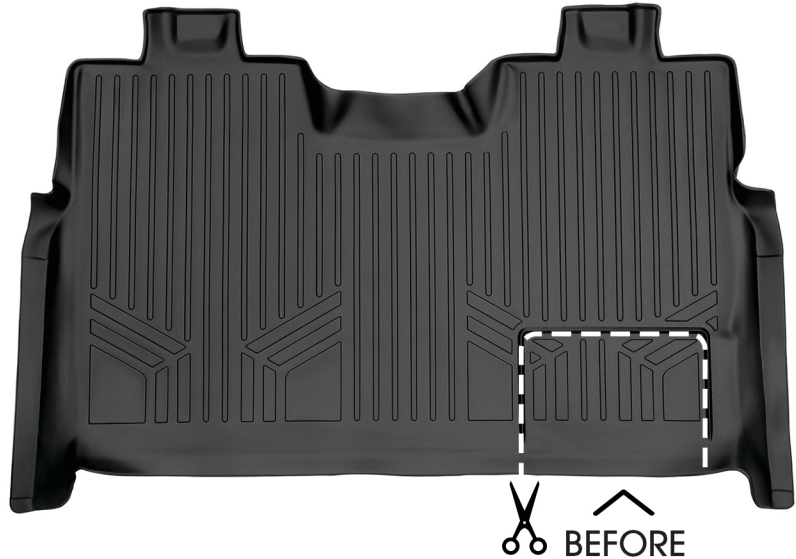

Trim area for vehicles equipped with optional under seat subwoofer



STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area to accommodate vehicles equipped with optional under seat subwoofer.



Smartliner USA



smartlinerusa



Smartliner-USA