


# 2009-2017 Chevy Traverse / 2008-2017 Buick Enclave 2007-2010 Saturn Outlook / 2007-2016 GMC Acadia / 2017 GMC Acadia Limited

**TRIM LINE INSTRUCTIONS:** Floor Mat trim patterns vary per vehicle make and model.

\* Please ensure you are 100% satisfied with your purchase before \*  
trimming, as this will void your return and warranty

## STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

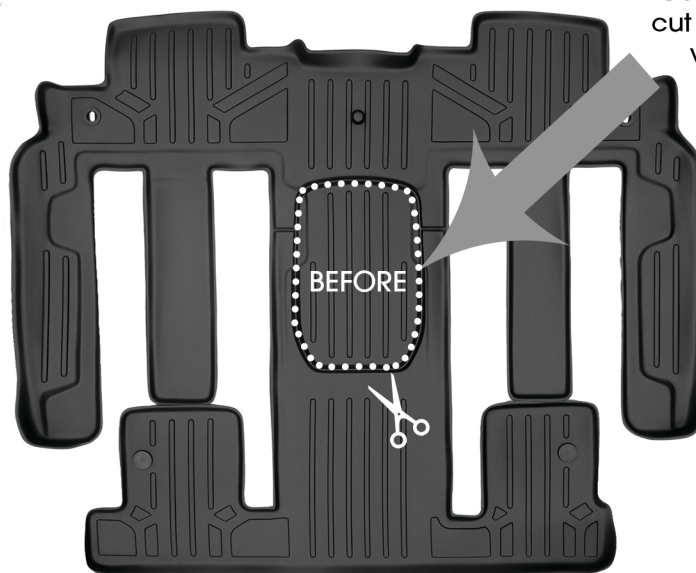

Center of mat should be cut out to accommodate vehicles with center console



## STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area in center to accommodate vehicles with center console.