

2008 - 2020 Chrysler Town & Country/Dodge Grand Caravan

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.


* Please ensure you are 100% satisfied with your purchase before *
trimming, as this will void your return and warranty

STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.


Trim area provided for vehicles with super console

BEFORE

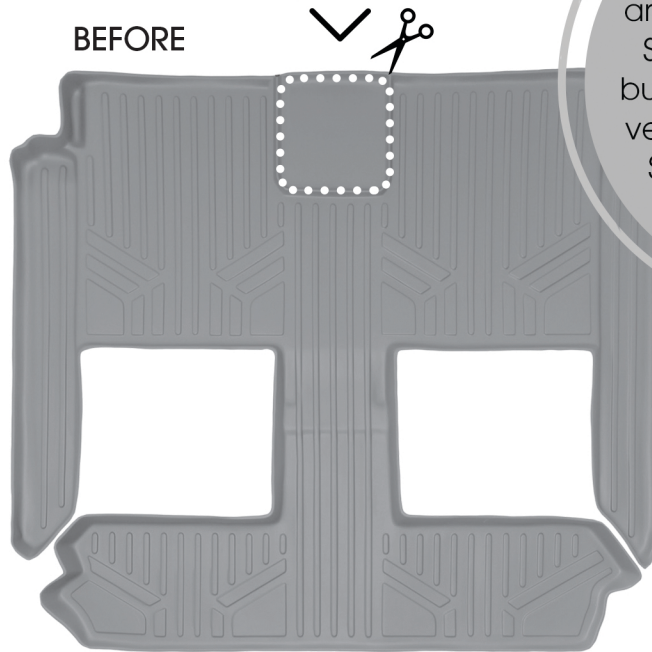

These Floor Mats are designed to fit with Stow N Go standard bucket seats. Will **NOT** fit vehicles equipped with Swivel N Go bucket seats with table.

AFTER

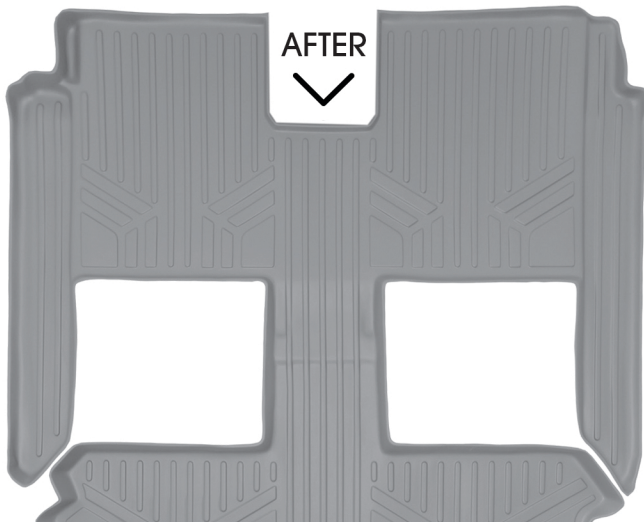

STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area as for vehicles equipped with the super console.