



## 2018 - 2020 Ford Expedition / Lincoln Navigator

**TRIM LINE INSTRUCTIONS:** Floor Mat trim patterns vary per vehicle make and model.

\* Please ensure you are 100% satisfied with your purchase before \*  
trimming, as this will void your return and warranty

### STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

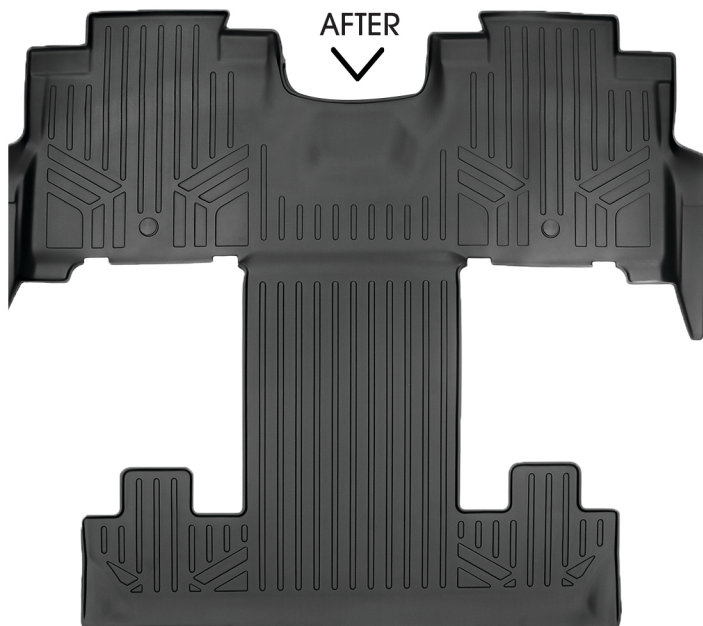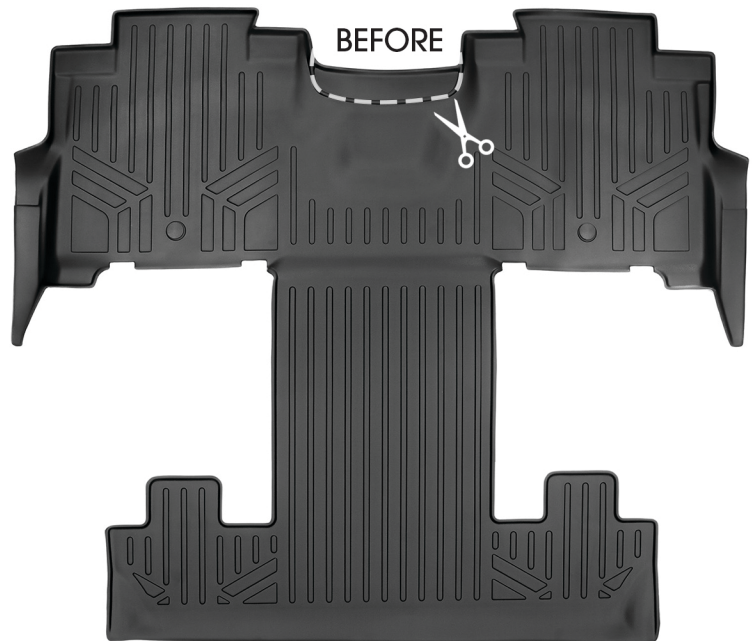

### STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area to accommodate vehicles equipped with second row bucket seats.



Smartliner USA



smartlinerusa



Smartliner-USA