

# 2015 - 2020 Chevy Tahoe / GMC Yukon / Cadillac Escalade



**TRIM LINE INSTRUCTIONS:** Floor Mat trim patterns vary per vehicle make and model.

\* Please ensure you are 100% satisfied with your purchase before \*  
trimming, as this will void your return and warranty

## STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

This piece should be trimmed to accommodate vehicles with bench seat

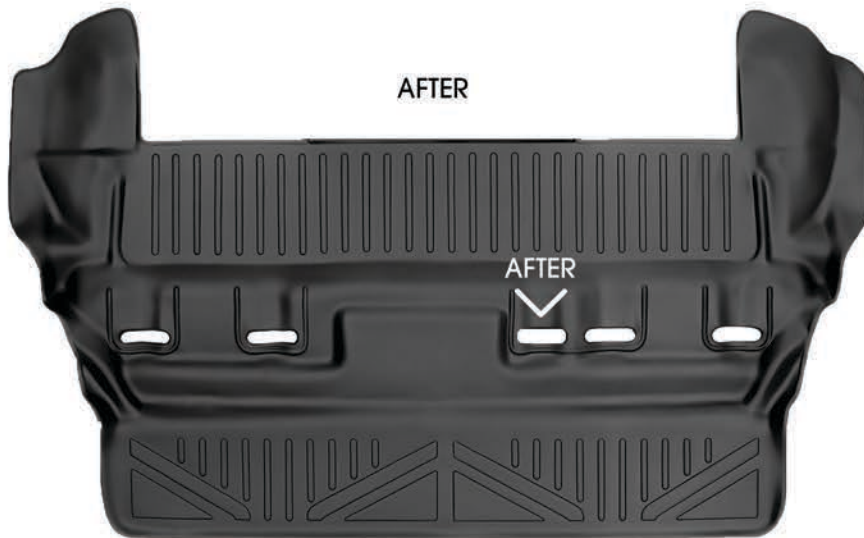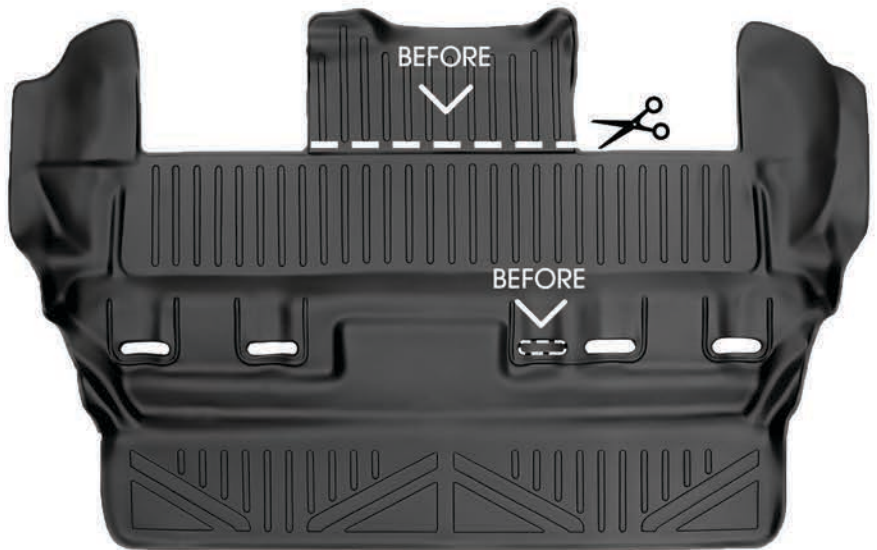

## STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area at top and small area in center of mat to accommodate vehicles with bench seat.



Smartliner USA



smartlinerusa



Smartliner-USA