

2010 - 2016 Cadillac SRX


TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

* Please ensure you are 100% satisfied with your purchase before *
trimming, as this will void your return and warranty

STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

ONLY CUT THE PRE SCORED AREA

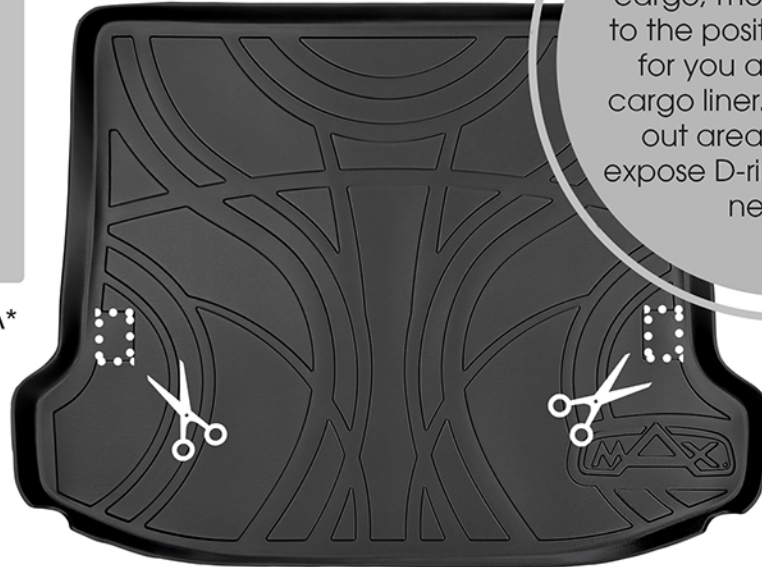

If you do not use the D rings to secure your cargo, move the D-Rings to the position that is best for you and install the cargo liner. Prescored cut out area provided to expose D-rings and U-rail if needed.

BEFORE

STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area as shown to accommodate vehicles with front bench seat cup holder.



AFTER



smartlinerusa



Smartliner-USA



Smartliner USA