


2011 - 2014 JEEP Wrangler Unlimited

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

* Please ensure you are 100% satisfied with your purchase before *
trimming, as this will void your return and warranty

STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

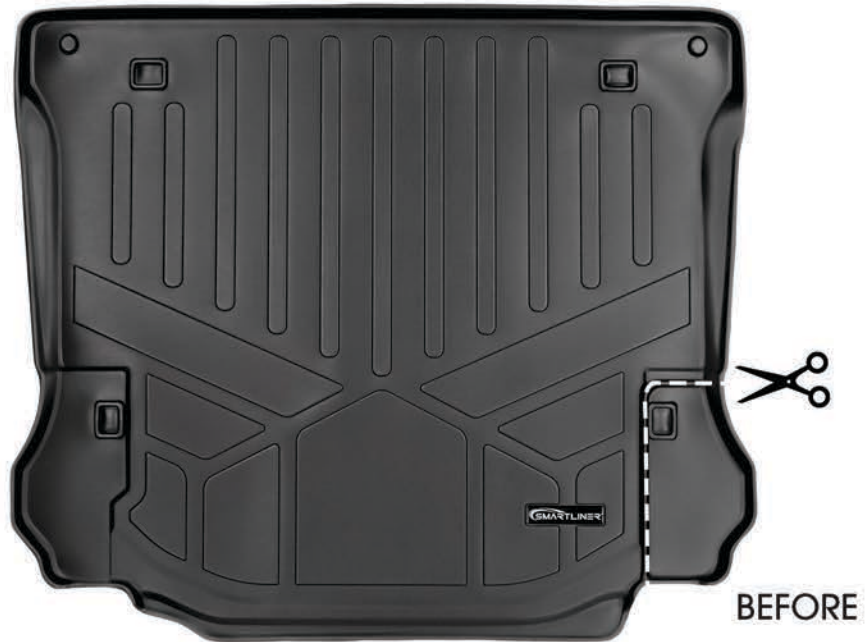

Mat Shown Trimmed For Vehicles with Optional Sub Woofer



STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area as shown to accommodate vehicles with optional under seat subwoofer.



smartlinerusa



Smartliner-USA



Smartliner USA