


2012 - 2018 Dodge RAM Crew Cab (one piece first row floor mat)

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model.

* Please ensure you are 100% satisfied with your purchase before * trimming, as this will void your return and warranty

STEP 1:

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

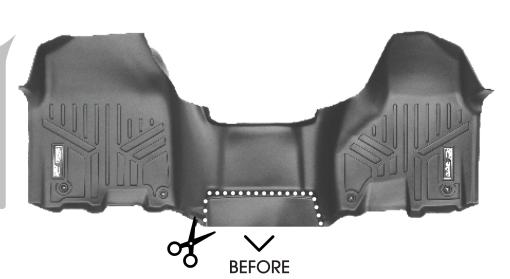

Optional trim line for vehicles with front bench seat cup holder.



STEP 2:

Trim using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area as shown to accommodate vehicles with front bench seat cup holders





Smartliner-USA

Smartliner USA

SMARTLINER-USA | EMAIL: CUSTOMERSERVICE@SMARTLINER-USA.COM | WWW.SMARTLINER-USA.COM