



0

smartlinerusa

f

Smartliner-USA

Smartliner USA

2007 - 2013 Chevrolet Silverado/GMC Sierra 1500


2007-2014 Chevrolet Silverado/GMC Sierra | 2500 HD Crew Cab/3500 HD

(floor mat is designed to fit crew cabs only)

Please ensure you are 100% satisfied with your purchase before trimming, as this will void your return and warranty

STEP 1

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the liner to regain it's custom shape after being rolled up for shipping.

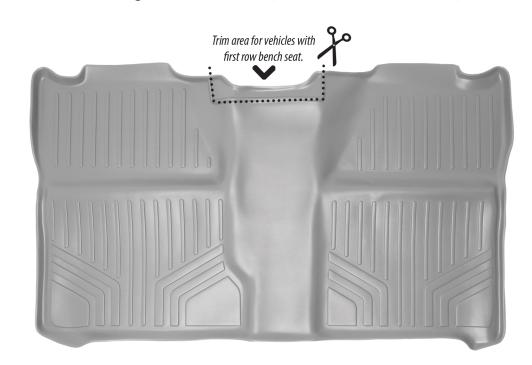

STEP 2

Untrimmed area can slide under vehicles with a center console or can be trimmed by using sharp scissors or a carpenter's knife to cut along crevice in mat to remove area at top for a custom fit.

