



smartlinerusa



Smartliner-USA



Smartliner USA

2007 - 2014


Chevrolet Tahoe (Does Not Fit XL)

TRIM LINE INSTRUCTIONS: Floor Mat trim patterns vary per vehicle make and model. If you need assistance with your install or have any questions, please call the Manufacturer **407-704-6740**, Monday - Friday between the hours of 7 a.m. - 4 p.m. (EST).

STEP 1

Remove Floor Mat from box and allow it to lay out in a warm area. This allows the mat to regain it's custom shape after being rolled up for shipping.

Dotted-lines shows trim lines for different configurations

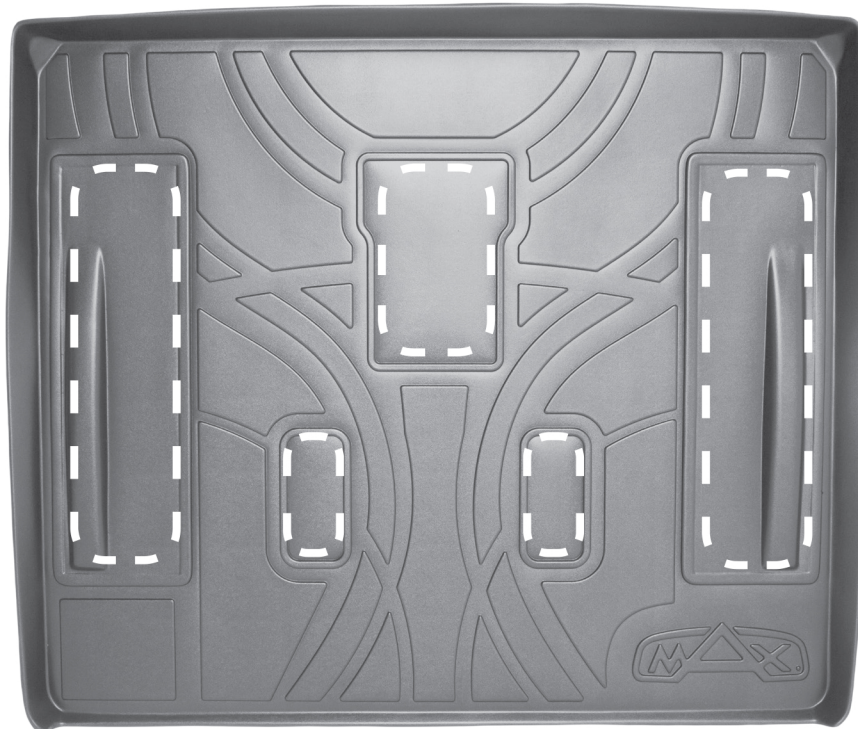

STEP 2

Use sharp scissors or a carpenter's knife to trim around prescored cut out for seat brackets and vehicles equipped with 3rd Row Seating. Trim cutouts appropriate for your vehicle features/options.

Mat trimmed showing all configurations available.

