




# COT DRAWER

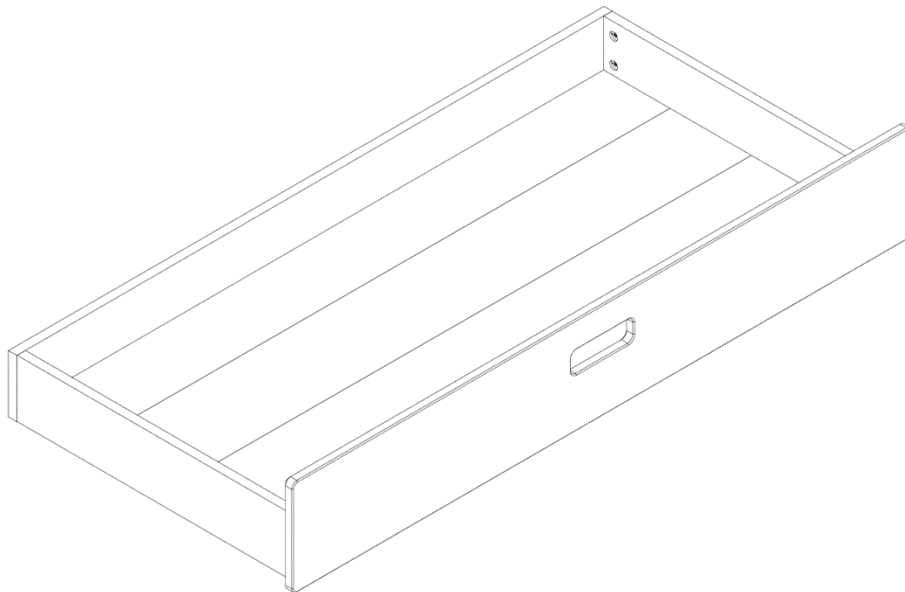




Suitable for Cot Bed 120 X 60 cm



\*Requires Assembly

Any damage caused because of wrong assembly is not covered under warranty.

## Parts included:

4 x G 	8 x K 
6 x H 	12 x M 
6 x I 	

1 x F (Front Panel)

1 x T ( Back Panel)

1 x LD (Centre Support)



2 x B (Side Panels)



4 x P (Insert Support Strips)


6 x R (Insert Panels)

You will need:  
(not included)




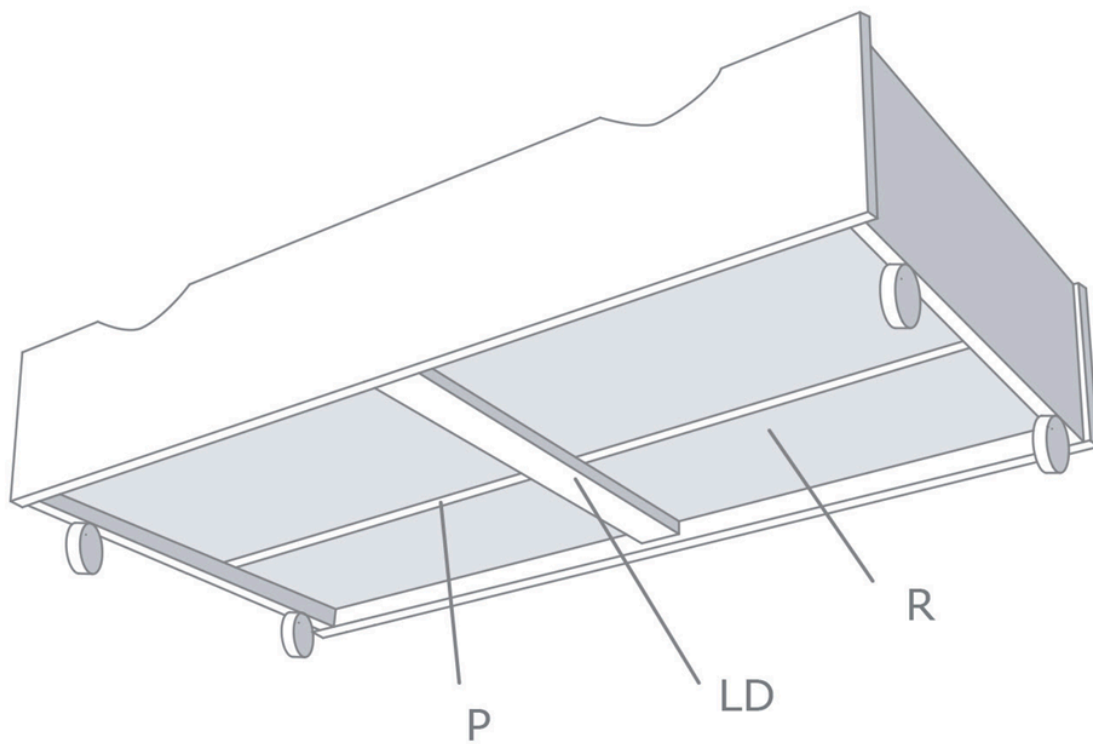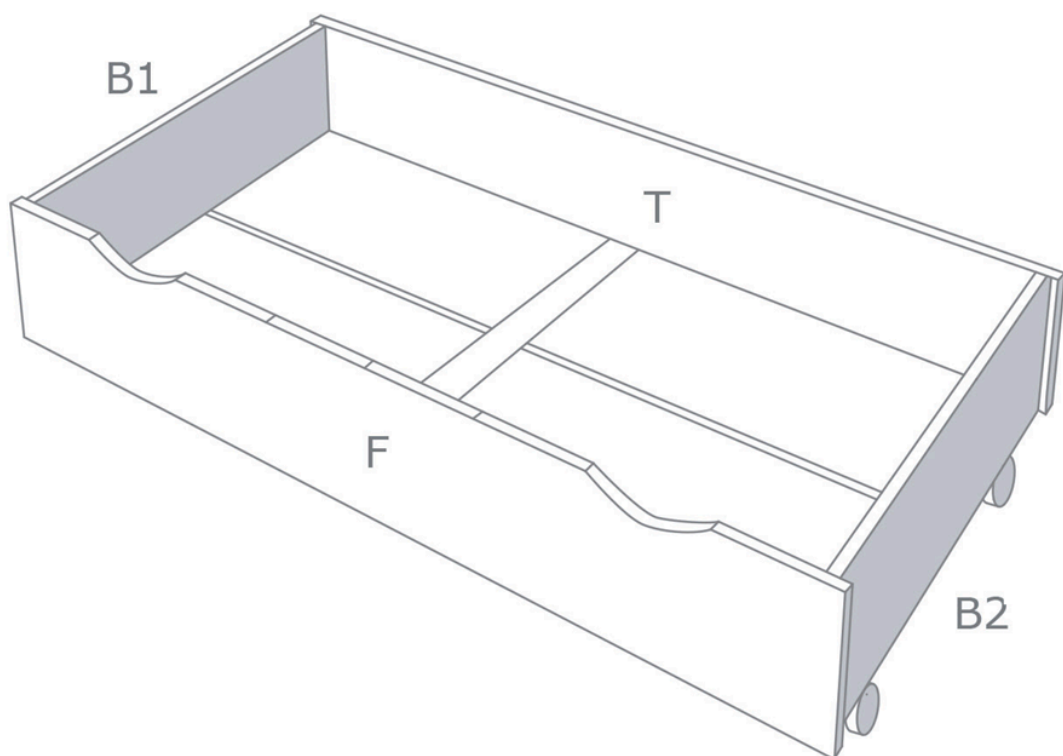

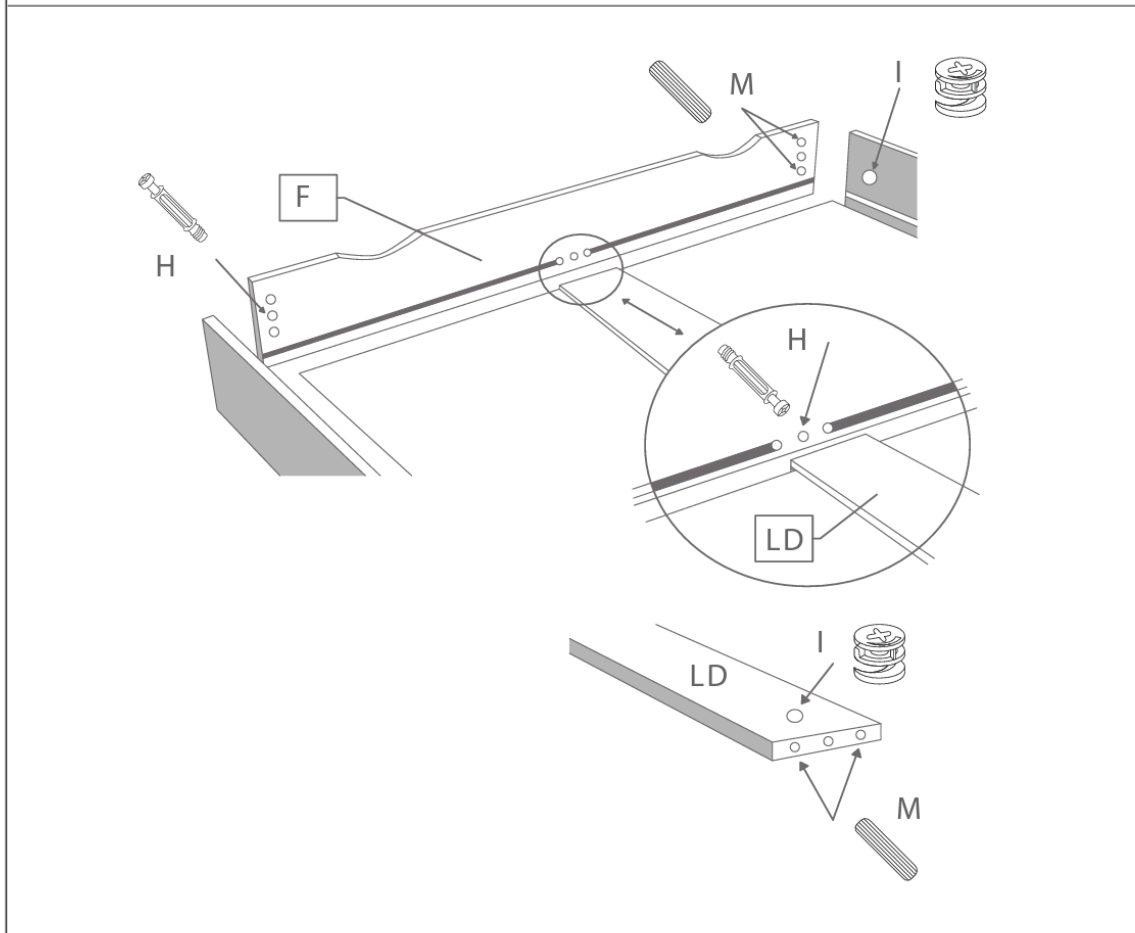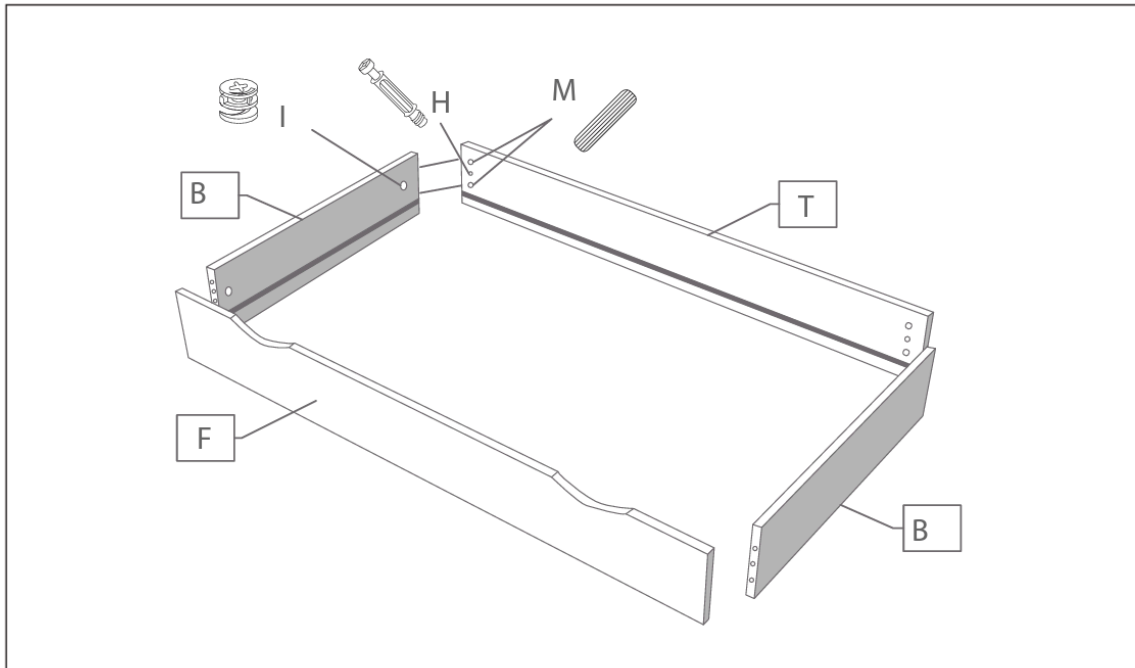

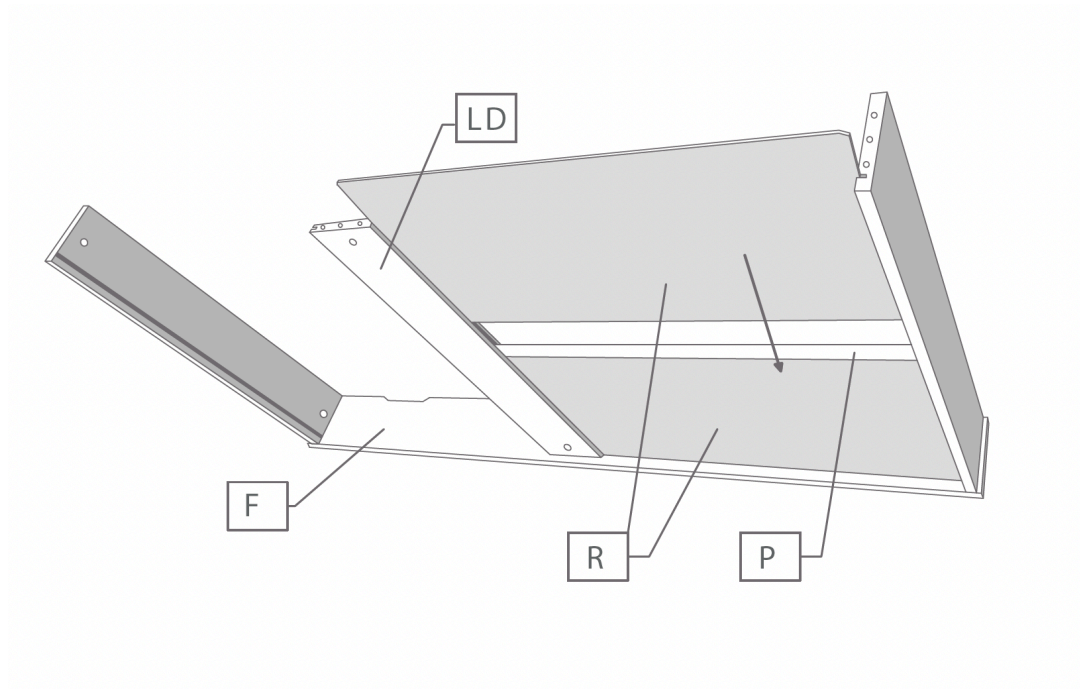

Use 6 Insert Panels (R) & 4 Insert Supports (P). Insert the Panels and the Supports very gently to avoid damage to the corners and the edges.

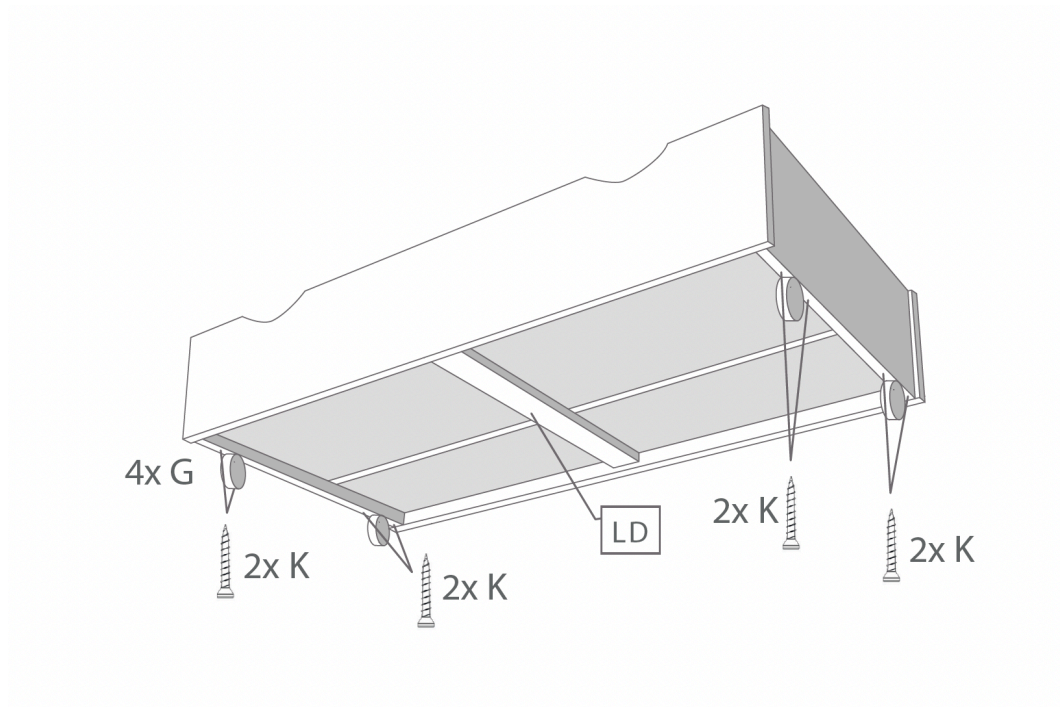

Attach the Front Panel (F) very gently and tighten the nuts (I). Then install the wheels (G).

Thank You for choosing Mokee