



Knuckle Pod Mounts Installation Instructions

Rock Jock 60/70 Axles

Tools Needed:


- Standard socket Set
- 3/32 Rivet Tool

Parts Included:

- (2) Knuckle Pod Mounts
- (2) Logos (1 Logo if Single High Steer)
- (4) 3/32 Rivets (2 Rivets if Single High Steer)
- (2) ½-20 Grade 8 bolts (None if Single High Steer)

Installation:

1. After painting, use a rivet tool to rivet the logo onto the taller bracket.
2. Remove the 2 forward most nuts on each high steer mount.
3. Bolt the brackets on so that light mounting holes point inward towards the diff cover. Use the supplied bolts on the driver side knuckle if using a single high steer mount.
4. TORQUE nuts to the factory specifications for your axle. If you are not sure what the torque specifications are contact your axle manufacturer.

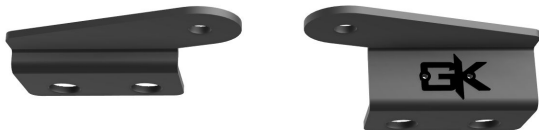

Single High Steer



Dual High Steer