



Gatekeeper Off-Road

TJ Front Stubby Bumper Installation Instructions


97-06 TJ and LJ

Tools Needed:

- Standard socket Set
- T55 Torx Bit Socket

Parts Included:

- (1) Bumper
- (1) Optional ¾" LED Light Set

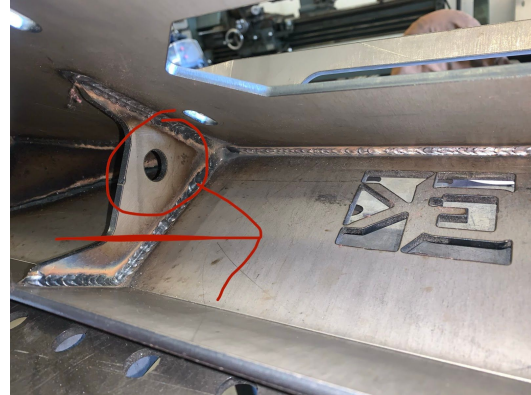

Installation:

1. Remove the six factory T55 bolts (4 on top, 2 underneath).
2. Disconnect any existing lights and remove bumper.
3. Test fit new bumper (trimming or removal of plastic sway bar cover may be required).
4. If installing ¾" lights inside the bumper make sure to run wiring before installing the bumper and face lights inward towards the logo. (shown in picture above)
5. If installing winch, bolt winch to the four slotted holes on the top of your new bumper BEFORE bolting the bumper to the frame.
6. Slide your new bumper over the frame and secure with factory bolts removed in step 1.
7. Torque to factory specs.

Test fit recommended before painting/powder coating.