



PROFILE

PERFORMANCE

INSTALL GUIDE

PRISM DEMON EYES

WARNING: By reading this document, I agree it is only to be used as an educational guide. Profile Performance nor its distributors make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below, professional installation is recommended.





WHAT'S INCLUDED

-  2x PRISM DEMON EYE BOARDS
-  2x GLARE GUARDS
-  2x PRISM DRIVERS

OPTIONAL COMPONENTS:

-  2x MINI H1 BRACKETS
-  2x MINI D2S BRACKETS
-  1x MORIMOTO XBT CONTROLLER

TOOLS REQUIRED

-  T-8 TORX SCREWDRIVER
-  #1 PHILIPS SCREWDRIVER
-  7MM WRENCH
-  NEEDLENOSE PLIERS

RECOMMENDED PROTECTION:

-  LATEX GLOVES
-  PROTECTIVE EYEWEAR


ASSEMBLY PROCESS

NOTE: For projectors other than the Mini H1 and Mini D2S 4.0 projectors, installation may be similar but are not covered by this guide. If you are unclear of any part of the installation process or would like a recommendation of how to install Demon Eyes on other projectors, contact an Authorized Dealer.




MINI H1 PROJECTORS

ASSEMBLY

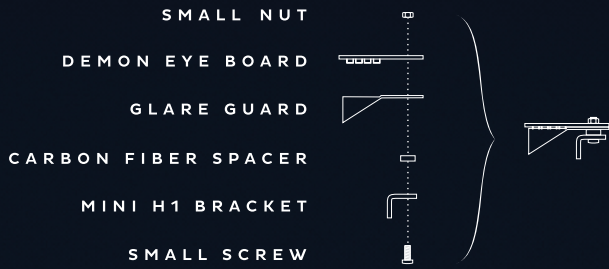


INSTALLATION

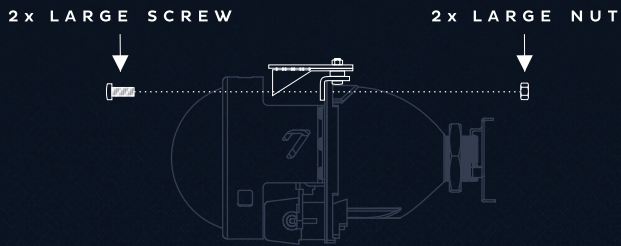


MINI D2S PROJECTORS


ASSEMBLY

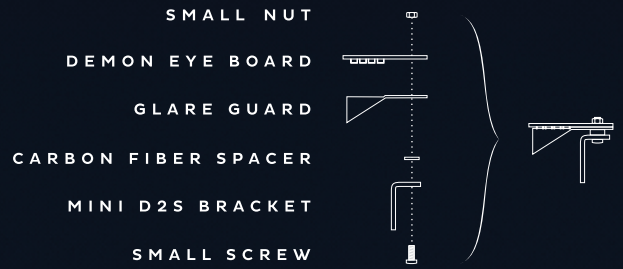

INSTALLATION

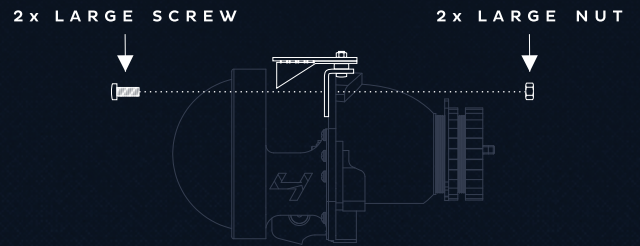

WIRING PROCESS

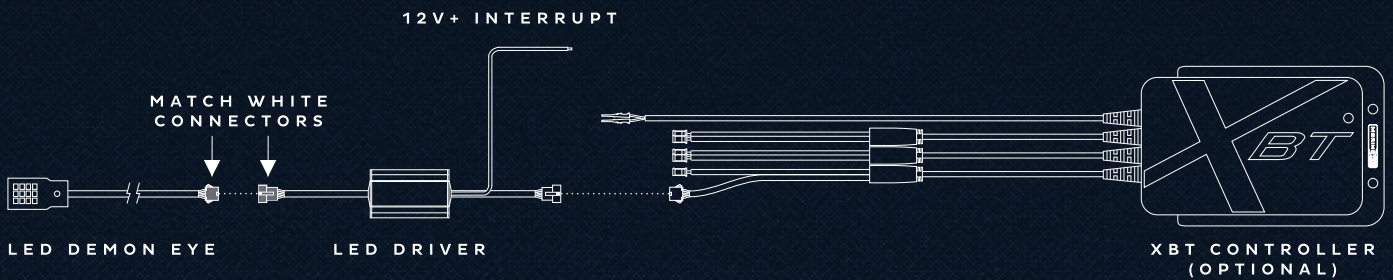

NOTE: The 12V+ Interrupt Wire needs to be tapped or spliced into a 12V+ lead that has power when the HID bulb of the projector is illuminated to deactivate power going to the LED Demon Eye.

Example: the red wire of a Morimoto HD Relay harness immediately before the "Ballast" output connection.

