

INSTALL GUIDE

PIVOT SEQUENTIAL STRIPS

WARNING: By reading this document, I agree it is only to be used as an educational guide. Profile Performance nor its distributors make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

WHAT'S INCLUDED



1x PIVOT STRIP



1x PIVOT DRIVER

OPTIONAL COMPONENTS:



INSTALLATION WIRE

TOOLS REQUIRED



1MM DRILL BIT / DRILL



NEEDLENOSE PLIERS

RECOMMENDED PROTECTION:




LATEX GLOVES




PROTECTIVE EYEWEAR

ASSEMBLY PROCESS


Along the edge of the strips, approximately every 2" / 5cm, mark the housing / bezel that you want to mount the strip to next to the strip. This will be where you will drill holes in the next step.

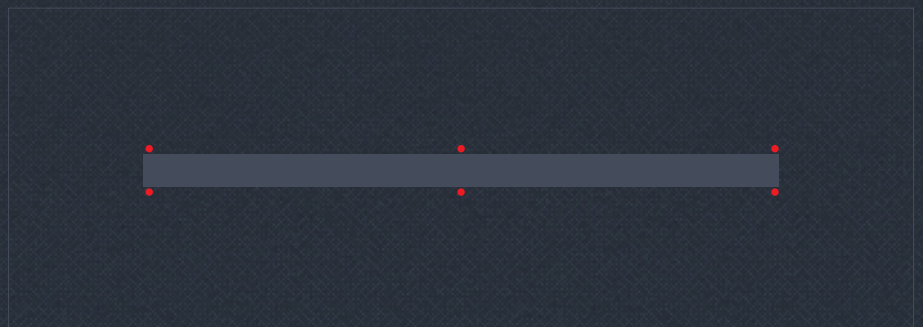


Drill a 1mm hole at each of the marked locations from the prior step.

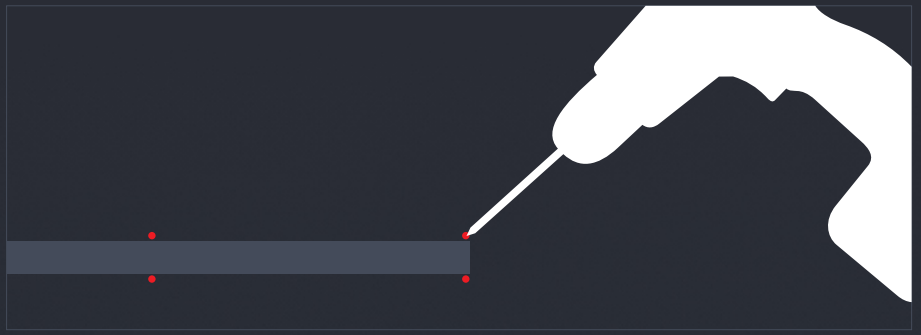

Using installation wire, beading wire, or fishing line, feed the wire from behind the housing/bezel, up and over the strip, then back down through the housing / bezel. Secure the strip by twisting the wire behind the housing or bezel.

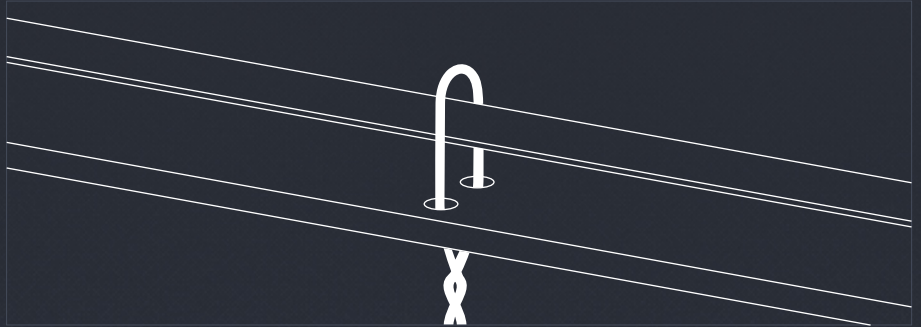

WIRING PROCESS

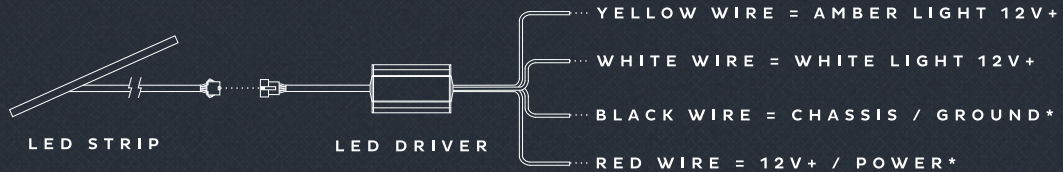

*NOTE: THE RED AND BLACK WIRES MUST BE POWERED / GROUNDED FOR THE STRIP TO FUNCTION!
THE WHITE WIRE DOES NOT NEED POWER FOR THE AMBER SIGNAL FUNCTION.

