


Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



4 x Threaded Tubes 900mm



4 x Threaded Tubes 600mm



4 x Threaded Tubes 300mm



8 x Adjustable Feet



4 x Brackets



4 x 1" Clamps



3 x Reducer Clamps



10 x Scaffold Clamps



6 x Tube Jointers



2 x Swivel Clamps

All rights reserved.


No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



T- Bar Bracket



Small Cheese Plate with Mitchell Mount

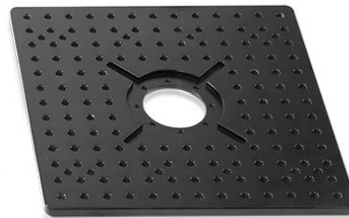

Large Cheese Plate with Mitchell Mount



3 x 1" Spigots



2 x Safety Belts (Pair)



6 x Allen Bolts
(Size: 3/8" x 12.5mm)



2 x L- Type Allen Keys
(Size: 6mm, 5/16")



15 x Allen Bolts
(Size: 3/8" x 19mm)



Bag Packing

INDEX

Sr. No	Particulars	Page No.
1	Scaffold Clamp & Bracket Assembly	4
2	Adjustable foot Assembly	4
3	Tube jointers & 300mm Threaded Tube Assembly	5-6
4	Large Cheese Plate Assembly	6-7
5	Safety Belt Assembly	7
6	Fluid Head Mounting	8
7	Mini Mount setup	9
8	1" clamp Assembly	9
9	Adjustable feet Assembly	9
10	Smaller Cheese Plate Assembly	9-10
11	100mm Bowl Mounting	10
12	Fluid Head Mounting	10-11
13	Side Mount Setup	11
14	1" Spigot Mounting	11-12
15	Adjustable foot & clamp or Bracket Mounting	13
16	T-Bar Bracket Mounting	13-14
17	Threaded Tube Mounting	14
18	Reducer Clamp Assembly	14-15
19	Swivel Clamp Mounting	15-16
20	Small Cheese Plate Mounting	16
21	Final Setup	17

Scaff Tubes Setup

Scaffold Clamp & Bracket Assembly

- Place the Scaffold clamp on the bracket ensuring the holes are properly aligned.
- Insert the bolt (3/8" x 12.5mm) and tighten it using the 5/16" Allen key.
- The scaffold clamp is securely mounted.
- Similarly, mount the other clamps on the brackets.



Adjustable Foot Assembly

- Loosen the ratchet knob of the bracket and mount it on the adjustable foot.
- Similarly, insert the adjustable foot on the other end of the bracket.
- After mounting the Bracket on the Adjustable foot, secure it by tightening the Ratchet knob.



Tube Joints & 300mm Threaded Tubes Assembly

- Insert the Tube Jointer into the 300mm Threaded Tube.



- Insert the 900mm Threaded Tube to the other end of the Tube Jointer.



- Tubes are now securely joined.
- Repeat the same process to join the other tubes.


NOTE: You can choose the desired length of threaded tubes per your requirement.



- Open the clamp and mount the tube onto the clamp.



- Close the Clamp and tighten the knob.

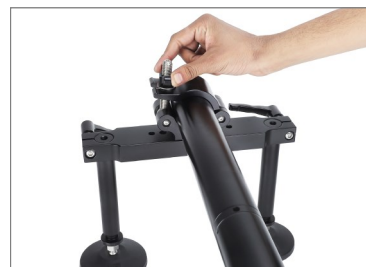

- The tube is securely attached the Clamp.
- Similarly, insert the other side of the Tube into the clamp.



- Repeat the same steps to insert the other Tube into the clamps.



Large Cheese Plate Assembly

- Mount the clamp on the Large Cheese plate ensuring the holes are aligned and insert the bolt ($3/8'' \times 12.5\text{mm}$).



- Tighten the Bolt using a $5/16''$ Allen Key.



- Similarly, mount the other three clamps on the Cheese plate.



- Securely Mount the Large Cheese plate on the Tubes.

NOTE: Scaff tubes should be at a good distance from each other.



- Now, lock all the clamps and securely tighten them.



- Mount the Scaff Tubes on the vehicle.



Safety Belt Assembly

- Secure the Scaff Tubes on the car by wrapping them up with the Safety Belt (1st Pair).


NOTE: It is highly recommended to use a safety belt to secure the camera units, ensuring a stable and safe setup.



- Wrap the Safety Belt to the right side of the Scaff Tubes and insert the belt hook into the Scaff Tubes.



- Insert the other end of the Safety Belt into the Ratchet knob of the 2nd pair of the safety belt and securely lock it.

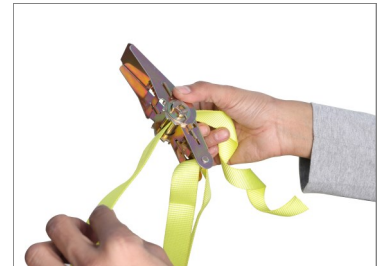

- Insert the other end of the 2nd pair of Safety Belt into the Car's opposite handle and tie it securely.



- Car Mount Grip Rigging Kit is now secured with the help of the Safety Belts.

- Follow the same steps for the other pair of the Safety Belts.



Fluid Head Mounting


- Mount the Fluid Head (**Not Included**) on the Cheese plate.
- Now, attach the castle Ring from the bottom and tighten it securely.
- Press the Push Pin of the Fluid Head and remove the camera plate.
- Attach the Camera Plate to the Camera (**Not Included**) and tighten it using the Screw Driver (**Not Included**).
- Slide the Camera (**Not Included**) onto the Fluid Head and securely lock it using the locking pin.
- The camera is now securely mounted on the Fluid Head.




Mini Mount Setup

1" Clamps Assembly

- Mount the 1" Clamp on the Small Cheese Plate and insert the Allen Bolt.

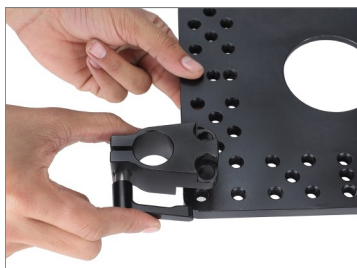

- Tighten the Allen Bolt using the 5/16" Allen Key.
- Follow the same steps to mount the other clamps.

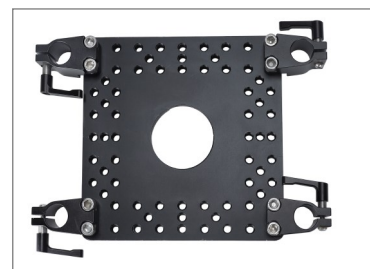

Adjustable Feet Assembly

- Loosen the 1" Clamp's Ratchet knob and mount it on the Adjustable foot.



- Similarly, attach the remaining adjustable feet.



Smaller Cheese Plate Assembly

- Mount the Small Cheese Plate on the car.



- Loosen the knob of the Adjustable foot and balance it .



100mm Bowl Mounting

- Mount the 100mm Bowl (Not Included) on the Cheese Plate.



Fluid Head Mounting

- Mount the Fluid Head (Not Included) on the 100mm Bowl (Not Included).



- Attach the Castle ring from the bottom and lock it securely.



- Mount the Camera (Not Included) on the Fluid Head (Not Included) and secure it using the Locking Pin.



- The Camera is now securely mounted.

NOTE: Use Safety belts to ensure the Camera is securely mounted.



Side Mount Setup

- Attach Adjustable feet, Scaffold clamp, and Bracket to the Scaff Tube and mount the Scaff Tubes on the car.



- Set the position of the Scaff Tubes as desired.



1" Spigot Mounting

- Insert the bolt (3/8"x 19mm) into the Scaffold Clamp and put the Spigot on the bolt.



- Now, tighten the bolt using the 5/16" Allen key.



- Insert the Spigot into the other Swivel clamp and tighten it using the ratchet knob.



- The clamp is now securely attached to the Swivel clamp.



- Insert the Tube into the Swivel clamp and tighten the Ratchet knob.



- The Swivel clamp is now securely attached to the Tube.



- Attach the Scaffold clamp to the Scaff tube and tighten the Scaffold clamp knob.



- Extend the Tube's length as per your requirement using the connector.






Adjustable foot , Clamp or Bracket Mounting

- Mount the bracket on the Adjustable foot and attach the clamp to the Bracket.
- Slide the Clamp on the Scaff Tubes.
- Tighten the Clamp knob.
- The Clamp is now securely attached.



T-Bar Bracket Mounting

- Loosen the Scaffold clamp knob and open the clamp.
- Attach the Scaffold clamp to the T-Bar Bracket.
- Now insert the bolt (3/8"x 12.5mm) ensuring the holes' alignment and tighten the bolt using the 5/16" Allen key.
- Repeat the same process to attach the other Scaffold clamp to the T-Bar Bracket.

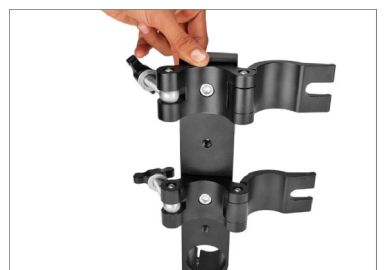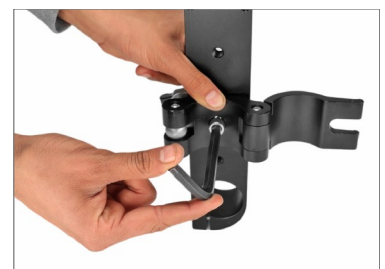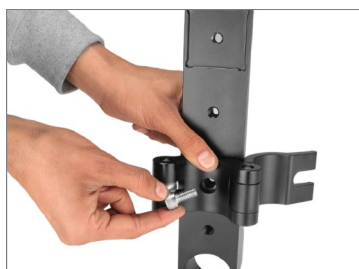

- Attach T-Bar Bracket along with the Scaffold clamp to the Scaffold tube and tighten the knobs of both the clamps.




- T-Bar Bracket is securely attached to the Scaffold tube.



Threaded Tube Mounting

- Insert the threaded tube into the T-Bar Bracket and tighten the bolt using the 6mm T-Type Allen Key (**Not Included**).

NOTE: You can choose the threaded tube of the desired length.

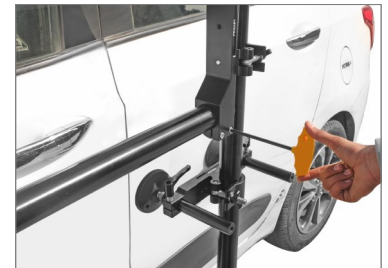

- The threaded tube is securely attached to the T-Bar Bracket.



Reducer Clamp Assembly

- Insert the 600mm threaded tube into the Reducer Clamp.
- Choose the threaded tube of the desired length.
- Insert the Adjustable foot into the Reducer Clamp.



- After inserting the Adjustable foot tighten both the Ratchet knobs.



- The Adjustable foot is securely attached to the Reducer Clamp.



Swivel Clamp Mounting

- Loosen the Ratchet knob of the Swivel Clamp and mount it on the threaded tube.



- Now, rotate the Swivel clamp and re-tighten the Ratchet knob.



- The Swivel Clamp is securely mounted on the threaded tube.



- Adjust the position of the Swivel Clamp as desired.

- Insert the Swivel clamp into the threaded tube and then attach the Adjustable feet to the car.




- Now, tighten the Swivel clamp knob.





Small Cheese Plate Mounting

- Mount the Scaffold clamp onto the small cheese plate mount and insert the (3/8"x 12.5mm) bolt.

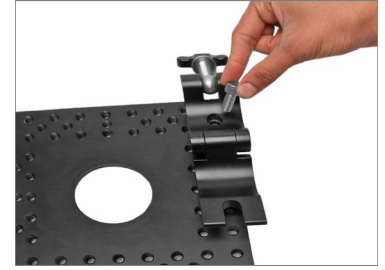

- Tighten the bolt using the 5/16" Allen key.
- Repeat the same process to attach the other clamp.

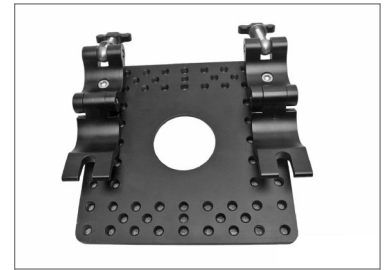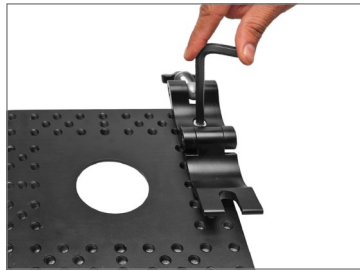


- Mount the Small Cheese plate on the threaded tube and tighten the clamp knob.



- The small Cheese plate is securely mounted.
- Now, mount the Camera (**Not Included**) on it.

NOTE: Use the provided safety belts to secure the Setup.

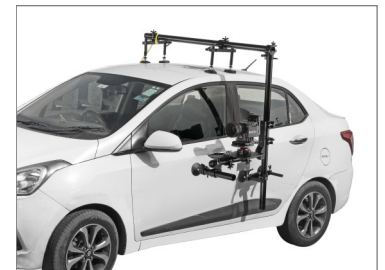

**YOUR PROAIM SCAFF TUBES & MITCHELL CAMERA CAR MOUNT
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer a one-year warranty for our products from the date of purchase. Within this period, we will repair it without charge for labor or parts. The warranty doesn't cover transportation costs, nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subject to inspection and evaluation by us.

Liability: We are not liable for damage caused by products we do not supply or from mishandling in transit, accident, misuse, neglect, or lack of care of the product or service by anyone other than our company.

Contact Us: If you are dissatisfied, please contact us immediately. We promise our utmost support and care until you use our product.