
SuperGrip Suction Car Mount (VI-SPGP-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

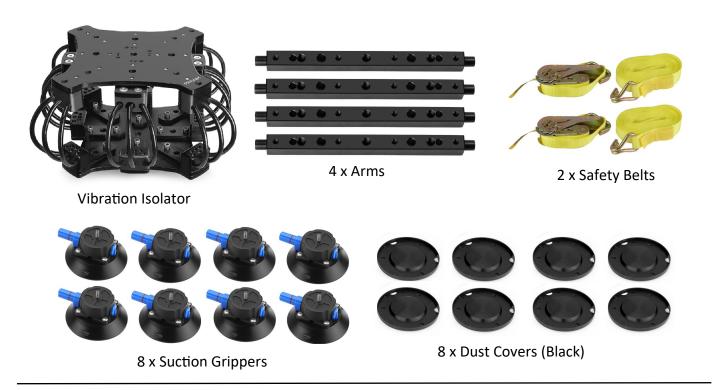

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



4 x SS Allen Bolt's size: (1/4 x 304 x 35mm) & 4 x Washers



Allen Key (Size: 3/16")



SuperGrip Suction Car Mount Setup

Assembling of Vibration Isolator with SuperGrip Suction

• Align the arm to one of the corners of the Vibration Isolator, and then insert the bolt.





 Tighten and secure the bolt using the Allen key, and attach the remaining arms to the corners of the Isolator.

NOTE: Use the vibration isolator separately in Over-slung or Under-slung, whether on a vehicle, crane, jib, or dolly.

 Remove the black dust cover of Suction Car Mount.









 Align the Suction Gripper with the screw hole provided in the arm, and then properly tighten the assembly.





Attach the remaining cups properly.



Suction Grippers Assembly

• Place your suction grippers at the desired point on your car.





 Press down the suction Grippers and keep pushing the pump to firmly fix it onto the car surface. Repeat this process for all the suction cups.





Caution: Recheck the Pump every 90 minutes. If the red line is visible. Re-pump the cup without losing the remaining vacuum till the red line disappears.



 Place the DJI-QR Plate (Not Included) on the Suction Car Mount, and then insert the two Allen bolts.





• Both the bolts need to be tightened using the Allen key.





Push and open the lock lever of the DJI-QR plate.





 Then attach the gimbal by sliding it onto the DJI-QR plate of the suction car mount and tighten it with the help of the knob provided on the DJI-QR plate.





 Unlock the knob of the Gimbal (Not Included) and remove the plate by employing the push pin.





 Align the gimbal plate to the thread at the bottom of the camera, and then insert the bolt and tighten it using a screw driver.





• Tighten and secure the assembly with the knob provided on the gimbal, as shown in the image.





YOUR PROAIM SUPERGRIP SUCTION CAR MOUNT ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.