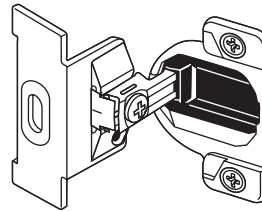



Hinge adjustments

COMPACT series


(See inside for adjustments
and installation instructions.)



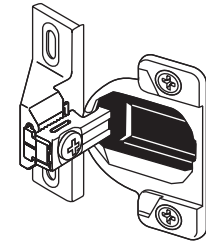
COMPACT 33 series
Large overlay



COMPACT 33 series
Small overlay

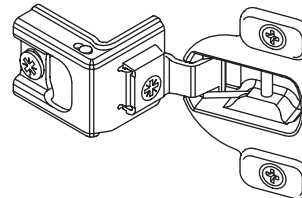

COMPACT 38C/39C series
Large overlay



















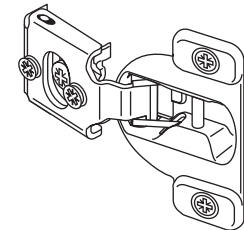



COMPACT 38N series
Small overlay

Blum, Inc.
7733 Old Plank Rd.
Stanley, NC 28164
toll free 800-438-6788
local 704-827-1345
fax 704-827-0799
internet www.blum.us

COMPACT 33 series

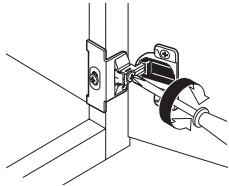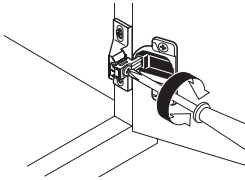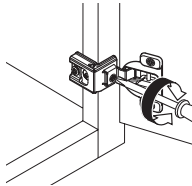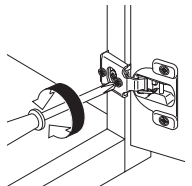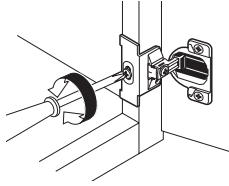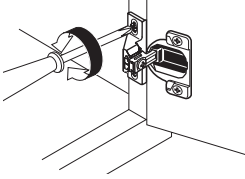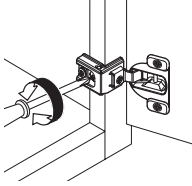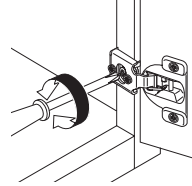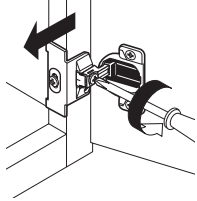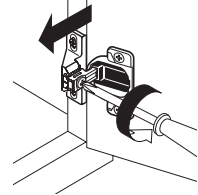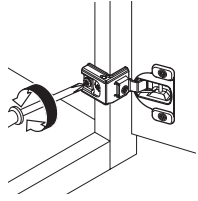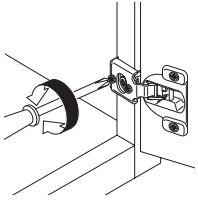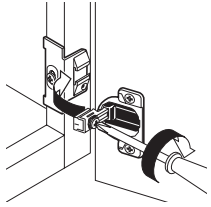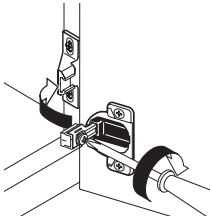COMPACT 38C/39C & 38N series

Side adjustment	Large overlay	Small overlay	Side adjustment	Large overlay	Small overlay
 <p>Loosen front screw, position door, tighten screw. Range = 1/8" (3mm)</p>			 <p>Turn front screw counter-clockwise to increase door overlay, clockwise to decrease. Range = 1/8" (3mm)</p>		
<p>Height adjustment</p>  <p>Loosen screw(s) on the mounting plate. Adjust door to position and tighten screw(s). Range = 9/32" (7mm)</p>			<p>Height adjustment</p>  <p>Loosen center screw. Adjust door to position and tighten screw. Range = 1/4" (6mm)</p>		
<p>Door removal</p> <p>Loosen side adj. screw. Slide hinge off mounting plate towards center of cabinet.</p>			<p>Door removal</p>  <p>Turn back screw counter-clockwise to increase door gap, clockwise to decrease. Range = -1/32" (1mm) + 3/32" (2mm)</p>		
<p>Door installation</p> <p>To reinstall reverse procedure, tighten screws on all hinges.</p>					

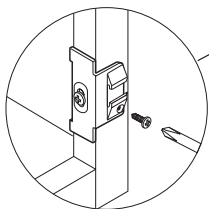

Note:
Before finishing hinge installation, place set screw in hinge plate to prevent hinge plate movement.
(1 3/8" or greater overlays only.)