

INSTALLATION INSTRUCTIONS



No. 940244




CUSTOM MOLDED REAR MUD GUARDS FOR FORD F150 WITH FENDER FLARES

Tools Needed

- Drill with 1/8" bit
- Phillips head screwdriver
- Center punch
- Pliers

Included in Box

- Rear Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screws and Washers (x4)
- M6 Bolt (x2)
- Spring Clip (x4)
- U-Clip (x2)

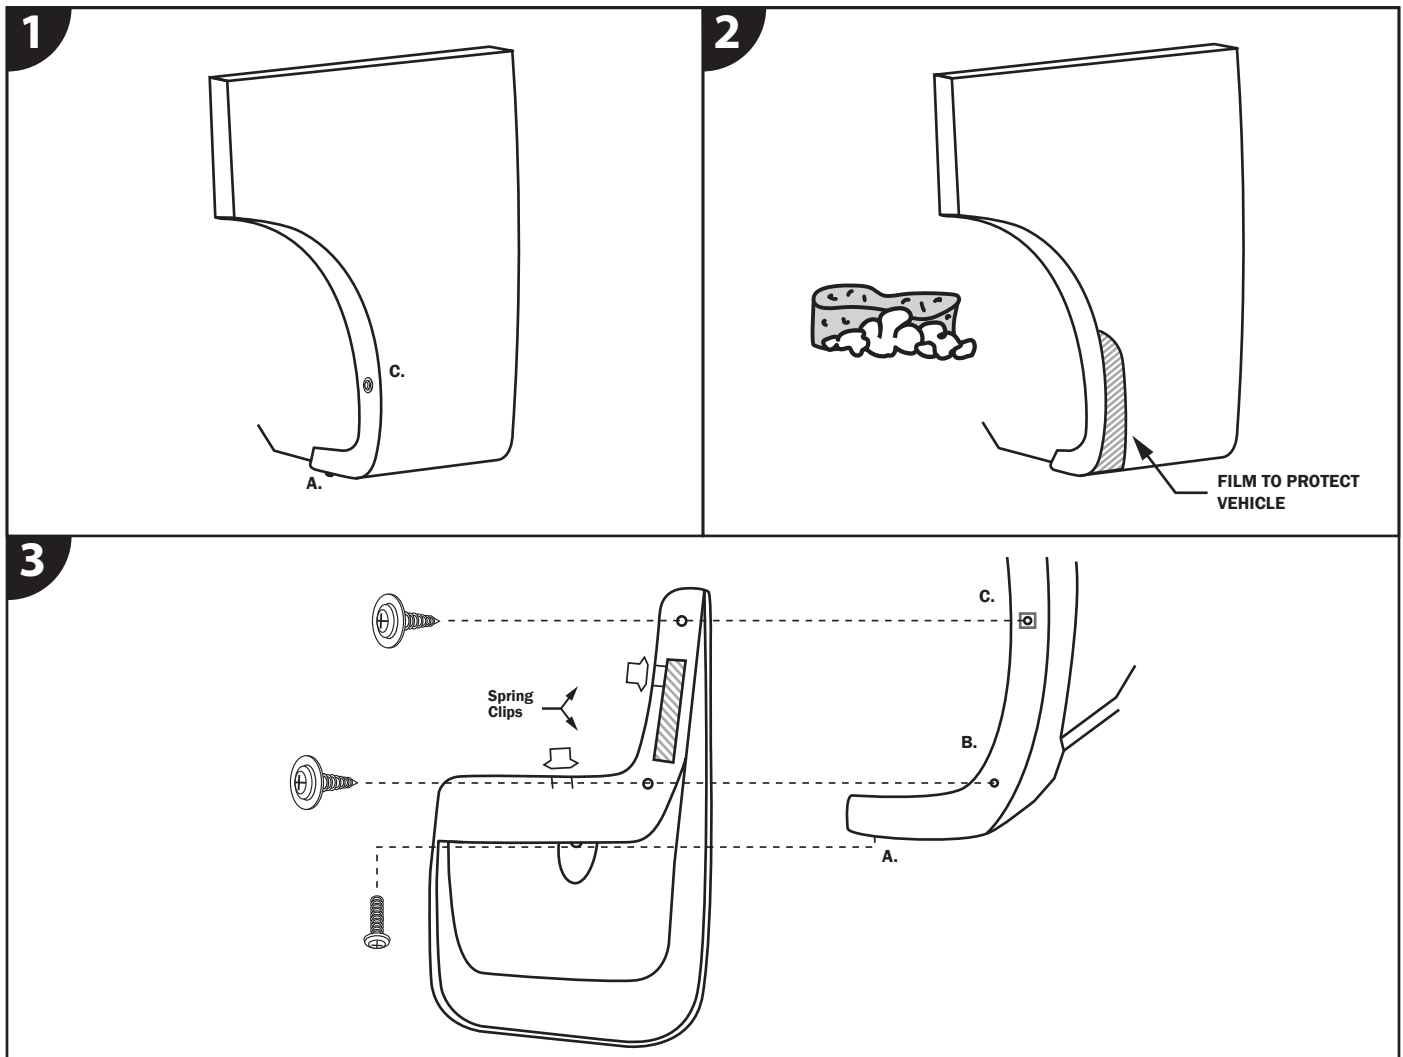

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- There are plastic fasteners located at A and C. Remove and throw away those fasteners.

STEP 2. Apply film to protect vehicle.

- Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 3. Install mud guards.

- At location C, take a supplied U-Clip and slide it over the fender and hole.
- Peel the backing off the double sided tape.
- Install the supplied M6 bolt through the mud guard and into location A.
- Install a #10 Screws and Washers into the U-Clip at locations C.
- Apply pressure and secure double sided tape to the clean fender.
- Using markings on the the mud guard install Spring Clips over the mud guard and fender flare.
- Drill a 1/8" hole in the fender and mud guard at location B . Use #10 Screw and Washer to fully secure the mud guard at new hole location.