

INSTALLATION INSTRUCTIONS



No. 940245




CUSTOM MOLDED REAR MUD GUARDS FOR FORD F150 WITHOUT FENDER FLARES

Tools Needed

- Drill with 1/8" bit
- Center punch
- Phillips head screwdriver

Included in Box

- Rear Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screws and Washers (x6)
- U-Clips (x4)

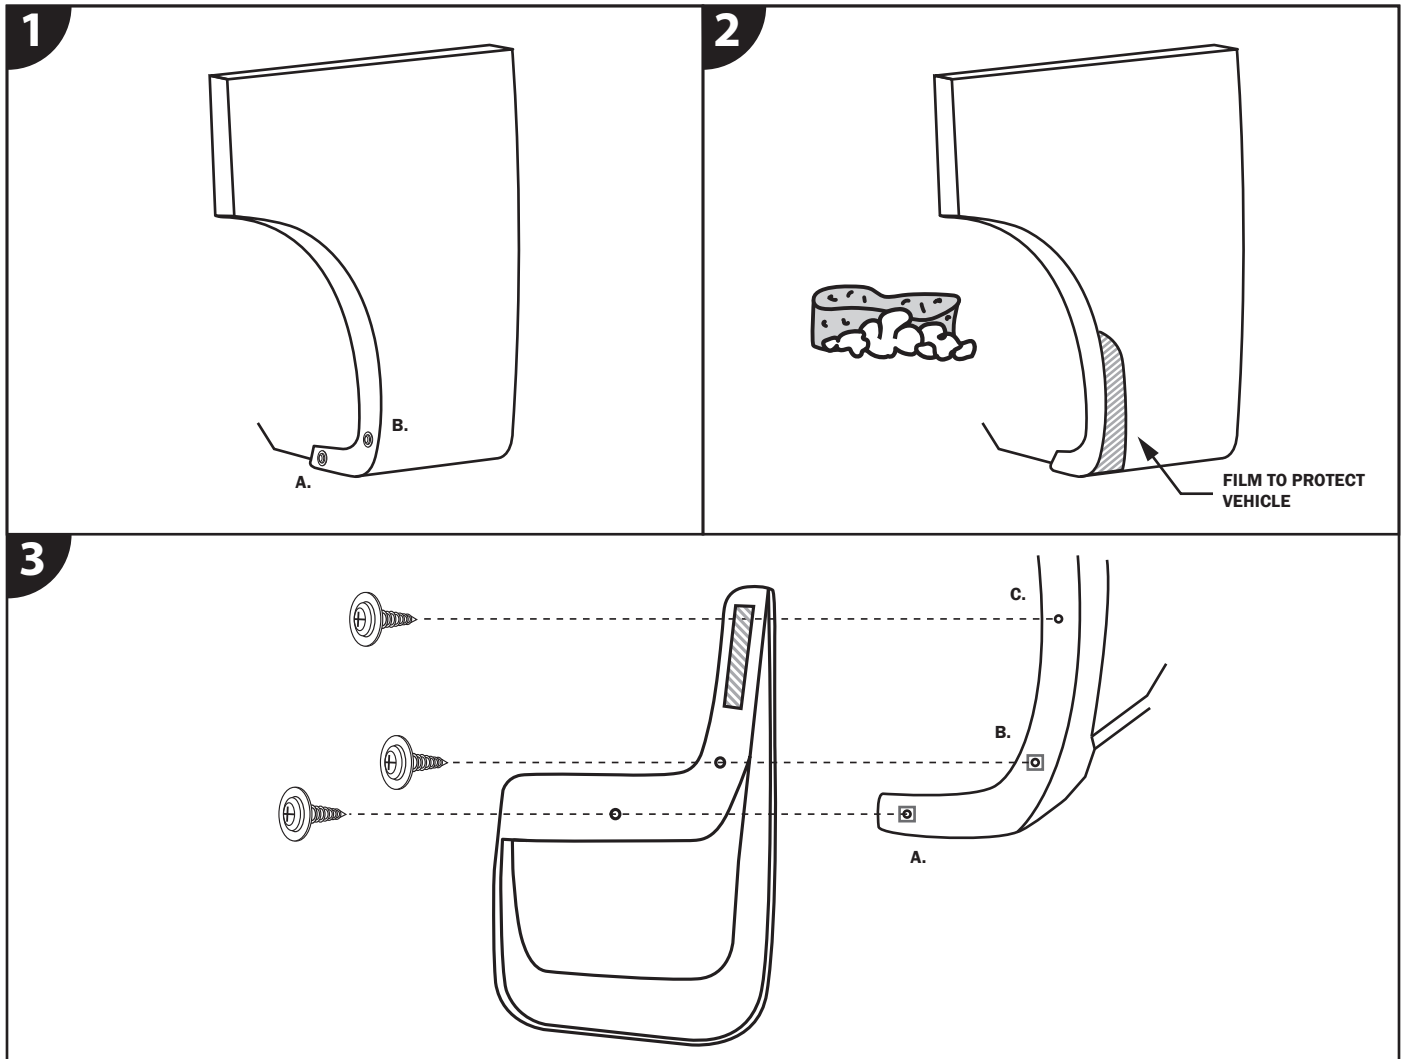

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- a. Locate the fasteners at A and B. Remove these fasteners and throw away.

STEP 2. Apply film to protect vehicle.

- a. Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- b. Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 3. Install mud guards.

- a. Peel the backing off the double sided tape.
- b. Install provided U-clips at locations A and B by sliding the clips over the fender lip. Make sure the clip hole lines up with the hole in the fender.
- c. Line up mud guard so the holes in the mud guard and fender line up, and stick onto fender with the double sided tape.
- d. Using #10 Screws and Washers, attach the mud guard at locations A and B.
- e. Apply pressure and secure double sided tape to the clean fender.
- f. Drill a 1/8" hole in the fender and mud guard at location C. Use #10 Screw and Washer to fully secure the mud guard at new hole location.