

INSTALLATION INSTRUCTIONS



No. 940246




CUSTOM MOLDED FRONT MUD GUARDS FOR FORD F150 WITHOUT FENDER FLARES

Tools Needed

- Drill with 1/8" bit
- Center punch
- Phillips head screwdriver

Included in Box

- Front Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screws and Washers (x2)
- U-Clips (x2)

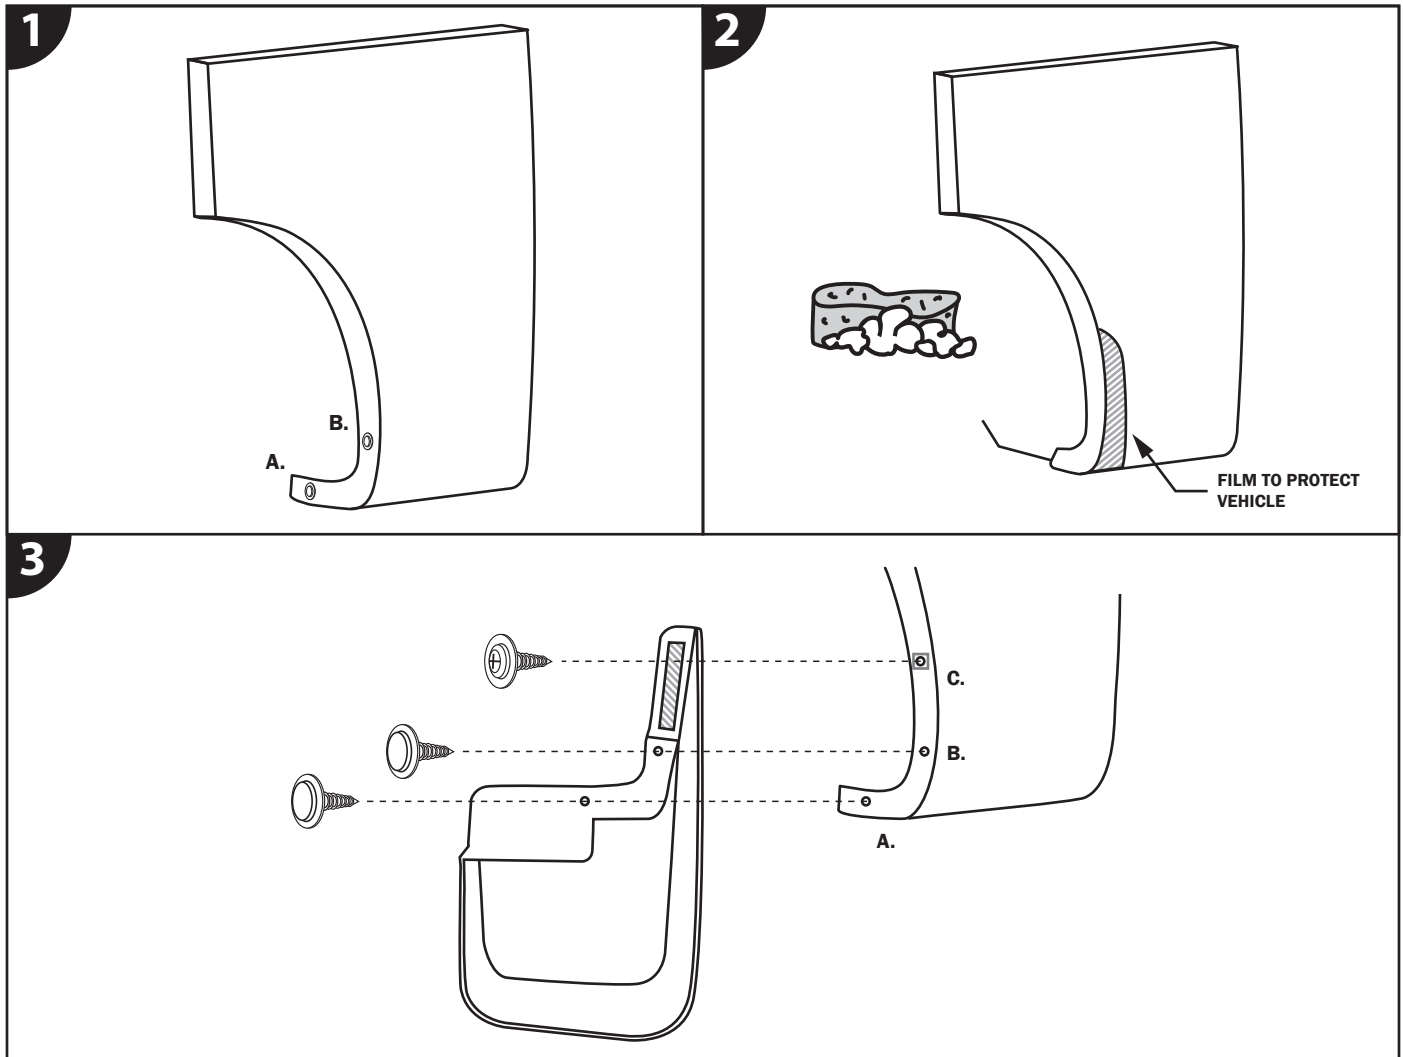

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- a. Locate the fasteners at A and B. Remove these fasteners and save for later.

STEP 2. Apply film to protect vehicle.

- a. Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- b. Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 3. Install mud guards.

- a. Peel the backing off the double sided tape.
- b. Line up mud guard so the holes in the mud guard and fender match, and stick onto fender with the double sided tape.
- c. Use the A and B fasteners you saved and reinstall them through the mud guard and the fender.
- d. Apply pressure and secure double sided tape to the clean fender.
- e. Drill a 1/8" hole in the fender and mud guard at location C.
- f. Install the provided U-Clip over the lip of the fender and over the hole drilled at location C.
- g. Use the provided #10 Screw and Washer to secure the mud guard at location C.