

# INSTALLATION INSTRUCTIONS



No. 940250




## CUSTOM MOLDED REAR MUD GUARDS FOR CHEVY COLORADO AND GMC CANYON WITHOUT FENDER FLARES

### Tools Needed

- Drill with 1/8" bit
- Center punch
- Phillips head screwdriver

### Included in Box

- Rear Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screws and Washers (x2)
- U-Clips (x2)

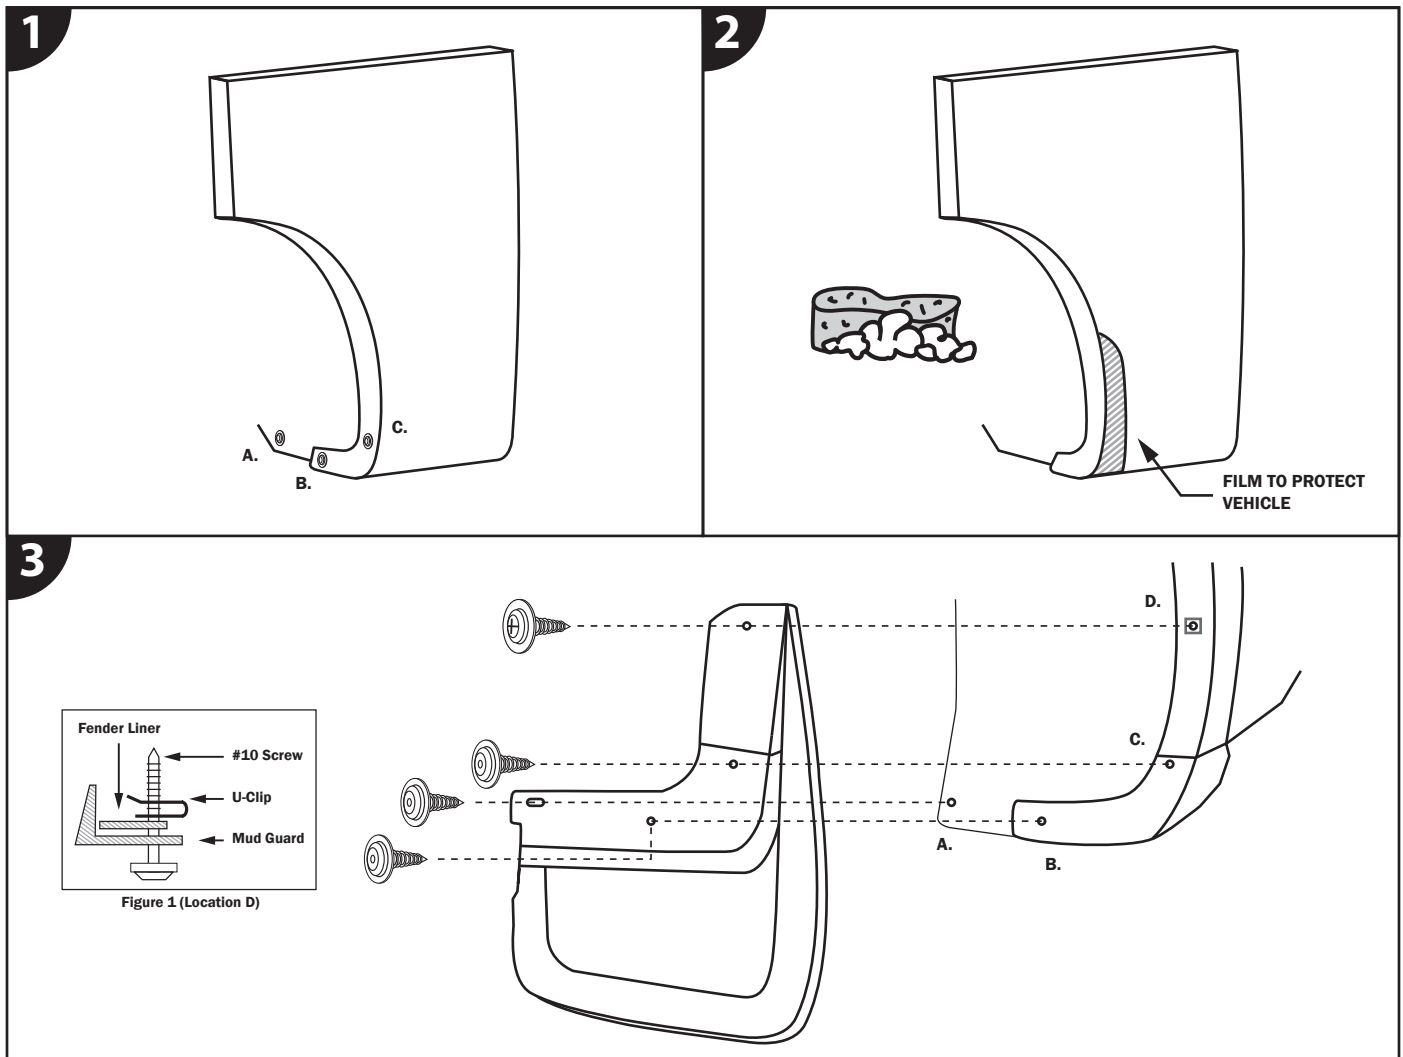

\*Repeat Steps 1-3 for Driver & Passenger Side\*

### STEP 1. Remove existing fasteners.

- Remove your existing fasteners from locations A, B and C.

### STEP 2. Apply film to protect vehicle.

- Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 3. Install mud guards.

- Using your existing factory fasteners, attach the mud guard at locations A, B and C.
- Drill 1/8" holes at location D using the mud guard as a guide.
- Install a #10 Screw and Washer at location D into a U-Clip. Use the U-Clip as a nut behind the fender liner. (Figure 1)