

INSTALLATION INSTRUCTIONS



No. 940261




CUSTOM MOLDED REAR MUD GUARDS FOR TOYOTA 4RUNNER WITHOUT FENDER FLARES

Tools Needed

- Phillips head screwdriver

Included in Box

- Rear Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screws and Washers (x6)
- U-Clip (x6)

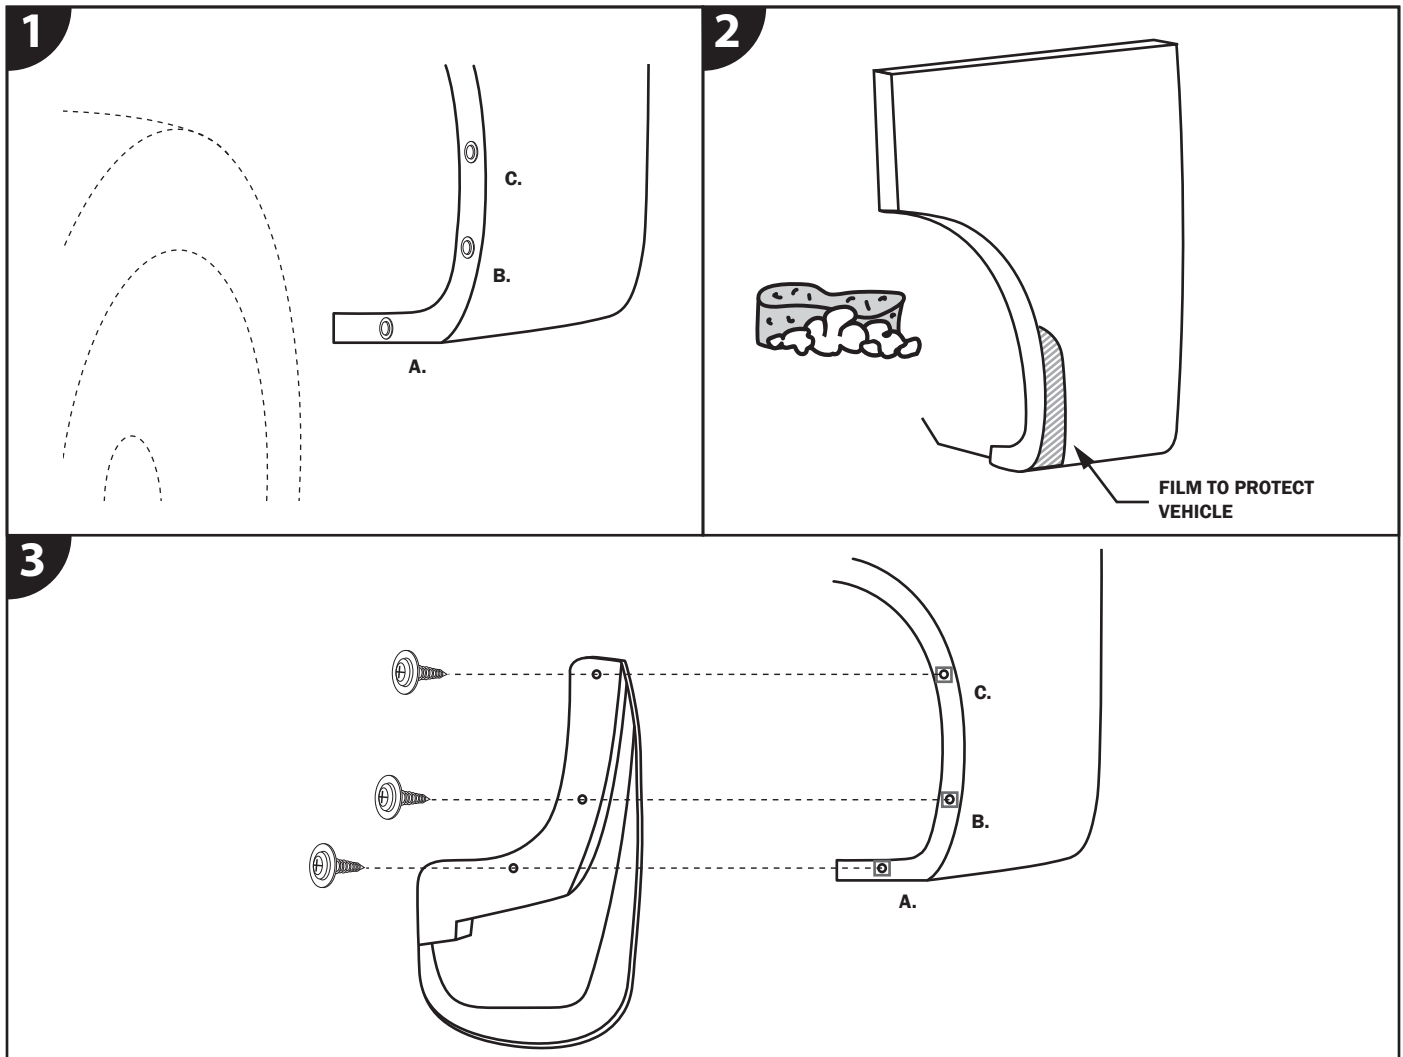

STEP 1. Remove existing fasteners.

- Remove the existing fasteners from locations A, B, and C.

STEP 2. Apply film to protect vehicle.

- Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 3. Install mud guards.

- Install U-Clip over the fender hole at locations A, B and C. You may have to pull the fender liner out of the way to install clips.
- Using #10 Screws and Washers attach mud guard at location A, B, and C.