

INSTALLATION INSTRUCTIONS



No. 940263




CUSTOM MOLDED FRONT MUD GUARDS FOR CHEVROLET EQUINOX

Tools Needed

- Phillips head screwdriver

Included in Box

- Front Mud Guards (for driver & passenger side)
- Film to protect vehicle
- #10 Screws and Washers (x6)
- U-Clips (x6)

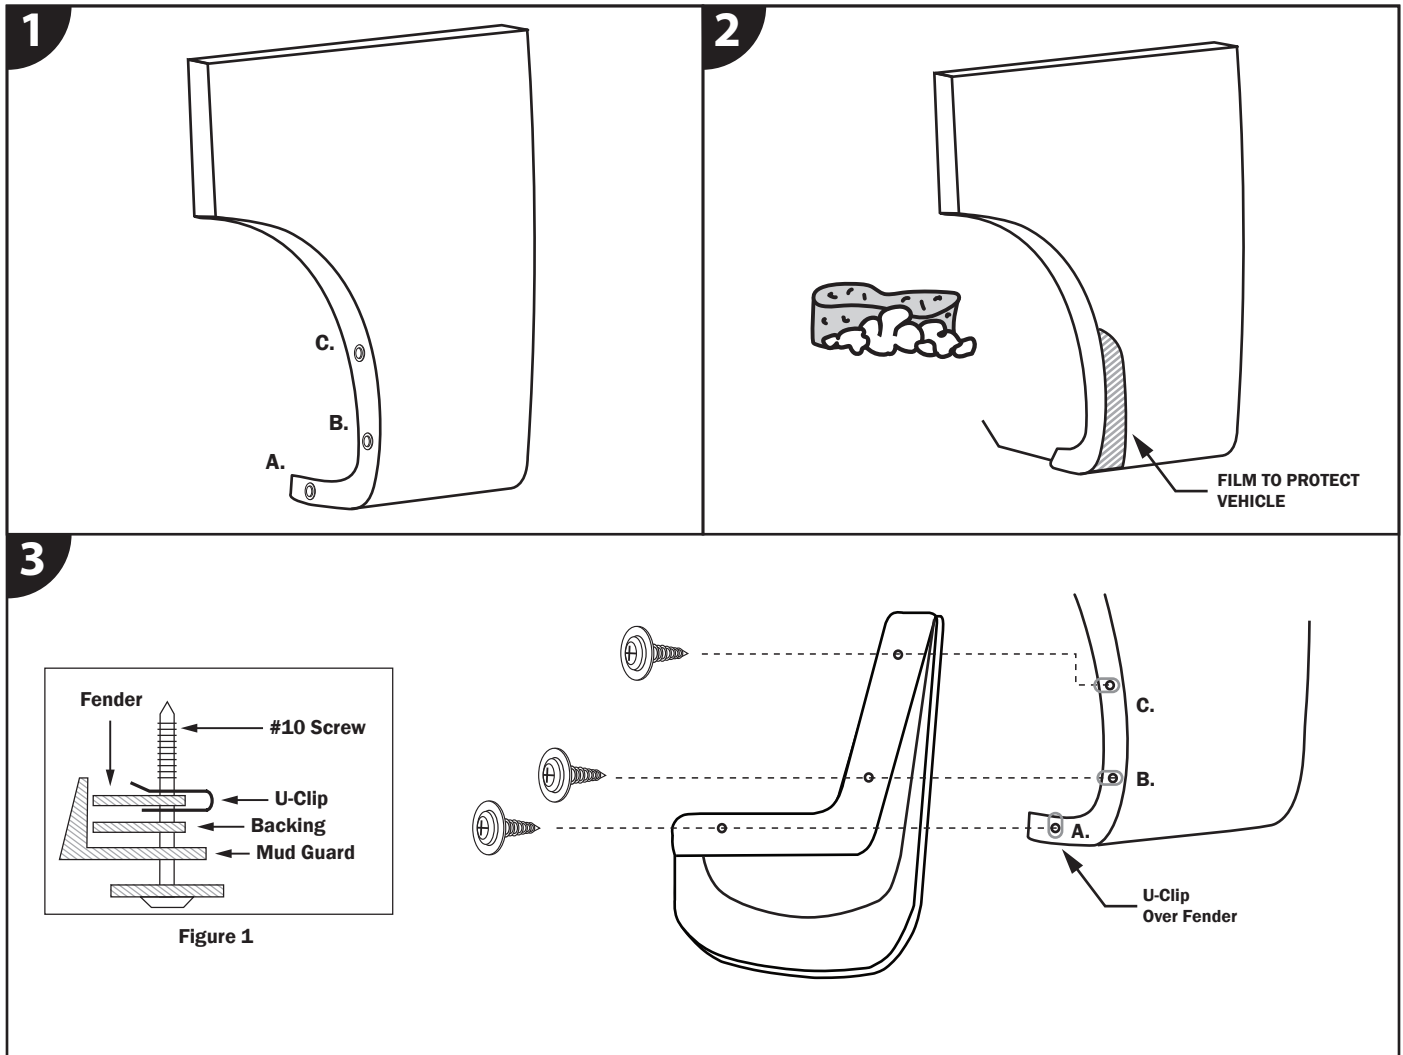

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- Locate and remove the fasteners at A, B and C. Discard fasteners.

STEP 2. Apply film to protect vehicle.

- Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

STEP 3. Install mud guards.

- Install U-Clips at location A, B and C. They will clip over the metal (see Figure 1).
- Line up mud guard so the holes in the mud guard and fender match.
- Use the #10 screws and washers to install through the mud guard and the fender.