

INSTALLATION INSTRUCTIONS



No. 940334




CUSTOM MOLDED REAR MUD GUARDS FOR JEEP CHEROKEE

Tools Needed

- Phillips head screwdriver
- Drill with 1/4" bit
- 8mm Socket

Included in Box

- Rear Mud Guards (for driver & passenger side)
- Screws (x4)
- U-Clips (x4)

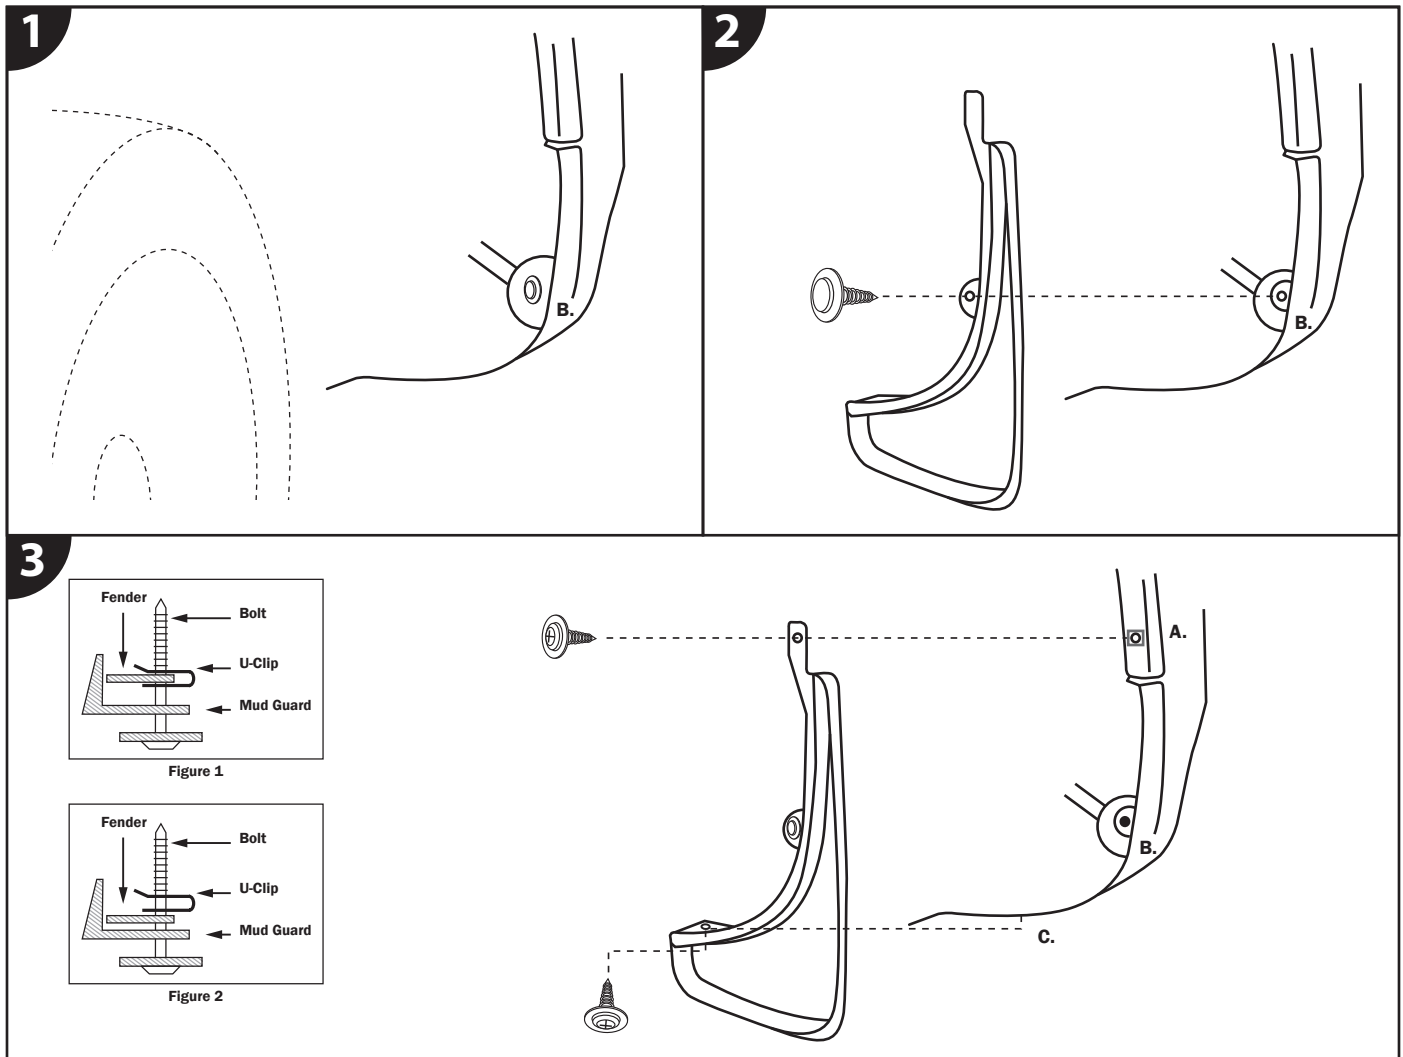

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- Remove existing fastener from location B. Save for later step.

STEP 2. Attach mud guard.

- Using existing fastener from Step 1, attach mud guard at location B.

STEP 3. Secure mud guards.

- Using mud guard as a guide, drill 1/4" hole at locations A and C (underneath).
- Install U-Clip over the newly drilled hole at location A. (Figure 1)
- Install provided Screw at location A.
- Install Screw at location C into U-Clip behind the fender. U-Clip is used as a nut. (Figure 2)