

INSTALLATION INSTRUCTIONS



No. 940336




CUSTOM MOLDED REAR MUD GUARDS FOR JEEP COMMANDER

Tools Needed

- Phillips head screwdriver
- Snips

Included in Box

- Rear Mud Guards (for driver & passenger side)
- Short Screws (x4)
- Long Screws (x2)
- U-Clip (x4)
- Small U-Clip (x2)

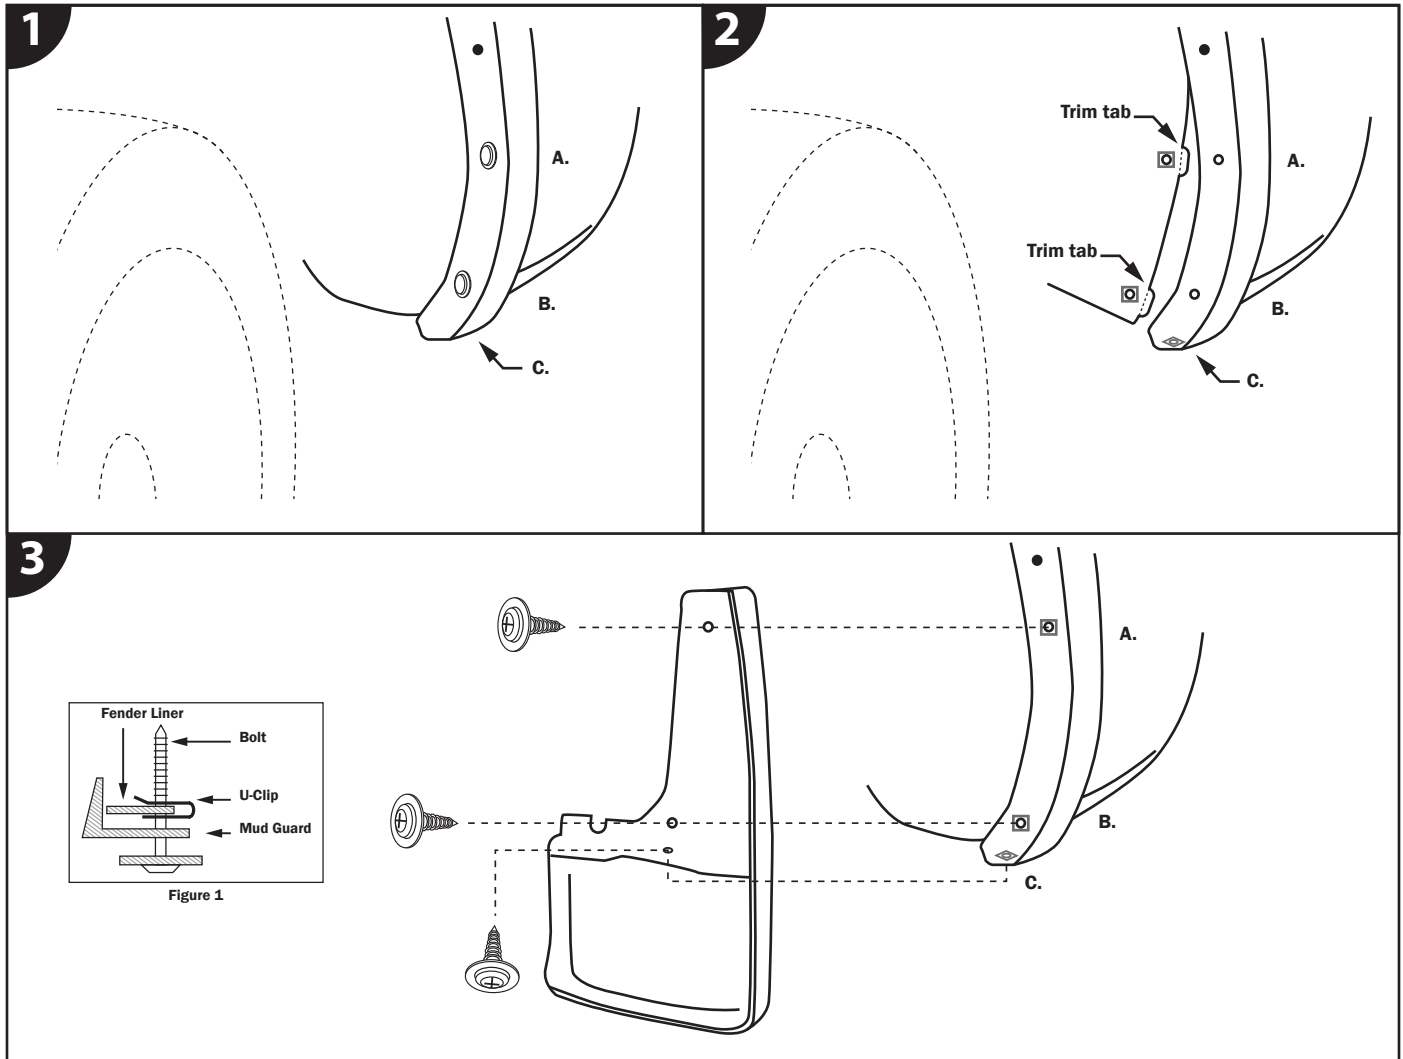

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- Remove and discard existing fasteners from locations A, B and C.

STEP 2. Install u-clips.

- Pull away fender liner to expose holes at locations A and B.
- At location A and B hold the provided U-Clips up to the holes in the fender liner and mark how much of the tab must be removed in order to install. Trim the tabs at locations at A and B. **(See Image 2)**
- Install Small U-Clip over the hole in the fender liner at location A. **(Figure 1)**
- Install U-Clip over the hole in the fender liner at location B. **(Figure 1)**
- Install U-Clip over the hole on plastic lip of fender underneath at Location C.

STEP 3. Install mud guards.

- Using provided Short Screws attach mud guard at locations A and B.
- Secure the mud guard with provided Long Screw at location C, underneath the fender.