

INSTALLATION INSTRUCTIONS



No. 940440




CUSTOM MOLDED FRONT MUD GUARDS FOR GMC TERRAIN

Tools Needed

- Phillips head screwdriver
- 8mm Socket and ratchet
- Drill with 3/32" bit

Included in Box

- Front Mud Guards (for driver & passenger side)
- Film to protect vehicle
- 3/4" Screw (x8)
- U-Clips (x8)

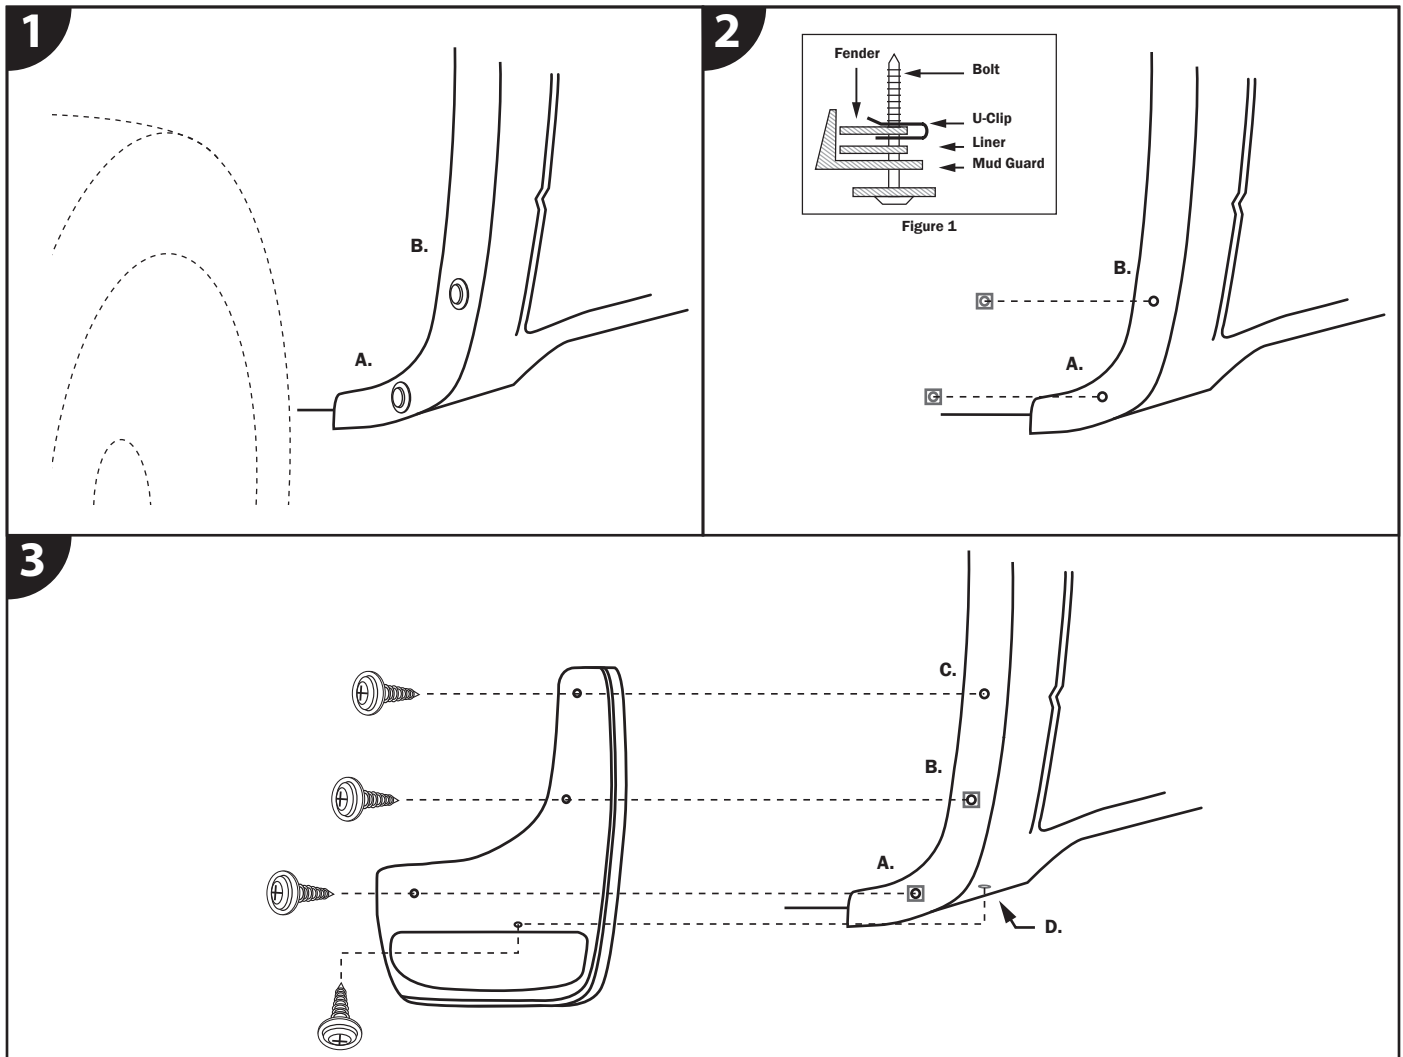

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- a. Remove and discard existing Fasteners from locations A and B.

STEP 2. Install U-Clips.

- a. Pull fender liner forward and install U-Clips over the holes at locations A and B. (Figure 1)

STEP 3. Attach mud guards.

- a. Using 3/4" Screws, attach mud guard at locations A and B.
- b. Using mud guard as a guide, drill 3/32" holes at locations C and D (underneath).
- c. Install 3/4" Screw at the new hole location C.
- d. Install 3/4" Screw at the new hole location D on underside of the fender.

Note* If needed use the remaining U-Clips over new holes at locations C and D