

# INSTALLATION INSTRUCTIONS



No. 940442




## CUSTOM MOLDED FRONT MUD GUARDS FOR SCION TC

### Tools Needed

- Phillips head screwdriver
- 10mm Socket

### Included in Box

- Front Mud Guards (for driver & passenger side)
- 19mm Screws (x2)
- U-Clips (x2)

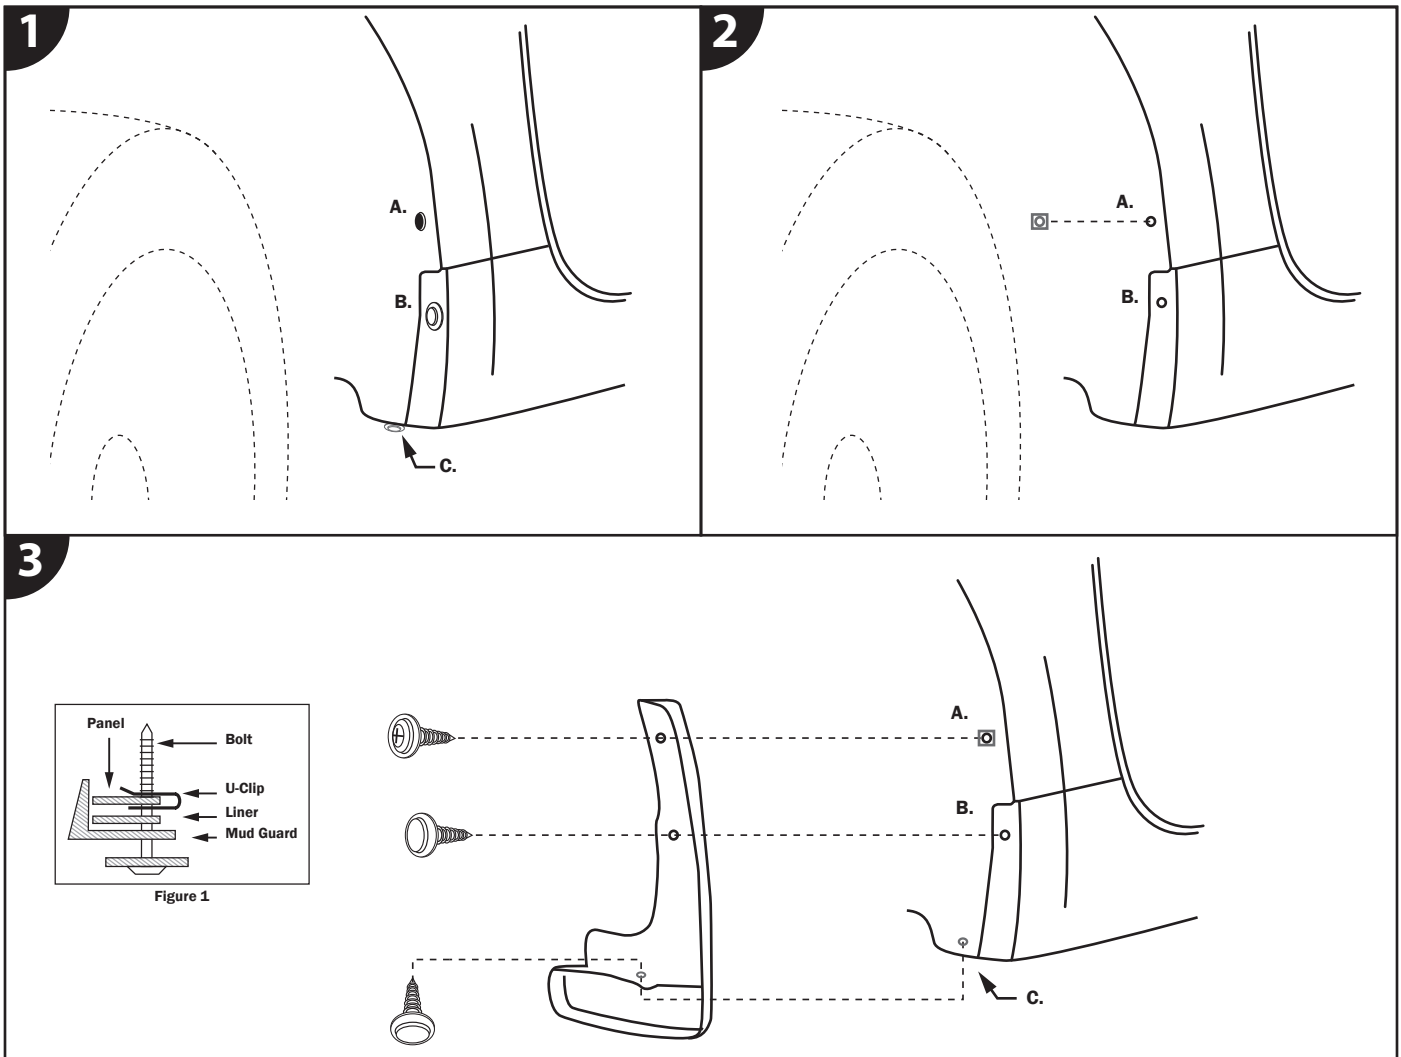

\*Repeat Steps 1-3 for Driver & Passenger Side\*

### STEP 1. Remove existing fasteners.

- a. Remove and discard existing Fastener from locations A.
- b. Remove existing Screws from locations B and C (underneath). Save for later step.

### STEP 2. Install U-Clip.

- a. Pull away fender liner and install U-Clip over the holes at location A. (Figure 1)

### STEP 3. Attach mud guard.

- a. Using the Screws from Step 1, attach mud guard at locations B and C (underneath).
- b. Install provided Screw at location A.