

INSTALLATION INSTRUCTIONS



No. 940448




CUSTOM MOLDED FRONT MUD GUARDS FOR TOYOTA HIGHLANDER

Tools Needed

- 10mm Socket
- Fastener Remover

Included in Box

- Front Mud Guards (for driver & passenger side)

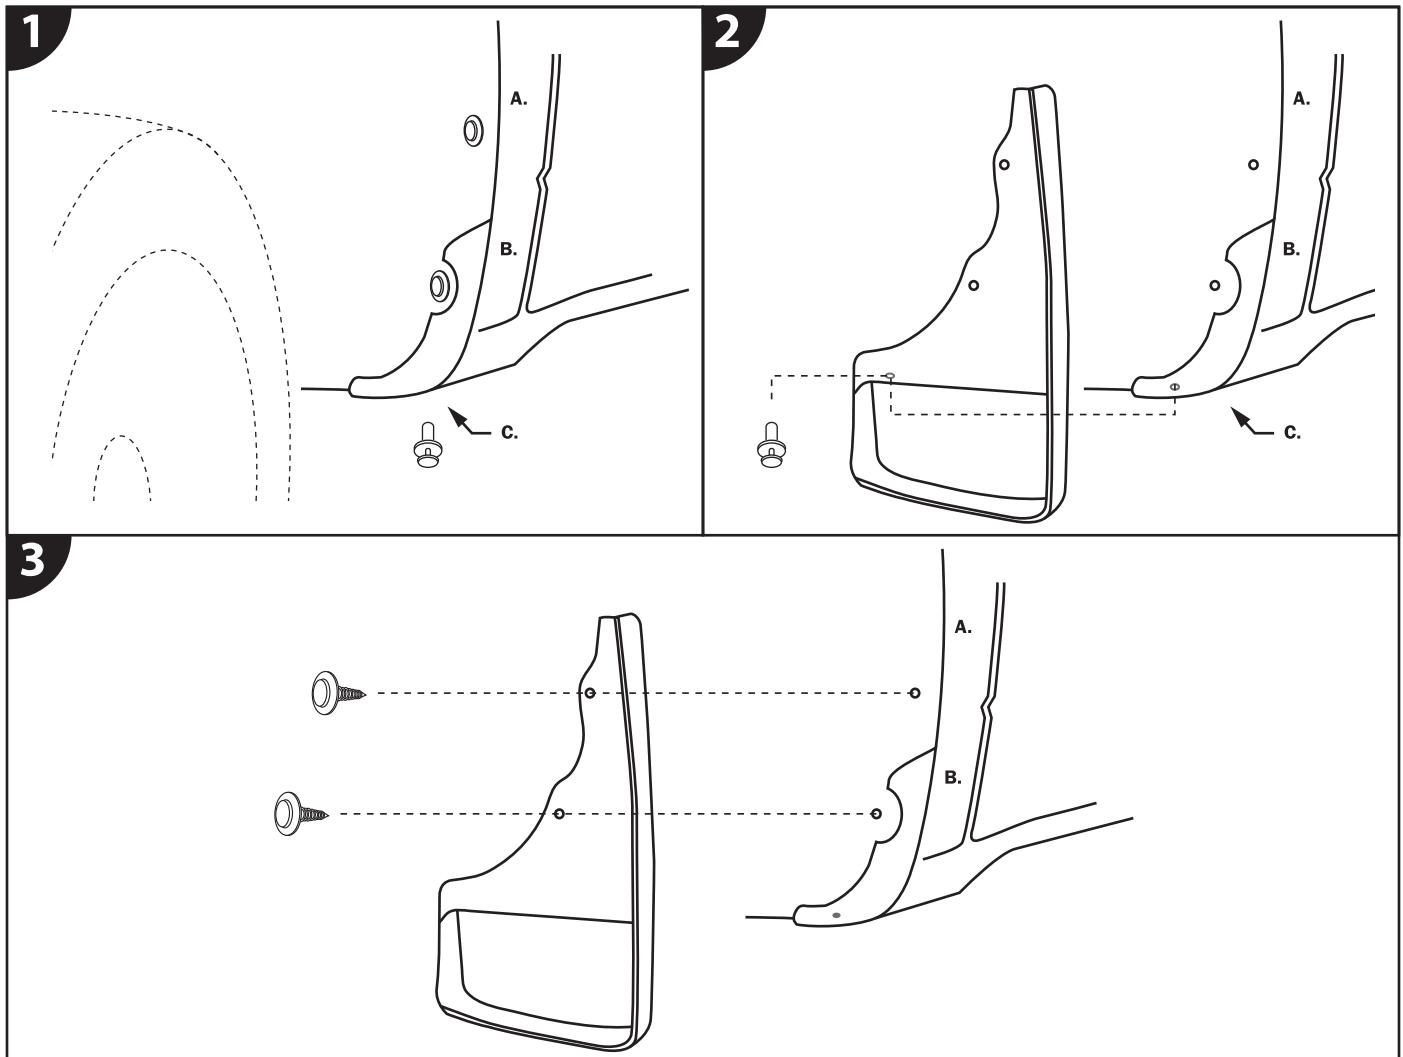

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- Remove existing Screws from locations A and B. Save for later step.
- Remove existing Fastener from location C (underneath). Save for later step.

STEP 2. Attach mud guards.

- Attach mud guard at location C using the Fastener removed in Step 1.

STEP 3. Secure mud guards.

- Install Screws from Step 1 and secure mud guard at locations A and B.

INSTALLATION INSTRUCTIONS



No. 940449




CUSTOM MOLDED REAR MUD GUARDS FOR TOYOTA HIGHLANDER

Tools Needed

- Phillips head screwdriver
- 10mm Socket

Included in Box

- Rear Mud Guards (for driver & passenger side)
- Screws (x6)
- U-Clips (x6)

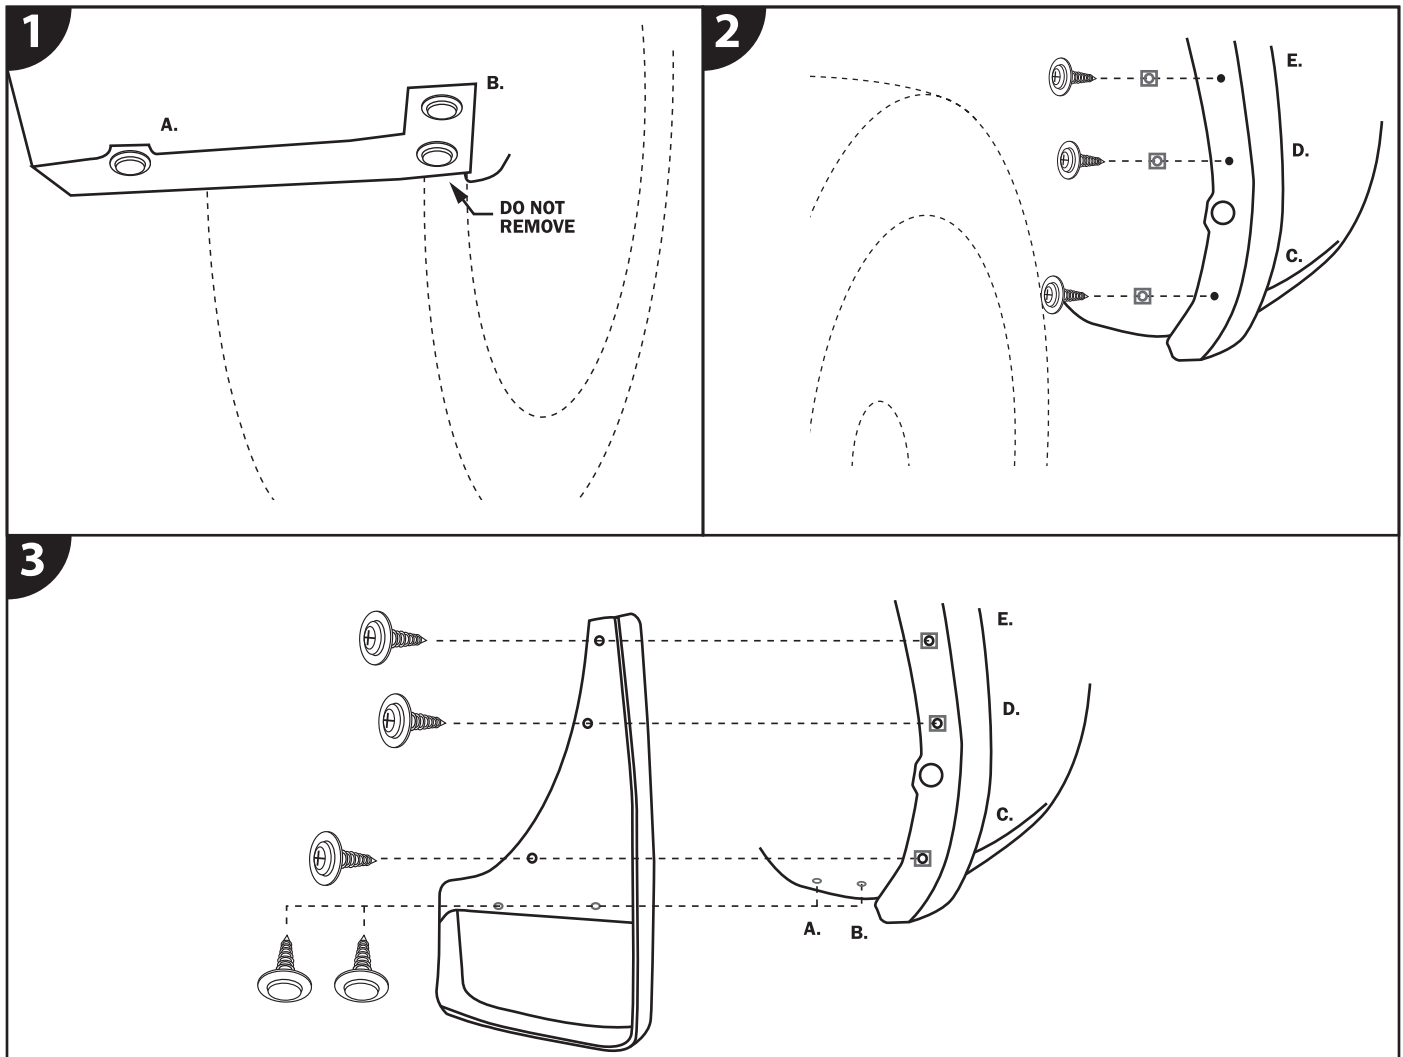

Repeat Steps 1-3 for Driver & Passenger Side

STEP 1. Remove existing fasteners.

- Remove existing Fasteners from locations A and B (underneath). Save for later step.

STEP 2. Pre-drill holes.

- Install U-Clips over the dimples in the lip of rear wheel well at locations C, D, and E.
- Pre-drill holes by installing the provided Screws into the U-Clips at locations C, D, and E. Remove and save for the next step.

STEP 3. Attach mud guard.

- Using the Fastener removed in Step 1, attach mud guard at locations A and B.
- Secure mud guard with provided Screws at locations C, D, and E.