

# INSTALLATION INSTRUCTIONS



No. 940455




## CUSTOM MOLDED FRONT MUD GUARDS FOR Ford Super Duty 250/350 without Fender Flares

### Tools Needed

- Phillips head screwdriver
- Drill with 1/8" bit
- 7/32 Socket/Driver
- Silicone (optional)

### Included in Box

- Front Mud Guards (for driver & passenger side)
- #10 Screws (x4)
- U-Clips (x4)
- Paint Protection Film

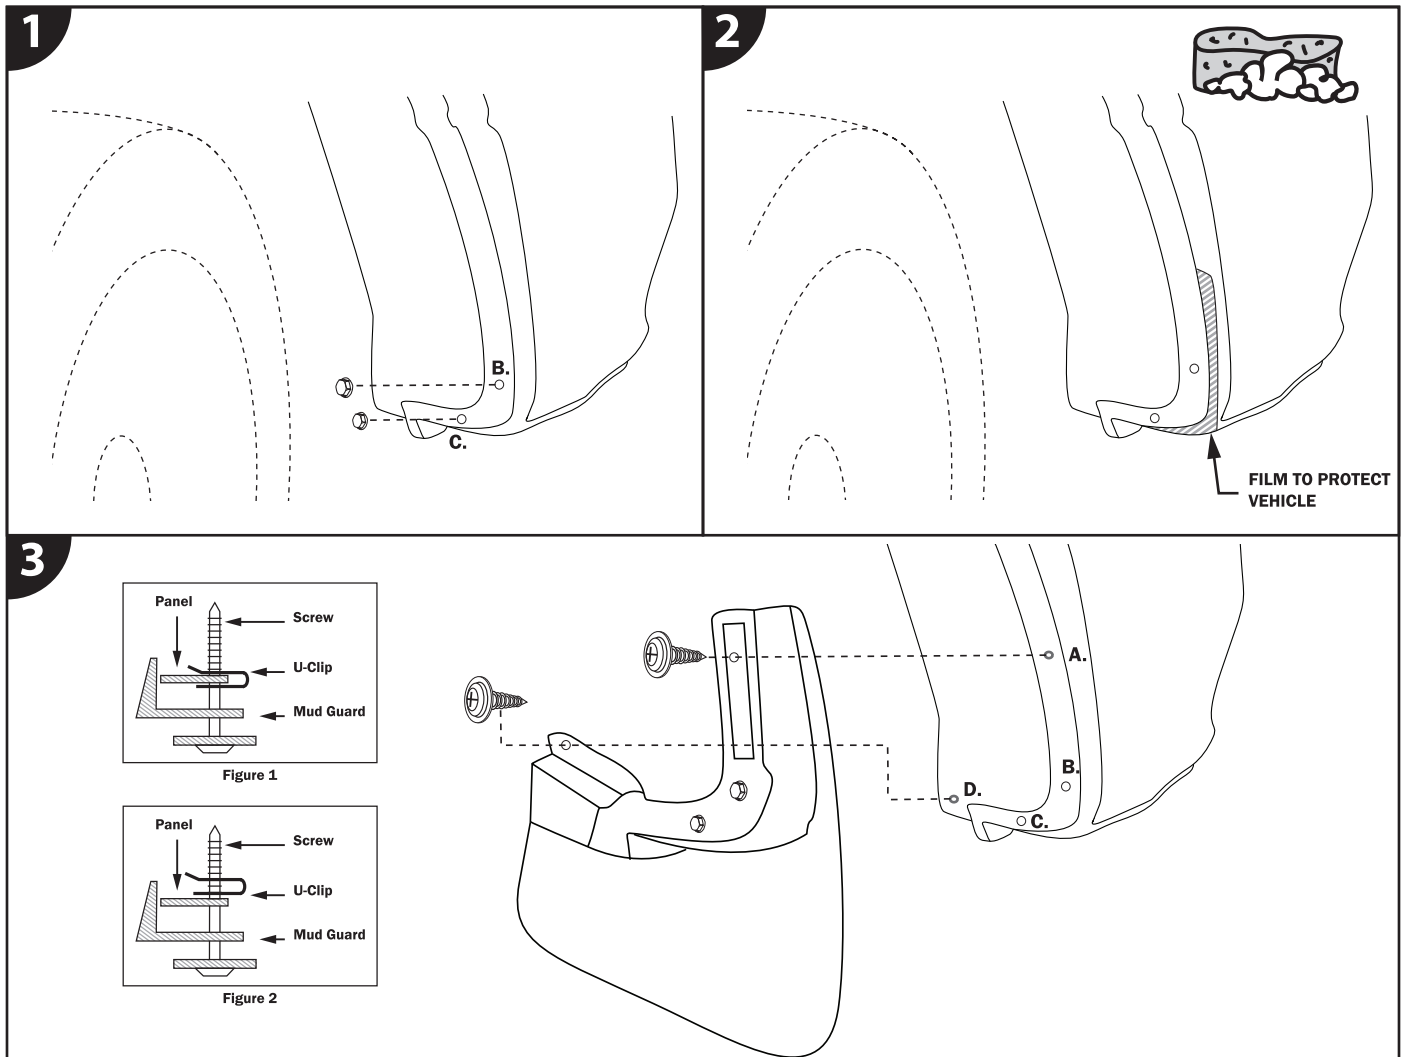

\*Repeat Steps 1-3 for Driver & Passenger Side\*

### STEP 1. Remove existing fasteners.

- Remove existing 7/32 fasteners from locations B and C. Save for later step.

### STEP 2. Apply film to protect vehicle.

- Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 3. Secure mud guards.

- Peel backing from adhesive tape.
- Using the 7/32 fasteners from Step 1, attach mud guard at locations B and C.
- Using the mud guard as a guide, drill 1/8" holes at locations A and D.
  - Location A is drilling into the vehicle.
- Slide U-Clip over fender of vehicle at location A.
  - Optional: Use a dab of silicone at location A after sliding on U-Clip to aid in prevention of rust.
- Install #10 screw at location A. See Figure 1.
- Install #10 screw at location D into U-Clip. U-Clip is used as a nut. See Figure 2.

# INSTALLATION INSTRUCTIONS



No. 940459




## CUSTOM MOLDED REAR MUD GUARDS FOR Ford Super Duty 250/350 without Fender Flares

### Tools Needed

- Phillips head screwdriver
- Drill with 1/8" bit
- Side Cuts
- Silicone (optional)

### Included in Box

- Rear Mud Guards (for driver & passenger side)
- #10 Screws (x6)
- U-Clips (x6)
- Paint Protection Film

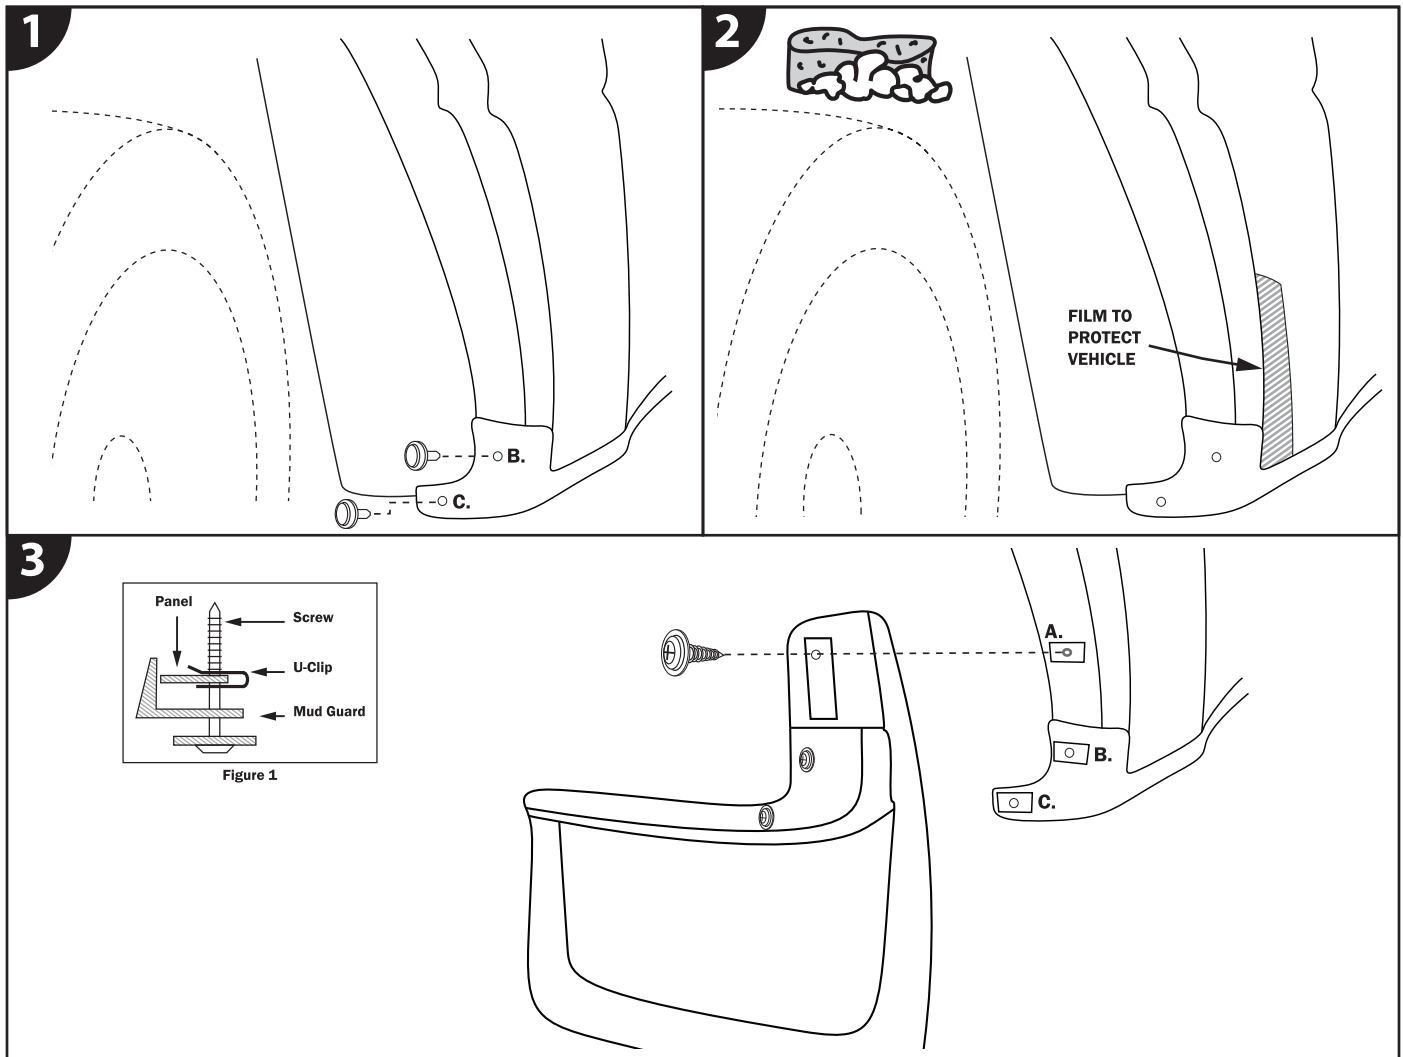

\*Repeat Steps 1-3 for Driver & Passenger Side\*

### STEP 1. Remove existing fasteners.

- Using side cuts, remove existing fasteners from locations B and C. Discard these fasteners.

### STEP 2. Apply film to protect vehicle.

- Using a clean cloth or wet alcohol pad, clean the area on the fender where the film (to protect vehicle) will be placed.
- Use soapy water to wet film, fender, and fingers for a wet film installation. Apply film in location shown in diagram, with adhesive side of film towards the vehicle. Apply pressure and smooth out film with a squeegee or sponge and allow to dry.

### STEP 3. Secure mud guards.

- Peel backing from adhesive tape.
- Slip U-Clips over fender at locations B and C. Install #10 screws to locations B and C into U-Clip. See Figure 1.
- Using the mud guard as a guide, drill a 1/8" hole at location A.
  - Location A is drilling into the vehicle.
- Slip U-Clip over fender at location A.
  - Optional: Use a dab of silicone at location A after sliding on U-Clip to aid in prevention of rust. Install #10 screw to location A into U-Clip. See Figure 1.